



THIS CAMCORDER IS MANUFACTURED BY:



VIDEOCÁMARA FABRICADA POR:



*Samsung Electronics' Internet Home Page

United Kingdom http://www.samsungelectronics.co.uk

France http://www.samsung.fr

Australia http://www.samsung.com/au
Germany http://www.samsung.de
Sweden http://www.samsung.se
Poland http://www.samsung.com/pl
Italia http://www.samsung.it
Spain http://www.samsung.es

*Página Web en Internet de Samsung Electronics

United Kingdom http://www.samsungelectronics.co.uk

France http://www.samsung.fr

Australia http://www.samsung.com/au Germany http://www.samsung.de Sweden http://www.samsung.se Poland http://www.samsung.com/pl

Italia http://www.samsung.it Spain http://www.samsung.es



Digital Video Camcorder



VP-D351(i)/D352(i)/ D353(i)/D354(i)/ D355(i) Mini Digital Video Cassette


VP-D351(i)/D352(i)/ D353(i)/D354(i)/ D355(i)

Videocámara digital

AF Auto Focus

CCD Charge Coupled Device

LCD Liquid Crystal Display

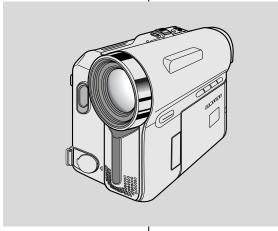

AF Enfoque automático

CCD Dispositivo acoplado

porcarga

LCD Pantalla de cristal líquido

Owner's Instruction Book

Before operating the unit, please read this Instruction Book thoroughly, and retain it for future reference.



Manual de instrucciones

Antes de utilizar la cámara lea detenidamente este manual de instrucciones y consérvelo para consultas posteriores

This product meets the intent of Directive 89/336 CEE, 73/23 CEE, 93/68 CEE.



Este producto cumple con las normas CEE 89/336, CEE 73/23 y CEE93/68.

ENGLISH

Contents

Notes and Safety Instructions 6
Getting to Know Your Camcorder 11
Features 11
Accessories Supplied with Camcorder12
Front & Left View13
Left Side View
Right & Top View
Remote Control (VP-D353(i)/D354(i)/D355(i) only)17
Preparation 18
Adjusting the Hand Strap18
Hand Strap 18
When You carry Your Camcorder18
Attaching the Lens Cover18
Lithium Battery Installation
Battery Installation for the Internal Clock
Connecting a Power Source
To use the AC Power Adapter and DC Cable20
To select the Camcorder Mode (VP-D353(i)/D354(i)/D355(i) only)20 Using the Lithium Ion Battery Pack21
Using the Lithium Ion Battery Pack21
Charging the Lithium Ion Battery Pack21 Table of continuous Recording Time based on Model and Battery Type22
Battery Level Display23
OSD (On Screen Display in Camera/Player Modes)24
OSD (On Screen Display in M.Cam/M.Player Modes)
(VP-D353(i)/D354(i)/D355(i) only)25
Turning the OSD (On Screen Display) On/Off25
System Menu Setting26
Selecting the OSD Language26
Setting the Clock
Setting the Wireless Remote Control Acceptance (Remote) (VP-D353(i)/D354(i)/D355(i) only)28
Setting the Beep Sound
Setting the Shutter Sound (VP-D353(i)/D354(i)/D355(i) only)30
Viewing the Demonstration31
Display Menu Setting 32
Adjusting the LCD Screen32
Displaying the Date/Time33
Setting the TV Display34

Notas e instrucciones de seguridad	. 6
Introducción a la videocámara	11
Características Accesorios incluidos con la videocámara. Vistas frontal y lateral izquierda. Vistas superior y lateral derecha. Vistas posterior e inferior. Mando a distancia (Sólo VP-D353(i)/D354(i)/D355(i)).	12 13 14 15
Preparación	18
Ajuste de la empuñadura Empuñadura Transporte de la videocámara Colocación de la tapa del objetivo Instalación de la pila de litio Instalación de la pila para el reloj interno Instalación de la pila del mando a distancia (Sólo VP-D353(i)/D354(i)/D355(i)) Conexión a una fuente de alimentación Utilización del adaptador de CA y del cable de CC Selección de la modalidad de videocámara (Sólo VP-D353(i)/D354(i)/D355(i)) Utilización de la batería de iones de litio Cómo cargar la batería de iones de litio Tabla de tiempos de grabación continuada según el modelo y el tipo de batería. Indicador de carga de la batería OSD (presentación en pantalla en las modalidades Camera/Player) OSD (presentación en pantalla en las modalidades M.Cam/M.Player) (Sólo VP-D353(i)/D354(i)/D355(i)) Encendido / apagado de OSD (presentación en pantalla)	. 18 18 19 19 20 20 21 21 22 23 24
Ajuste del menú System <sistema></sistema>	
Selección del idioma de la OSD	27 28 29 30
Ajuste del menú Display <pantalla></pantalla>	
Ajuste de la pantalla LCD	33

ENGLISH

Contents

Basic Recording	
Using the Viewfinder	35
Adjusting the Focus	
Inserting and Ejecting a Cassette	
Hints for Stable Image Recording	
Recording with the LCD Screen	
Recording with the Viewfinder	
Various Recording Techniques	
Making your First Recording	39
Using EASY.Q Mode (for Beginners)	
Record Search (REC SEARCH)	
Setting the Zero Memory (VP-D353(i)/D354(i)/D355(i) only)	
Self Record using the Remote Control (VP-D353(i)/D354(i)/D355(i) only)	43
Zooming In and Out	
Using the Tele Macro	
Using the Fade In and Out	45
To Start Recording	
To Stop Recording (use Fade In/Fade Out)	45
Using Back Light Compensation Mode (BLC)	
Using the Color Nite Shutter	47
Using the Color Nite Shutter with LED Light (VP-D353(i)/D354(i)/D355(i) only) Nite Pix (0 lux recording)	48
Nito Div (0 luy recording)	40
NIE FIX IV IUX IEGOIOIIIO)	49
Power Nite Pix	49 50
Power Nite Pix	50
Power Nite Pix	50 . <i>51</i>
Power Nite Pix	50 . 51 51
Power Nite Pix	50 . 51 51
Power Nite Pix	50 . 51 51 51
Power Nite Pix	50 . 51 51 53 54
Power Nite Pix	50 . 51 51 53 54 55
Power Nite Pix	50 . 51 51 53 54 55
Power Nite Pix	50 . 51 51 53 54 55 56
Power Nite Pix	50 . 51 51 53 54 55 56
Power Nite Pix	50 . 51 51 53 54 55 56 57
Power Nite Pix	50 51 51 53 54 55 56 57 57
Power Nite Pix	50 . 51 51 53 54 55 56 57 57 58
Power Nite Pix	50 51 51 53 54 55 56 57 57 58 58
Power Nite Pix	50 51 51 53 54 55 56 57 57 58 58
Power Nite Pix	50 . 51 51 53 54 55 56 57 58 58 58
Power Nite Pix	50 51 51 53 54 55 56 57 58 58 58 59
Power Nite Pix	50
Power Nite Pix	50 . 51 51 53 54 55 56 57 58 58 58 59 60
Power Nite Pix	50 . 5151535455565758585859606162

Grabación básica	3 5
Uso del Visor	.35
Ajuste del enfoque	
Introducción y expulsión de la cinta	
Consejos para la grabación estable de imágenes	
Grabación utilizando la pantalla LCD	
Grabación utilizando el visor	
Técnicas diversas de grabación	
Primera grabación	.39
Utilización de la modalidad EASY.Q (para principiantes)	
Búsqueda de grabación (REC SEARCH)	.4
Ajuste de memoria cero (Sólo VP-D353(i)/D354(i)/D355(i))	.42
Acercamiento y alejamiento de las imágenes	
Utilización de la Macro telescópica	
Utilización de aparición y desaparición gradual	-+. ۱ <u>۵</u> ۰
Comienzo de la grabación	4.
Detención de la grabación (con la función Fade In/Fade Out)	.45
Utilización de la modalidad de compensación de la luz de fondo (BLC)	.46
Utilización del obturador nocturno de color	.47
Utilización del obturador nocturno de color con el foco de la cámara (Sólo VP-D353(i)/D354(i)/D355(i)) .	.48
Nite Pix (grabación con 0 lux)	
Power Nite Pix	.50
Grabación avanzada	51
Utilización de las distintas funciones	.51
Ajustes de las opciones de menú	.51
Disponibilidad de funciones en cada modalidad	.53
Selección de la modalidad de grabación	.54
Selección de modalidad de audio	.55
Corte de ruido del viento (Wind Cut <antiviento>)</antiviento>	.56
Ajuste de la exposición y la velocidad del obturador	.57
Velocidades del obturador recomendadas al grabar	.57
Enfoque autom/Enfoque manual	
Enfoque automático	
Enfoque manual	
Ajuste del balance de blanco	
Utilización del menú rápido: White Balance <balance blanco="" de=""></balance>	
Ajuste del Estabilizador digital de la imagen (DIS)	ا O.
Modalidade de exploración automática programada (Program AE)	.02
Ajustes de Program AE	٠٥٠. ۾

ENGLISH

Contents

Applying Digital Effects Selecting the Digital Effects Zooming In and Out with Digital Zoom Setting the Digital Zoom Photo Image Recording Searching for a Photo Image	66 67 67
Playback	69
Playing Back a Tape You have recorded on the LCD Screen Adjusting the LCD Bright/Colour during Playback Controlling Sound from the Speaker Tape Playback Playback on the LCD Screen Playback on a TV Monitor Connecting to a TV which has Audio/Video Input Jacks Connecting to a TV which has no Audio and Video Input Jacks Playback Various Functions while in Player Mode Playback Pause Picture Search (Forward/Reverse) Slow Playback (Forward/Reverse) (VP-D353(i)/D354(i)/D355(i) only) Frame Advance (To play back frame by frame) (VP-D353(i)/D354(i)/D355(i) only) X2 Playback (Forward/Reverse) (VP-D353(i)/D354(i)/D355(i) only) Reverse Playback (VP-D353(i)/D354(i)/D355(i) only) Zooming during Playback (PB ZOOM) AV In/Out (VP-D351i/D352i/D353i/D354(i)/D355(i) only) Dubbing Sound Dubbed Audio Playback	6970717171727373737474747577
IEEE 1394 Data Transfer	
USB Interface (VP-D352(i)/D353(i)/D354(i)/D355(i) only)	<i>81</i>
Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)	. 87
Memory Stick (Optional Accessory)	87 88 89
Selecting the Camcorder Mode	89 90
Using Quick Menu: Memory Type	90

Aplicación del efecto digital	66 67 68
Reproducción	. 69
Reproducción en la pantalla LCD de una cinta grabada Ajuste del brillo y colour de la pantalla LCD durante la reproducción Control de sonido desde el altavoz Reproducción de una cinta Reproducción en la pantalla LCD Reproducción en un monitor de televisión Conexión a un televisor que dispone de conectores de audio/vídeo Conexión a un televisor que no dispone de conectores de audio/vídeo Reproducción Diferentes funciones en la modalidad Player Pausa en la reproducción Búsqueda de imágenes (Adelante/Atrás) Reproducción lenta (Adelante/Atrás) (Sólo VP-D353(i)/D354(i)/D355(i)) Avance por fotogramas (reproducción fotograma a fotograma) (Sólo VP-D353(i)/D354(i)/D355(i)) Reproducción X2 (Adelante/Atrás) (Sólo VP-D353(i)/D354(i)/D355(i)) Reproducción hacia atrás (Sólo VP-D353(i)/D354(i)/D355(i)) Aplicación del zoom durante la reproducción (PB ZOOM) Entrada/salida AV (Sólo VP-D351i/D352i/D353i/D354i/D355i) Grabación de sonido adicional (Sólo VP-D353(i)/D354(i)/D355(i)) Reproducción de una cinta con audio mezclado	697071717172737373737474757677
Transferencia de datos IEEE 1394	. <i>79</i>
Interfaz USB (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))	. 81
Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i)).	. 87
Memory Stick (Accesorio opcional) Funciones del Memory Stick Introducción y extracción de la tarjeta de memoria Estructura de carpetas y archivos en la tarjeta de memoria Formato de imágenes Selección de la modalidad de videocámara Selección de la memoria incorporada (Sólo VP-D354(i)/D355(i))	87 89 89 89
Utilización del menú rápido: Memory Type <tipo de="" memoria=""></tipo>	

ENGLISH

ESPAÑOL

Contents

Select the Image Quality Select the Image Quality Number of Images on the Memory Card Using Quick Menu: Photo Quality Memory File Number	.91 .92 .93 .94 .95 .95 .95 .96 .97 .98 .99 100 102 102 103 104 105 106
PictBridge™ (VP-D353(i)/D354(i)/355(i) only)1	10
Maintenance 1	12
After Finishing a Recording Cleaning and Maintaining the Camcorder Using Your Camcorder Abroad	113
Troubleshooting 1	15
Specifications 1	18
Index	19

Selección de la calidad de imagen	91
Selección de la calidad de imagen	91
Número de imágenes en la tarjeta de memoria	91
Utilización del menú rápido: Photo Quality < Calidad Foto >	92
Número de archivos en memoria	93
Toma de fotos	94
Visualización de imágenes fijas	95
Visionado de imágenes una a una	
Visionado en presentación	95
Visionado de varias imágenes fijas en pantalla	96
Protección contra borrado accidental	97
Utilización del menú rápido: Protect < Protección>	98
Supresión de imágenes fijas y secuencias	
Utilización del menú rápido: Delete <eliminar></eliminar>	100
Formato de la tarjeta de memoria	
Grabación de MPEG	
Grabación de las imágenes capturadas por la cámara como	
una película en la tarjeta de memoria	102
Reproducción de MPEG	103
Utilización del menú rápido: M.Play Select <selec.m.play></selec.m.play>	104
Grabación de una imagen de una cinta como imagen fija	
Copia de imágenes fijas de una cinta en la tarjeta de memoria	106
Copy to <copiar a=""> (Copia archivos desde la tarjeta de memoria</copiar>	
a una memoria incorporada) (Sólo VP-D354(i)/D355(i))	107
Marcado de imágenes para imprimir	108
Utilización del menú rápido: Print Mark < Marcado de imágenes>	109
· ·	
PictBridge™ (Sólo VP-D353(i)/D354(i)/355(i))	110
Mantenimiento	112
Tras finalizar una grabación	112
Limpieza y mantenimiento de la videocámara	
Utilización de la videocámara en el extranjero	114
Solución de problemas	115
FaraiCariana (farian	110
Especificaciones técnicas	118
Índice alfabético	119


Notes and Safety Instructions

Notes regarding the Rotation of the LCD Screen

Please rotate the LCD screen carefully as illustrated.

Over rotation may cause damage to the inside of the hinge that connects the LCD screen to the Camcorder.

- 1. LCD screen closed.
- 2. Standard recording using the LCD screen.
 - Open the LCD screen with your finger.
- 3. Recording when looking at the LCD screen from the top.
- 4. Recording when looking at the LCD screen from the front.
- 5. Recording when looking at the LCD screen from the left.
- 6. Recording with the LCD screen closed.

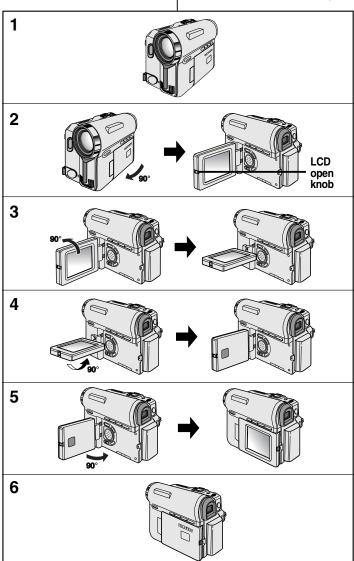

Notas e instrucciones de seguridad

Notas referentes al giro de la pantalla LCD

Gire cuidadosamente la pantalla como se indica en la figura.

Si se gira demasiado se puede estropear la bisagra interior que la une a la videocámara.

- 1. Pantalla LCD cerrada.
- 2. Grabación estándar empleando la pantalla LCD.
 - Abra la pantalla LCD con los dedos.
- 3. Grabación mirando la pantalla LCD desde arriba.
- 4. Grabación mirando la pantalla LCD desde el frente.
- 5. Grabación mirando la pantalla LCD desde la izquierda.
- 6. Grabación con la pantalla LCD cerrada.

Notes and Safety Instructions

Notices regarding Copyright (VP-D351i/D352i/D353i/D354i/D355i only)

Television programmes, video tapes, DVD titles, films, and other programme materials may be copyrighted.

Unauthorised copying of copyrighted material may be against the law. All the trade names and registered trademarks mentioned in this manual or other documentation provided with your Samsung product are trademarks or registered trademarks of their respective holders.

Notes regarding Moisture Condensation

 A sudden rise in atmospheric temperature may cause condensation to form inside the Camcorder.

for example:

- When you move the Camcorder from a cold location to a warm location (e.g. from outside to inside during winter.)
- When you move the Camcorder from a cool location to a hot location (e.g. from inside to outside during the summer.)
- 2. If the (DEW) protection feature is activated, leave the Camcorder for at least two hours in a dry, warm room with the cassette compartment opened and the Battery pack removed.

Notes regarding Camcorder

- 1. Do not leave the Camcorder exposed to high temperatures (above 60°C or 140°F).
 - For example, in a parked car in the sun or exposed to direct sunlight.
- Do not let the Camcorder get wet. Keep the Camcorder away from rain, sea water, and any other form of moisture. If the Camcorder gets wet, it may get damaged. Sometimes a malfunction due to exposure to liquids cannot be repaired.

Notas e instrucciones de seguridad

Notas referentes a los derechos de reproducción (Sólo VP-D351i/D352i/D353i/D354i/D355i)

Es probable que los programas de televisión, las cintas de vídeo, los DVD, las películas y otros materiales audiovisuales tengan registrados sus derechos de reproducción.

La copia no autorizada de material protegido por dichos derechos puede quebrantar la ley.

Todos los nombres de marcas y marcas comerciales registradas mencionadas en este manual o el resto de documentación facilitada con el producto Samsung son marcas comerciales o marcas registradas de sus respectivos propietarios.

Notas referentes a la condensación de humedad

1. Una subida repentina de la temperatura puede producir condensación en el interior de la videocámara.

Por ejemplo:

- Cuando se traslada la videocámara de un sitio frío a uno más cálido (por ejemplo, de un espacio exterior a uno interior en invierno).
- Cuando se traslada la videocámara de un sitio templado a uno caliente (por ejemplo, de un espacio interior a uno exterior en verano).
- 2. Si el dispositivo de protección contra humedad (DEW) está activado, abra el compartimento de la cinta, retire la batería y deje la videocámara durante al menos dos horas en un lugar seco y templado.

Notas referentes a la videocámara

- No deje la videocámara expuesta a temperaturas altas (más de 60°C o 140°F).
 - Por ejemplo, en un coche aparcado al sol o expuesta directamente a la luz del sol.
- No permita que la videocámara se moje. Mantenga la videocámara alejada de la lluvia, del agua de mar y de cualquier otro tipo de humedad. Si la videocámara se moja puede estropearse. En algunas ocasiones, los daños causados por líquidos no pueden repararse.



Notes and Safety Instructions

Notes regarding the Battery Pack

- It is recommended to use original battery pack that is available at SAMSUNG service centre.
- Make sure that the Battery pack is fully charged before starting to record.
- To preserve battery power, keep your Camcorder turned off when you are not operating it.
- If your Camcorder is in CAMERA mode, and it is left in STBY mode without being operated for more than 5 minutes with a tape inserted, it will automatically turn itself off to protect against unnecessary battery discharge.
- Make sure that the Battery pack is fitted firmly into place.
 Do not drop the Battery pack. Dropping the Battery pack may damage it.
- A brand new Battery pack is not charged.
 Before using the Battery pack, you need to charge it completely.
- Fully discharging a Lithium-lon battery damages the internal cells.
 The Battery pack may be prone to leakage when fully discharged.

When the battery reaches the end of its life, please contact your local dealer. The batteries have to be dealt with as chemical waste.

Notes regarding the Video Head Cleaning

- To ensure normal recording and a clear picture, clean the video heads regularly.
 - If a square block-shape distorts playback, or only a blue screen is displayed, the video heads may be dirty.
 - If this happens, clean the video heads with a dry type cleaning cassette.
- Do not use a wet-type cleaning cassette. It may damage the video heads.

Notas e instrucciones de seguridad

Notas referentes a la batería

- Se recomienda utilizar la batería original que está disponible en el centro de servicio técnico de SAMSUNG.
- Asegúrese de que la batería esté completamente cargada antes de empezar a grabar.
- Para ahorrar energía de la batería mantenga la videocámara apagada cuando no se esté usando.
- Si la videocámara está en la modalidad CAMERA con una cinta colocada y se deja en la modalidad STBY (espera) sin hacerla funcionar durante más de cinco minutos, se apagará automáticamente para ahorrar energía de la batería.
- Asegúrese de que la batería esté colocada correctamente en su sitio.
 No deje caer la batería. Si se llegara a caer podría estropearse.
- Las baterías nuevas no vienen cargadas.
 Antes de utilizar la batería es necesario cargarla por completo.
- Descargar completamente la batería de iones de litio daña las células internas. La batería puede ser más propensa a fugas cuando se deja totalmente descargada.

Cuando se termine la vida útil de la batería, póngase en contacto con su proveedor habitual.

Para desechar las baterías gastadas, éstas deben tratarse como residuos químicos.

Notas referentes a la limpieza de los cabezales de vídeo

- Para asegurarse de que obtendrá una grabación normal y una imagen clara es necesario limpiar regularmente los cabezales de vídeo.
 - Si durante la reproducción hay un cuadrado que deforma la imagen o si sólo se ve una pantalla azul, es posible que los cabezales de vídeo estén sucios.
 - En caso de ser así, límpielos con una cinta de limpieza en seco.
- No utilice una cinta de limpieza que contenga líquidos, podría dañar los cabezales del vídeo.

Notes and Safety Instructions

Note regarding the Lens

Do not film with the camera lens pointing directly at the sun. Direct sunlight can damage the CCD(Charge Coupled Device).

Notes regarding electronic Viewfinder

- 1. Do not position the Camcorder such that the Viewfinder is pointing towards the sun.
 - Direct sunlight can damage the inside of the Viewfinder. Be careful when placing the Camcorder under sunlight or near a window exposed to sunlight.
- 2. Do not pick up the Camcorder by holding the Viewfinder.
- 3. Applying excessive force to the Viewfinder may damage it.

Notes regarding 'Record' or 'Playback' Using the LCD Screen

 The LCD screen has been manufactured using high precision technology. However, there may be tiny dots (red, blue or green in colour) that appear on the LCD screen. These dots are normal and do not affect the recorded picture in any way.



- When you use the LCD screen under direct sunlight or outdoors, it maybe difficult to see the picture clearly. If this occurs, we recommend using the Viewfinder.
- 3. Direct sunlight can damage the LCD screen.

Notes regarding the Hand Strap

- To ensure a steady picture while filming, check that the hand strap is properly adjusted.
- Do not force your hand into the hand strap as you could damage it.



Notas e instrucciones de seguridad

Nota referente al objetivo

No grabe con el objetivo de la cámara dirigido directamente hacia el sol. La acción de la luz directa del sol podría estropear el CCD (dispositivo acoplado por carga).

Notas referentes al visor electrónico

- 1. No ponga la videocámara de manera que el sol incida directamente en el visor.
 - La acción directa del sol sobre el visor podría estropear su interior. Tenga cuidado cuando ponga la videocámara bajo el sol o cerca de una ventana expuesta a la acción del sol.
- 2. No sujete la videocámara por el visor.
- 3. La aplicación de fuerza excesiva en el visor puede dañarlo.

Notas referentes a la grabación o a la reproducción utilizando la pantalla LCD



- Para la fabricación de la pantalla LCD se ha empleado tecnología de alta precisión. Sin embargo, pueden aparecer en ella puntitos rojos, azules o verdes.
 - Esta situación es normal y no afecta en modo alguno a la grabación.
- 2. Si se emplea la pantalla LCD bajo la acción directa del sol o en exteriores, es probable que resulte difícil ver la imagen con claridad.
 - Si esto sucede, es recomendable utilizar el visor.
- 3. La acción directa del sol puede estropear la pantalla LCD.

Notas referentes a la empuñadura

- Para obtener una imagen estable durante la grabación, asegúrese de que la empuñadura está debidamente ajustada.
- Al introducir la mano tenga cuidado de no forzar la empuñadura, pues podría estropearse.

Notes and Safety Instructions

Precaution regarding the Lithium Battery

- 1. The Lithium battery maintains the clock function and user settings; even if the Battery pack or AC adapter is removed.
- 2. The Lithium battery for the Camcorder lasts about 6 months under normal operation from time of installation.
- When the Lithium battery becomes weak or dead, the Date/Time indicator will display 00:00 1.JAN.2005 when you set the Date/Time to on.
 - When this occurs, replace the Lithium battery with a new one (type CR2025).
- 4. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Warning: Keep the Lithium battery out of reach of children. Should a battery be swallowed, consult a doctor immediately.

Servicing

Do not attempt to service this Camcorder yourself.

Opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer and having the same characteristics as the original part.

Unauthorised substitutions may result in fire, electric shock or other hazards.

Precauciones referentes a la pila de litio

- La pila de litio de la videocámara mantiene en funcionamiento el reloj y los ajustes programados aun cuando se haya quitado la batería o se haya retirado el adaptador de CA.
- 2. La pila de litio de la videocámara dura aproximadamente seis meses en condiciones normales de funcionamiento.

Notas e instrucciones de seguridad

- Cuando la batería de litio se debilita o se agota, aparecerá el indicador de fecha y hora 00:00 1.JAN.2005 si se activa la opción Date/Time <Fecha/Hora> .
 - Cuando ocurra esto, reemplácela por una nueva (tipo CR2025).
- 4. Si la pila no se cambia correctamente existe riesgo de explosión. Reemplace la pila sólo por una igual o de especificaciones equivalentes.

Precaución: mantenga la pila de litio fuera del alcance de los niños. En caso de que alguien se tragara una por accidente, avise inmediatamente a un médico.

Reparaciones

No intente reparar la videocámara por sí solo.

La apertura o retirada de cubiertas puede exponerle a serios voltajes u otros peligros.

Confíe las reparaciones a personal técnico cualificado.

Piezas de repuesto

Cuando se necesiten piezas de repuesto, asegúrese de que el técnico utiliza piezas especificadas por el fabricante o que tengan las mismas características que la pieza original.

Los repuestos no autorizados pueden producir incendios, descargas eléctricas u otros peligros.



Getting to Know Your Camcorder

Features

Multi OSD Language

You can select the desired OSD language among English, French, Spanish, German, Italian, Portuguese, Polish and Dutch.

■ Digital Data Transfer Function with IEEE1394

By incorporating the IEEE 1394 (i.LINK™: i.LINK is a serial data transfer protocol and interconnectivity system, used to transmit DV data) high speed data transport port, both moving and still images can be transferred to a PC, making it possible to produce or edit various images.

USB Interface for Digital Image Data Transfer (VP-D352(i)/D353(i)/D354(i)/D355(i) only)

You can transfer images to a PC using the USB interface without an add-on card.

PHOTO

The photo function lets you capture an object as a still along with sound, while in camera mode.

■ 900x Digital Zoom

Allows you to magnify an image up to 900 times its original size.

Colour TFT LCD

A high-resolution colour TFT LCD gives you clean, sharp images as well as the ability to review your recordings immediately.

■ Digital Image Stabiliser (DIS)

The DIS compensates for any handshake, reducing unstable images particularly at high magnification.

■ Various Digital Effects

The digital effects allows you to give your films a special look by adding various special effects.

■ Back Light Compensation (BLC)

The BLC function compensates for the bright background behind a subject you're recording.

■ Program AE

The program AE enables you to alter the shutter speed and aperture to suit the type of scene/action to be filmed.

NITE PIX

The NITE PIX function enables you to record a subject in a dark place.

■ Digital Still Camera Function (VP-D353(i)/D354(i)/D355(i) only)

- Üsing Memory card, you can easily record and playback standard still images.
- You can transfer standard still images on the Memory card to your PC using the USB interface.

■ MPEG Recording (VP-D353(i)/D354(i)/D355(i) only)

MPEG recording makes it possible to record video onto a Memory card.

■ Multi Memory Čard Slot (VP-D354(i)/D355(i) only)

Multi Memory card slot is able to use Memory Stick, Memory Stick PRO, MMC and SD.

■ Built-in Memory (VP-D354(i)/D355(i) only)

You can use digital still camera functions without a separate external Memory card, using the built-in memory installed in your Camcorder. (VP-D354(i): 32MB/VP-D355(i): 64MB)

Introducción a la videocámara

Características

■ OSD en varios idiomas

Puede seleccionar el idioma OSD que desee entre inglés, francés, español, alemán, italiano, portugués, polaco y holandés.

■ Función de transferencia digital de datos con IEEE1394

Con la incorporación de IEEE 1394 (i.LINKTM: i.LINK es un sistema de protocolo de transferencia de datos en serie e intercomunicación empleado para transmitir datos DV), se pueden transferir imágenes de vídeo o fijas al ordenador. De este modo, es posible producir o editar imágenes.

İnterfaz USB para transferencia de datos de imágenes digitales (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))

És posible transferir imágenes al ordenador por medio de la interfaz USB sin necesidad de una tarjeta adicional.

PHOTO

La función Photo<Foto> permite tomar fotografías de objetos con sonido cuando la videocámara está en la modalidad Camera.

■ Zoom digital 900x

Permite ampliar la imagen hasta 900 veces su tamaño original.

■ LCD TFT en colour

El sistema de colour de alta resolución TFT de la pantalla LCD proporciona imágenes claras y nítidas a la vez que permite ver las grabaciones inmediatamente.

Estabilizador digital de imágenes (DIS)

El DIS compensa los movimientos de la mano reduciendo la inestabilidad de las imágenes, especialmente cuando estas últimas se graban con una gran ampliación.

Efectos digitales diversos

Los efectos digitales permiten dar a la grabación un aspecto especial al permitir añadir diversos efectos especiales.

Compensación de la luz de fondo (BLC)

La función BLC compensa el brillo que puéde aparecer detrás del objeto que se graba.

Programa AE

El programa AE permite modificar la velocidad y la apertura del obturador para que se aiuste a la escena que se vaya a filmar.

NITE PIX

Nite Pix permite grabar objetos que se encuentren en lugares oscuros.

■ Función de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

- Con la tarjeta de memoria, puede fácilmente grabar y reproducir imágenes fijas estándar.
- Puede transferir imágenes fijas estándar de su tarjeta de memoria a su PC utilizando la interfaz USB.

■ Grabación de MPEG (Sólo VP-D353(i)/D354(i)/D355(i))

La grabación de MPEG posibilita la grabación de vídeo en la tarjeta de memoria.

Ranura para diversas tarjetas de memoria (Sólo VP-D354(i)/D355(i))
 La ranura para diversas tarjetas de memoria permite utilizar el Memory Stick, Memory Stick PRO, MMC and SD.

■ Memoria incorporada (Sólo VP-D354(i)/D355(i))

Puede utilizar las funciones de cámara fótográfica sin una tarjeta de memoria externa, utilizando la memoria incorporada instalada en la videocámara. (VP-D354(i): 32MB/VP-D355(i): 64MB)



ENGLISH

Getting to Know Your Camcorder

Introducción a la videocámara

Accessories Supplied with Camcorder

Make sure that the following basic accessories are supplied with your digital video camera.

Accesorios incluidos con la videocámara

Asegúrese de que los siguientes accesorios básicos le hayan sido entregados junto con la videocámara digital.

Basic Accessories

- 1. Lithium Ion Battery Pack
- 2. AC Power Adapter (AA-E8 TYPE)
- 3. AC Cord
- 4. Audio/Video Cable
- 5. Instruction Book
- 6. Lithium Battery for Remote Control (VP-D353(i)/D354(i)/D355(i) only) or Clock. (TYPE: CR2025)
- 7. Remote Control (VP-D353(i)/D354(i)/D355(i) only)
- 8. USB Cable (VP-D352(i)/D353(i)/D354(i)/ D355(i) only)
- 9. Software CD (VP-D352(i)/D353(i)/D354(i)/ D355(i) only)
- 10. Lens Cover
- 11. Lens Cover Strap

Optional Accessories

- 12. S-Video Cable
- 13. Memory Stick (VP-D353(i)/D354(i)/ D355(i) only)
- 14. Scart Adapter




4. Audio/Video Cable

7. Remote Control


10. Lens Cover



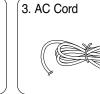

6. Lithium Battery

(CR2025)

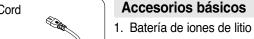


- 2. Adaptador de CA (TIPO AA-E8) 3. Cable de CA
- 4. Cable de Audio + Vídeo


ESPAÑOL

- 5. Manual de instrucciones
- 6. Pila de litio para mando a distancia (Sólo VP-D353(i)/ D354(i)/D355(i)) o reloj. (TIPO: CR2025)
- 7. Mando a distancia (Sólo VP-D353(i)/D354(i)/D355(i))
- 8. Cable USB (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))
- 9. CD de software (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))
- 10. Tapa del objetivo
- 11. Correa de la tapa del objetivo






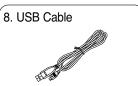

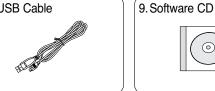



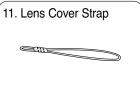








- 12. Cable S-VIDEO
- 13. Memory Stick (Sólo VP-D353(i)/D354(i)/ D355(i))
- 14. Scart Adapter



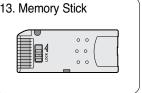




Getting to Know Your Camcorder

Introducción a la videocámara

Front & Left View

Vistas frontal y lateral izquierda

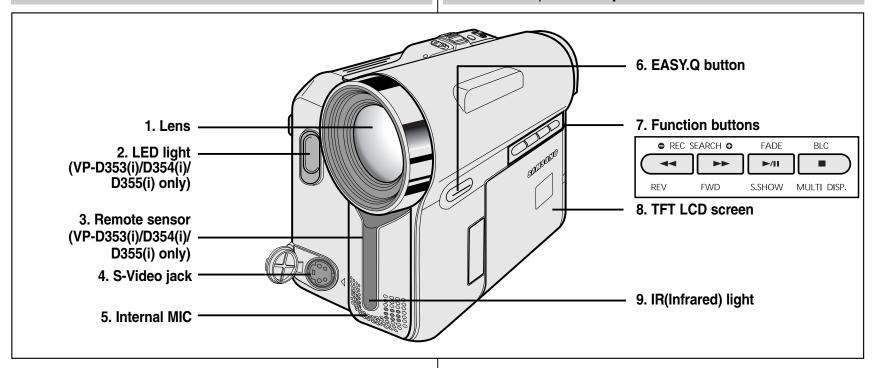

- 1. Lens
- 2. LED light (see page 48) (VP-D353(i)/ D354(i)/D355(i) only)
- 3. Remote sensor (VP-D353(i)/ D354(i)/D355(i) only)
- 4. S-Video jack

- 5. Internal MIC
- 6. EASY.Q button (see page 40)
- 8. TFT LCD screen9. IR(Infrared) light
- 7. Function buttons

PLAYER	CAMERA	M.Player (VP-D353(i)/D354(i)/D355(i) only)
-	EASY.Q	-
∢ : REW	REC SEARCH -	REV
▶ FF: FF	REC SEARCH +	FWD
►/II: PLAY/STILL	FADE	S.SHOW (SLIDE SHOW)
■:STOP	BLC	MULTI DISP.

- 1. Objetivo
- 2. Foco de la cámara (consulte la página 48) (Sólo VP-D353(i)/ D354(i)/D355(i))
- 3. Sensor para el mando a distancia (Sólo VP-D353(i)/ D354(i)/D355(i))
- 4. Toma S-Vídeo

- 5. Micrófono incorporado
- 6. Botón EASY.Q (Consulte la página 40)
- 7. Botones de funciones

PLAYER	CAMERA	M.Player (Sólo VP-D353(i)/D354(i)/D355(i))
-	EASY.Q	-
∢ : REW	REC SEARCH -	REV
▶ FF: FF	REC SEARCH +	FWD
►/II: PLAY/STILL	FADE	S.SHOW (SLIDE SHOW)
■:STOP	BLC	MULTI DISP.


- 8. Pantalla LCD TFT
- 9. IR(Infrared) light

Getting to Know Your Camcorder

Introducción a la videocámara

Left Side View

Vista lateral izquierda

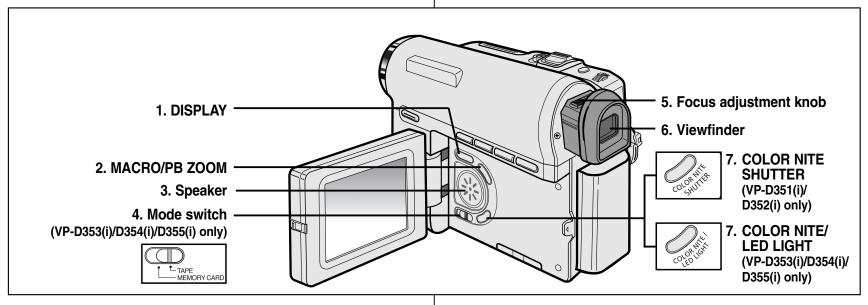

- 1. DISPLAY (see page 25)
- 2. MACRO/PB ZOOM (see page 44/see page 75)
- 3. Speaker
- 4. Mode switch (MEMORY CARD/TAPE) (VP-D353(i)/D354(i)/D355(i) only)
- 5. Focus adjustment knob
- 6. Viewfinder
- 7. COLOR NITE SHUTTER (see page 47) (VP-D351(i)/D352(i) only)
- 7. COLOR NITE/LED LIGHT (see page 48) (VP-D353(i)/D354(i)/D355(i) only)

- 1. DISPLAY (consulte la página 25)
- MACRO/PB ZOOM (consulte la página 44/consulte la página 75)
- 3. Altavoz
- 4. Interruptor Mode (MEMORY CARD/TAPE) (Sólo VP-D353(i)/D354(i)/D355(i))
- 5. Botón de enfoque
- 6. Visor
- 7. COLOR NITE SHUTTER (consulte la página 47) (Sólo VP-D351(i)/D352(i))
- 7. COLOR NITE/LED LIGHT (consulte la página 48) (Sólo VP-D353(i)/D354(i)/D355(i))




Getting to Know Your Camcorder

Introducción a la videocámara

Right & Top View

Vistas superior y lateral derecha

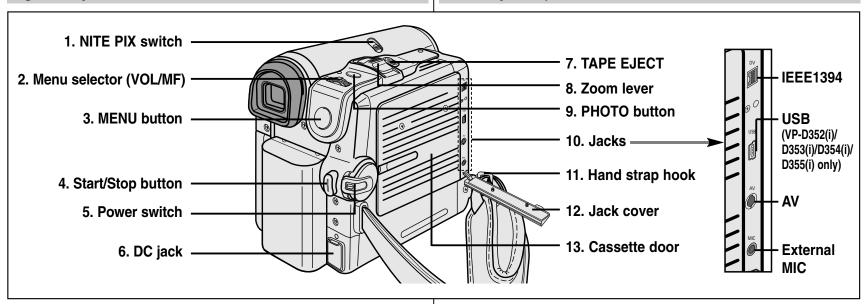

- 1. NITE PIX switch
- 2. Menu selector (VOL/MF)
- 3. MENU button
- 4. Start/Stop button
- 5. Power switch (CAMERA or PLAYER)
- 6. DC jack

- 7. TAPE EJECT
- 8. Zoom lever
- 9. PHOTO button (see page 68)
- 10. Jacks
- 11. Hand strap hook
- 12. Jack cover
- 13. Cassette door

- 1. Interruptor NITE PIX
- 2. Selector de menú (VOL/MF)
- 3. Botón MENU
- 4. Botón Iniciar/Parar
- 5. Interruptor Power (CAMERA o PLAYER)
- 6. Conector de CC

- 7. TAPE EJECT
- 8. Palanca del zoom
- 9. Botón PHOTO (Consulte la página 68)
- 10. Conectores
- 11. Enganche de la empuñadura
- 12. Tapa de conectores
- 13. Puerta de casete




Getting to Know Your Camcorder

Introducción a la videocámara

Rear & Bottom View

Vistas posterior e inferior

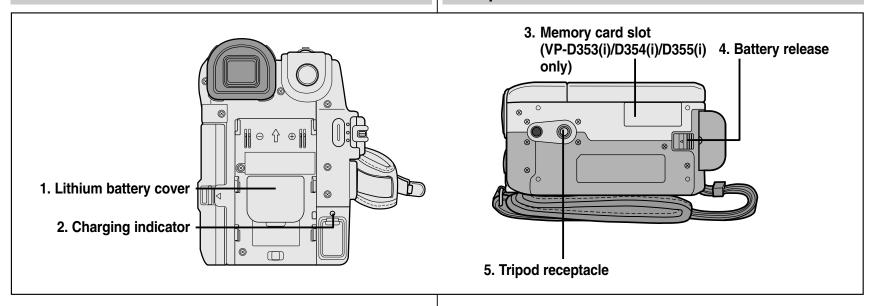


- 1. Lithium battery cover
- 2. Charging indicator
- 3. Memory card slot (VP-D353(i)/D354(i)/D355(i) only)
- 4. Battery release
- 5. Tripod receptacle

- 1. Tapa de la pila de litio
- 2. Indicador de carga
- 3. Ranura de tarjeta de memoria (Sólo VP-D353(i)/D354(i)/D355(i))
- 4. Botón para liberar la batería
- 5. Orificio para el trípode

Memory Card Slot (Usable Memory Card)

VP-D353(i) only	VP-D354(i)/355(i) only
Memory Stick	Memory Stick Memory Stick PRO
Memory Stick PRO	SD/MMC

Ranura de tarjeta de memoria (Tarjeta de memoria utilizable)

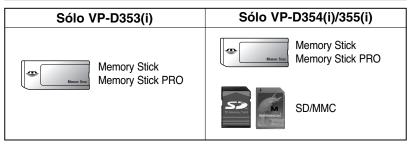




Getting to Know Your Camcorder

Introducción a la videocámara

Remote Control (VP-D353(i)/D354(i)/D355(i) only)

Mando a distancia (Sólo VP-D353(i)/D354(i)/D355(i))

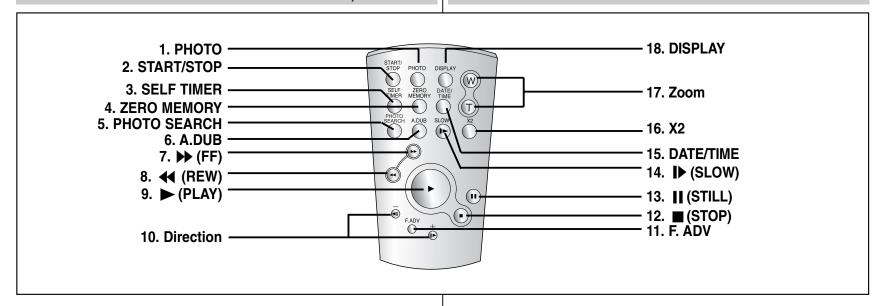

- 1. PHOTO (see page 68)
- 2. START/STOP
- 3. SELF TIMER (see page 43)
- 4. ZERO MEMORY (see page 42)
- **5. PHOTO SEARCH**
- 6. A.DUB (see page 77)
- 7. **>>** (FF)
- 8. **◀** (REW)
- 9. ► (PLAY)
- 10. Direction (**◄॥**/**॥**►) (see page 73)

- 11.F. ADV (see page 74)
- 12. **■** (STOP)
- 13. **[]** (STILL)
- 14. **I**▶ (SLOW)
- 15. DATE/TIME
- 16. X2 (see page 74)
- 17. Zoom
- 18. DISPLAY

- 1. PHOTO (Foto; consulte la página 68) 11. F. ADV (Avance por fotograma;
- 2. START/STOP (Iniciar/Parar)
- 3. SELF TIMER (Temporizador; consulte la página 43)
- 4. ZERO MEMORY (Memoria cero; consulte la página 42)
- 5. PHOTO SEARCH (Búsq. Foto)
- 6. A.DUB (Mezcla de audio; consulte la página 77)
- 7. (Avance rápido)
- 8. **◀** (Rebobinar)
- 9. (Reproducir)
- 10. Dirección (◀▮/▮▶) (consulte la página 73)

- F. ADV (Avance por fotograma; consulte la página 74)
- 12. **■** (Parar)
- 13. II (Pausa)
- 15. DATE/TIME (Fecha/Hora)
- 16. X2 (consulte la página 74)
- 17. Zoom
- 18. DISPLAY (Pantalla)



Preparation

Adjusting the Hand Strap

It is very important to ensure that the Hand strap has been correctly adjusted before you begin your recording.

The Hand strap enables you to:

- Hold the Camcorder in a stable, comfortable position.
- Press the **ZOOM** and **Start/Stop** button without having to change the position of your hand.

1

(1)

Hand Strap

- 1. Insert the Hand strap into the Hand strap hook on the front side of the Camcorder and pull its end through the hook.
- 2. Insert your hand into the hand strap and adjust its length for your convenience.
- 3. Close the Hand strap.

When You carry Your Camcorder

- 1. Pull and open the Hand strap
- 2. Remove it from the ring and adjust its length.
- 3. Put your hand through the Hand Strap and close the cover of Hand Strap.

- 1. Hook up the Lens cover with the Lens cover strap as
- 2. Hook up the Lens cover strap to the Hand strap, and adjust it following the steps as described for the Hand strap.
- 3. Close the Hand strap.

Ajuste de la empuñadura


Preparación

Es muy importante asegurarse de que la empuñadura esté correctamente aiustada antes de empezar la grabación.

La empuñadura permite:

- Mantener la videocámara en una posición estable y cómoda.
- Pulsar los botones **ZOOM** y **Start/Stop** sin tener que modificar la posición de la mano.



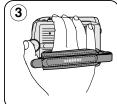

Empuñadura

- 1. Inserte la empuñadura en su enganche situado en la parte frontal de la videocámara v tire de su extremo a través del enganche.
- 2. Introduzca su mano en la empuñadura v ajuste la longitud a su gusto.
- 3. Cierre la empuñadura.


Transporte de la videocámara


- 1. Tire de la empuñadura y ábrala para soltarla.
- 2. Sáquela de la anilla y ajuste su longitud.
- 3. Coloque la mano a través de la correa y ajuste el cierre.

- cover to release the Hand strap.

Attaching the Lens Cover


illustrated.

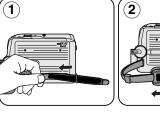

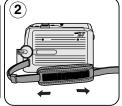



2)

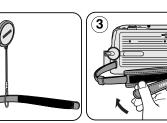

Colocación de la tapa del objetivo

- 1. Enganche la tapa del objetivo con su correa como se indica en la ilustración.
- 2. Enganche la correa de la tapa del objetivo a la empuñadura y ajústela siguiendo los pasos según se describe para la empuñadura.
- 3. Cierre la empuñadura.



Preparation

Lithium Battery Installation

Battery Installation for the Internal Clock

- The Lithium battery maintains the clock function and preset contents of the memory; even if the Battery pack or AC Power adapter is removed.
- The Lithium battery for the Camcorder lasts about 6 months under normal operation from the time of installation.
- When the Lithium battery becomes weak or dead, the Date/Time indicator will display 00:00 1.JAN.2005 when you set the Date/Time to on. When this occurs, replace the Lithium battery with CR2025 type.
- 1. Remove the Lithium-ion battery from the rear of the Camcorder.
- 2. Open the Lithium battery cover on the rear of the Camcorder.
- 3. Position the Lithium battery in the Lithium battery holder, with the positive (\bigoplus) terminal face up.
- 4. Close the Lithium battery cover.

Battery Installation for the Remote Control (VP-D353(i)/D354(i)/D355(i) only)

- You need to insert or replace the Lithium battery when:
 - You purchase the Camcorder.
 - The remote control doesn't work.
- * Position the Lithium battery in the Lithium battery holder, with the positive (\oplus) terminal face up.
- Be careful not to reverse the polarity of the battery.

[Note]

The Lithium battery must be inserted in the correct direction.

Warning: Keep the Lithium battery out of the reach of the children.

Should any battery be swallowed, consult a doctor immediately.

Preparación

Instalación de la pila de litio

Instalación de la pila para el reloj interno

- La pila de litio mantiene el funcionamiento del reloj y los ajustes programados en la memoria incluso cuando se quita la batería o el adaptador de CC.
- La batería de litio de la videocámara dura aproximadamente seis meses en condiciones normales de funcionamiento.
 - Cuando la batería de litio se debilita o se agota, aparecerá el indicador de fecha y hora 00:00
 1.JAN.2005 cuando active la opción Date/Time
 Fecha/Hora>.

En ese caso, reemplace la pila por una nueva del tipo CR2025.

- Retire la pila de iones de litio de la parte posterior de la videocámara.
- 2. Abra la tapa de la pila de litio en la parte posterior de la videocámara.
- 3. Position the Lithium battery in the Lithium battery holder, with the positive (\bigoplus) terminal face up.
- 4. Cierre la tapa de la pila.


Instalación de la pila del mando a distancia (Sólo VP-D353(i)/D354(i)/D355(i))

- Tiene que poner o reemplazar la pila de litio:
 - Al comprar la videocámara.
 - Cuando el mando a distancia no funcione.
- Position the Lithium battery in the Lithium battery holder, with the positive (⊕) terminal face up.
- Tenga cuidado de no invertir la polaridad de la pila.

[Nota]

La pila de litio debe colocarse en el sentido correcto.

Precaución: mantenga la pila de litio fuera del alcance de los niños. En caso de que, por accidente, alguien se tragara una, avise inmediatamente a un médico.

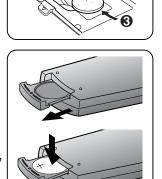



Preparation

Connecting a Power Source

There are two types of power source that can be connected to your Camcorder.


- The AC Power adapter and AC Cord: used for indoor recording.
- The Battery pack: used for outdoor recording.


To use the AC Power Adapter and DC Cable


- Connect the AC Power adapter to the AC Cord.
- 2. Connect the AC Cord to a wall socket.

[Notes]

- You must use an AA-E8 TYPE AC Power adapter.
- The plug and wall socket type may differ according to your resident country.
- 3. Connect the DC cable to the DC jack socket of the Camcorder.
- Set the Camcorder to each mode by holding down the tab on the **Power** switch and turning it to the **CAMERA** or **PLAYER** mode.

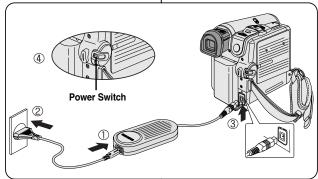

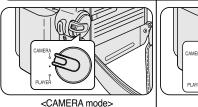

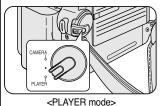

Preparación

Conexión a una fuente de alimentación

Hay dos tipos de fuentes de energía a las que se puede conectar la videocámara.

- El adaptador de CA y el cable de CA: se emplean para grabaciones en interiores.
- La batería: se emplea para grabaciones en exteriores.

Utilización del adaptador de CA y el cable de CC


- 1. Conecte el adaptador de CA al cable de CA.
- 2. Conecte el cable de CA a una toma de corriente.

[Notas]

- Debe utilizar el adaptador de CA de AA-E8 TYPE.
- Es posible que la clavija y la toma de corriente sean de distinto tipo, dependiendo de su lugar de residencia.
- Conecte el cable de CC al conector de CC de la videocámara.
- Coloque la videocámara en cada modalidad manteniendo bajada la pestaña del interruptor Power y girándola a la modalidad CAMERA o PLAYER.

To Select the Camcorder Mode (VP-D353(i)/D354(i)/D355(i) only)

- If you want to use this unit as a Camcorder, set the Mode switch to TAPE.
- If you want to use this unit as a DSC (Digital Still Camera), Set the Mode switch to MEMORY CARD.

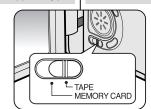

Selección de la modalidad de videocámara (Sólo VP-D353(i)/D354(i)/D355(i))

- Si desea utilizar este aparato como videocámara, ajuste el interruptor Mode en la posición TAPE <cinta>.
- Si desea utilizar este aparato como cámara fotográfica digital (DSC), ajuste el interruptor Mode en la posición MEMORY CARD.



Preparation

Using the Lithium Ion Battery Pack

- * The amount of continuous recording time available depends on
 - The type and capacity of the Battery pack you are using.
 - How often the zoom function is used.

 It is recommended that you have several batteries available.

Charging the Lithium Ion Battery Pack

- 1. Attach the Battery pack to the Camcorder.
- Connect the AC Power adapter to an AC Cord and connect the AC Cord to a wall socket.
- Connect the DC cable to the DC jack socket on the Camcorder.
- 4. Turn the **Power** switch to **Off**, and the charging indicator will start to flash, showing that the battery is charging.

Blinking time	Charging rate
Once per second	Less than 50%
Twice per second	50% ~ 75%
Three times per second	75% ~ 90%
Blinking stops and stays on	90% ~ 100%
On for a second and off for a second	Error - Reset the Battery pack and the DC cable

 When the battery is fully charged, disconnect the Battery pack and the AC Power adapter from the Camcorder.
 Even with the **Power** switched **Off**, the Battery pack will still discharge.


[Notes]

- The Battery pack may be charged a little at the time of purchase.
- To prevent reduction in the life and capacity of the Battery pack, always remove it from the Camcorder after it is fully charged.
- The amount of continuous recording time available depends on:
 - The type and capacity of the Battery pack you are using.
 - How often the zoom is used.
 - Type of use (Camcorder/Camera/With LCD screen etc.).
 - Ambient temperature.
 It is recommended to have additional battery packs available.
- Even when the Power switched Off, the Battery pack will still discharge if it is left attached to the device.

Preparación

Utilización de la batería de iones de litio

- * El tiempo disponible de grabación continuada depende de:
 - El tipo y la capacidad de la batería que utilice.
 - La frecuencia con que se emplee el zoom.
 Es aconsejable disponer de varias baterías.

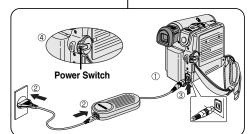

< Charging indicator>

Cómo cargar la batería de iones de litio

- 1. Conecte la batería a la videocámara.
- Conecte el adaptador de CA al cable de CA y conecte este último a una toma de corriente.
- Conecte el cable de CC al conector de CC de la videocámara.
- Coloque el interruptor Power de la videocámara en la posición Off. El indicador de carga empezará a parpadear, lo que indica que la batería se está cargando.

Frecuencia de parpadeo	Velocidad de carga
Una vez por segundo	Menos del 50%
Dos veces por segundo	50% ~ 75%
Tres veces por segundo	75% ~ 90%
Deja de parpadear y queda encendido	90% ~ 100%
Encendido durante un segundo y apagado durante un segundo	Error - repita la operación de conexión de la batería y el cable de CC

5. Cuando la batería esté completamente cargada, desconéctela de la videocámara y desconecte también el adaptador de CA. Incluso apagada, la batería se descargará.

- Es posible que la batería esté un poco cargada en el momento de la compra.
- Para evitar que la vida útil de la batería y su capacidad se reduzcan, quítela siempre de la videocámara una vez que esté completamente cargada.
- El tiempo disponible de grabación continuada depende de:
- El tipo y la capacidad de la batería que utilice.
- La frecuencia con que se emplee el zoom.
- Tipo de uso (videocámara / cámara / con pantalla LCD, etc.).
- Temperatura ambiental.
- Se recomienda tener disponible una batería adicional.
- Incluso en el caso de que se deje apagado el interruptor de encendido, la batería se seguirá descargando si se deja acoplada al dispositivo.





Preparation

Table of continuous Recording Time based on Model and Battery Type.

- If you close the LCD screen, it switches off and the Viewfinder switches on automatically.
- The continuous recording times given in the table below are approximations. Actual recording time depends on usage.

Time	Charging	Continuous recording time	
Battery	time	LCD ON	VIEWFINDER ON
SB-LSM80	Approx.	Approx.	Approx.
	1hr 20min	1hr 20min	1hr 30min
SB-LSM160	Approx.	Approx.	Approx.
	3hr	2hr 40min	3hr

[Notes]

- The Battery pack should be recharged in an environment between 32 °F (0 °C)and 104 °F (40 °C).
- The Battery pack should never be charged in a room with a temperature that is below 32 °F (0 °C).
- The life and capacity of the Battery pack will be reduced if it is used in temperatures below 32 °F (0 °C) or left in temperatures above 104 °F (40 °C) for a long period of time, even when it is fully recharged.
- Do not put the Battery pack near any heat source (i.e.fire or a heater).
- Do not disassemble, apply pressure to or heat the Battery pack.
- Do not allow the + and terminals of the Battery pack to be short-circuited. It may cause leakage, heat generation, induce overheating or fire.
- Use SB-LSM80 or SB-LSM160 Battery pack only.
- It is recommended to use original battery pack that is available at SAMSUNG service centre.

Preparación

Tabla de tiempos de grabación continuada según el modelo y el tipo de batería

- Si cierra la pantalla LCD, ésta se apaga y el visor se enciende automáticamente.
- Los tiempos de grabación continuada que se facilitan en la tabla siguiente son aproximados.

El tiempo real de grabación depende del uso de la videocámara.

Tiempo	Tiempo de carga	Tiempo de grabación continuada	
Batería		LCD ACTIVADA	VISOR ACTIVADO
SB-LSM80	Aprox.	Aprox.	Aprox.
	1 h. 20 min	1 h. 20 min.	1 h. 30 min
SB-LSM160	Aprox.	Aprox.	Aprox.
	3 h.	2 h. 40 min.	3 h.

- La batería debe recargarse a una temperatura ambiente de entre 0° C (32° F) y 40° C (104° F).
- La batería nunca debe cargarse cuando la temperatura ambiente sea inferior a los 0° C (32° F).
- La vida útil y la capacidad de la batería se verán reducidas si se utiliza en ambientes con temperaturas inferiores a 0° C (32° F) o si se deja durante largos periodos expuesta a temperaturas superiores a los 40° C (104° F) incluso si está cargada por completo.
- No ponga la batería cerca de una fuente de calor (un fuego o un calefactor, por ejemplo).
- No desmonte la batería ni la someta a manipulaciones, presiones ni calor.
- No permita que se produzca un cortocircuito entre los polos + y − de la batería.
 - Podrían producirse pérdidas o calentamiento, lo cual podría ocasionar sobrecalentamiento o un incendio.
- Utilice únicamente una batería SB-LSM80 o SB-LSM160.
- Se recomienda utilizar la batería original que está disponible en el centro de servicio técnico de SAMSUNG.




Preparation

Battery Level Display

The battery level display indicates the amount of power remaining in the Battery pack.

- a. Fully charged
- b. 20~40% used
- c. 40~80% used
- d. 80~95% used
- e. Completely used (Blinking)
 (The Camcorder will turn off soon, change the battery as soon as possible)

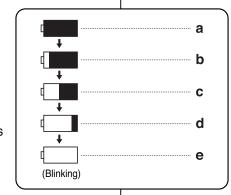

Preparación

Indicador de carga de la batería

El indicador de la carga de la batería muestra la cantidad de energía restante.

- a. Completamente cargada
- b. 20 40% de uso
- c. 40 80% de uso
- d. 80 95% de uso
- e. Completamente descargada (Blinking) (La videocámara se apagará muy pronto. Reemplace la batería lo antes posible.)

[Notes]

- Please refer to the Table on page 22 for approximate continuous recording time.
- The recording time is affected by temperature and environmental conditions.
- The recording time shortens dramatically in a cold environment.

 The continuous recording times in the operating instructions are measured using a fully charged Battery pack at 77 °F (25 °C). As the environmental temperature and conditions vary. The remaining battery time may differ from the approximate continuous recording times given in the instructions.

- Consulte la tabla de la página 22 para obtener información sobre el tiempo aproximado de grabación continuada.
- El tiempo de grabación se ve afectado por las condiciones ambientales y la temperatura.
- El tiempo de grabación se acorta enormemente en un ambiente frío.

 Los tiempos de grabación continuada que se dan en este manual de instrucciones están medidos empleando una batería completamente cargada a 25° C (77° F). Debido a que las condiciones ambientales pueden ser distintas cuando utilice la videocámara, el tiempo restante de carga de la batería puede diferir de los tiempos aproximados que se dan en este manual.



Preparation


Preparación

OSD (On Screen Display in Camera/Player Modes)


- 1. Battery level (see page 23)
- 2. Digital effects mode (see page 65)
- 3. EASY.Q (see page 40)
- 4. DIS (see page 61)
- 5. Program AE (see page 63)
- 6. White balance mode (see page 59)
- 7. Shutter speed (see page 57)
- 8. Exposure (see page 57)
- 9. Manual focus (see page 58)
- 10. Date/Time (see page 33)
- 11. Zoom position (see page 44)
- 12. Nite Pix (see page 49)
- 13. Color nite (see page 47)
- 14. USB (VP-D352(i)/D353(i)/ D354(i)/D355(i) only)
- 15. Remote (see page 28) (VP-D353(i)/D354(i)/ D355(i) only)
- 16. Wind cut (see page 56)
- 17. BLC (Back Light Compensation) (see page 46)
- 18. LED LIGHT (VP-D353(i)/D354(i)/D355(i) only) (see page 48)
- 19. Audio recording mode (see page 55)
- 20. Remaining tape (measured in minutes)
- 21. Tape counter

- 22. Zero memory (VP-D353(i)/D354(i)/ D355(i) only) (see page 42)
- 23. Record speed mode
- 24. Operating mode
- 25. Self timer (VP-D353(i)/D354(i)/ D355(i) only)
- 26. Photo image
- 27. Tele MACRO (see page 44)
- 28. Audio playback
- 29. Volume control (see page 70)
- 30. DV IN (DV data transfer mode) (see page 80)
- 31. AV IN (VP-D351i/D352i/ D353i/D354i/D355i only)
- 32. Audio dubbing (VP-D353(i)/D354(i)/ D355(i) only) (see page 77)
- 33. DEW (see page 7)
- 34. Warning Indicator (see page 115)
- 35. Message line (see page 115)

OSD in Camera Mode

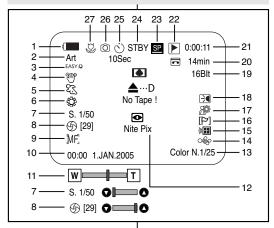

OSD in Player Mode

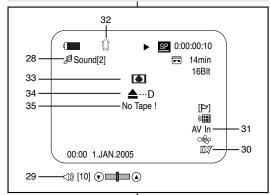

 Nivel de carga de la batería (consulte la página 23)

OSD (presentación en pantalla en las modalidades Camera / Player)

- Modalidad de efectos digitales (consulte la página 65)
- 3. EASY.Q (consulte la página 40)
- DIS (estabilizador digital de la imagen; consulte la página 61)
- 5. Programa AE (consulte la página 63)
- Modalidad de balance de blanco (consulte la página 59)
- 7. Velocidad del obturador (consulte la página 57)
- 8. Exposición (consulte la página 57)
- 9. Enfoque manual (consulte la página 58)
 10. Fecha y hora
- (consulte la página 33) 11. Posición del zoom
- (consulte la página 44)
 12. NITE SCENE
- (consulte la página 49)

 13. Obturador nocturno de color (consulte la página 47)
- 14. USB (Sólo VP-D352(i)/ D353(i)/D354(i)/D355(i))
- Remoto (consulte la página 28) (Sólo VP-D353(i)/D354(i)/ D355(i))
- 16. Antiviento (consulte la página 56)
- 17. BLC (compensación de la luz de fondo; consulte la página 46)

- 18. Foco de cámara (Sólo VP-D353(i)/D354(i)/D355(i)) (consulte la página 48)
- Modalidad de grabación de audio (consulte la página 55)
- 20. Cinta restante (medido en minutos)
- 21. Contador de cinta
- 22. Memoria cero (Sólo VP-D353(i)/D354(i)/D355(i)) (consulte la página 42)
- 23. Modalidad de velocidad de grabación
- 24. Modalidad de funcionamiento
- 25. Temporizador (Sólo VP-353(i)/D354(i)/D355(i))
- 26. Imagen fotográfica
- 27. MACRO telescópica (consulte la página 44)
- 28. Reproducción de audio
- 29. Control de volumen (consulte la página 70)
- 30. DV IN (modalidad de transferencia de datos de DV) (consulte la página 80)
- 31. Entrada AV (Sólo VP-D351i/ D352i/D353i/D354i/D355i)
- Grabación de audio adicional (Sólo VP-D353(i)/ D354(i)/D355(i)) (consulte la página 77)
- 33. DEW (humedad; ver página 7)
- 34. Indicador de advertencia (consulte la página 115)
- 35. Línea de mensaje (consulte la página 115)




Preparation

OSD (On Screen Display in M.Cam/M.Player Modes) (VP-D353(i)/D354(i)/D355(i) only)

- 1. Photo quality
- 2. CARD (Memory Card) indicator
- **3. Image counter**Total number of recordable still images.
- 4. Image recording and loading indicator
- 5. Erase protection indicator (see page 97)
- 6. Print mark (see page 108)
- 7. Folder number-file number (see page 89)
- 8. JPEG image size
- 9. Slide show

OSD in M.Cam Mode

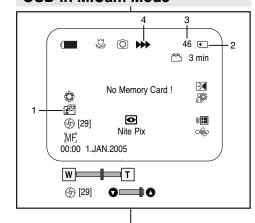

1. Calidad fotográfica

OSD (presentación en pantalla en las modalidades

M.Cam/M.Player) (Sólo VP-D353(i)/D354(i)/D355(i))

Preparación

- 2. Indicador de tarjeta (tarjeta de memoria)
- Contador de imagen número total de imágenes fijas que se pueden grabar.
- 4. Indicador de grabación y carga de imágenes
- 5. Indicador de protección contra borrado (consulte la página 97)
- 6. Marcado de imágenes (consulte la página 108)
- 7. Número de carpeta y número de archivo (consulte la página 89)
- 8. Tamaño de imagen JPEG
- 9. Presentación

Turning the OSD (On Screen Display) On/Off

Turning OSD on/off

Press the **DISPLAY** button on the left side control panel.

- Each press of the button toggles the OSD function on and off.
- When you turn the OSD off,


In CAMERA Mode: The STBY, REC modes are always displayed on the OSD, even when the OSD is turned off and the key input is displayed for 3 seconds then turned off.

In PLAYER Mode: When you press any function button, the function is displayed on the OSD for 3 seconds before it turns off.

■ Turning the Date/Time on/off

To turn the Date/Time on or off, access the menu and change the Date/Time mode.(see page 33)

OSD in M.Player Mode

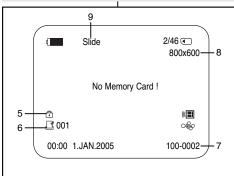

Encendido / apagado de OSD (presentación en pantalla)

Encendido y apagado de la OSD (presentación en pantalla)

Pulse el botón **DISPLAY** en el panel izquierdo.

- Al pulsar repetidas veces el botón, la función OSD cambiará alternativamente entre activada y desactivada (ON/OFF).
- Al desactivar la OSD,

En la modalidad CAMERA: las modalidades STBY, REC siempre aparecen en la OSD, incluso si ésta se encuentra apagada y el nombre de la modalidad aparece durante tres segundos. Luego se apaga. En la modalidad PLAYER: si se pulsa algún botón de función, ésta aparece en la OSD durante tres segundos y después se apaga.

Activación y desactivación de la fecha y la hora

Para encender o apagar la presentación de fecha y hora, acceda al menú y cambie la modalidad de fecha y hora.(consulte la página 33.)



System Menu Setting

Selecting the OSD Language

- ❖ The Language function works in Camera/Player/M.Cam/M.Player modes.
- ❖ Select the appropriate OSD Language among English, French, Spanish, German, Italian, Portuguese, Polish and Dutch.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- Set the Mode switch to TAPE or MEMORY CARD. (VP-D353(i)/D354(i)/355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select System, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select Language, then press the Menu selector.
 - The available language options are listed.
- 6. Move the **Menu selector** to the left or right to select desired OSD language, then press the **Menu selector**.
 - The OSD language is refreshed in selected language.
- 7. To exit, press the **MENU** button.


Selección del idioma de la OSD

- ♣ La función de Language <Idioma> funciona en las modalidades Camera/Player/M.Cam/M.Player.
- ❖ Seleccione el idioma OSD deseado entre ingles, francés, español, alemán, italiano, portugués, polaco y holandés.


Ajuste del menú System <Sistema>



- 1. Coloque el interruptor **Power** en **CAMERA** o **PLAYER**.
- 2. Coloque el interruptor Mode en TAPE o MEMORY CARD. (Sólo VP-D353(i)/D354(i)/355(i))
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- 4. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar System <Sistema> y pulse el Selector de menú.
- 5. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Language <ldioma> y pulse el Selector de menú.
 - Aparece una lista con las opciones de idioma disponibles.

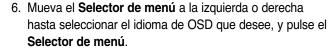

- La OSD se actualiza en el idioma seleccionado.
- 7. Para salir, pulse el botón **MENU**.

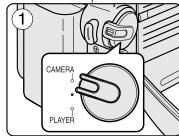

Camera Mode

Beep Sound

Demonstration

Language

(4)



[Note]

The word "Language" in the menu is always indicated in English.

[Nota]

▶English

▶On

"Language" siempre aparece en inglés.



ENGLISH

System Menu Setting

Setting the Clock

- Clock setup works in Camera/Plaver/M.Cam/M.Plaver modes.
- ❖ The Date/Time is automatically recorded onto a tape. Before recording, please set the Date/Time.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- 2. Set the **Mode** switch to **TAPE** or **MEMORY CARD**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select System, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select Clock Set, then press the Menu selector.
 - The year will highlight first.
- 6. Move the **Menu selector** to the left or right to set current (5) Year, then press the **Menu selector**.
 - The month will be highlighted.
- 7. You can set the month, day, hour and minute following the same procedure for setting the year.
- 8. Press the **Menu selector** after setting the minutes.
 - The message **Complete!** will be displayed.
 - To adjust the clock, select the Year, Month, Day, Hour or Min by pressing the **Menu selector**, then move the **Menu selector** to the left or right to set respective values. (8)
- 9. To exit, press the **MENU** button.

[Notes]

- After the Lithium battery loses its charge (after about 6 months), the date/time appears on the screen as 00:00 1.JAN.2005.
- You can set the year up to 2037.
- If the Lithium battery is not installed, any input data will not be backed up.

ESPAÑOL


Ajuste del menú System <Sistema>

Ajuste del reloj

- ♣ La configuración del reloi funciona en las modalidades Camera/Player/M.Cam/M.Player.
- ♣ La fecha y la hora se graban de manera automática en la cinta. Antes de grabar, aiuste la fecha y la hora.
 - 1. Coloque el interruptor **Power** en **CAMERA** o **PLAYER**.
 - 2. Coloque el interruptor Mode en TAPE o MEMORY CARD. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - 4. Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar System <Sistema> v pulse el Selector de menú.
 - 5. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Clock Set <Ajuste Reloj> y pulse el Selector de menú.
 - Primero parpadea el año.
 - 6. Mueva el **Selector de menú** a la izquierda o a la derecha hasta fijar el año y pulse el **Selector de menú**.
 - El mes parpadeará.
 - 7. Fije el mes, día, hora y minutos siguiendo el mismo procedimiento que para el año.
 - 8. Pulse el **Selector de menú** tras fijar los minutos.
 - Aparecerá el mensaje Complete! < Completo!>.
 - Para aiustar el reloi, seleccione Year <Año>. Month <Mes>, Day <Día>, Hour <Hora> o Min pulsando el Selector de menú v mueva el Selector de menú a la izquierda o derecha para fijar los valores respectivos.
 - 9. Para salir, pulse el botón **MENU**.

[Notas]

- Una vez que se haya agotado la batería de litio (unos 6 meses), aparece la fecha/hora en pantalla con el formato 00:00 1.JAN.2005.
- Puede definir el año hasta 2037.
- Si no se instala la batería de litio, no se realizará copia de seguridad de los datos de entrada.

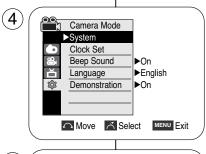

Camera Mode


Clock Set

Language

Beep Sound

Demonstration

t Back

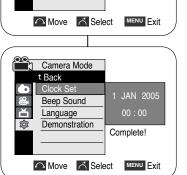

1 JAN 2005



System Menu Setting


Setting the Wireless Remote Control Acceptance (Remote) (VP-D353(i)/D354(i)/D355(i) only)


- ❖ The Remote function works in Camera/Player/M.Cam/M.Player modes.
- The Remote option allows you to enable or disable the remote control for use with the Camcorder.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- 2. Set the **Mode** switch to **TAPE** or **MEMORY CARD**.
- 3. Press the MENU button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select System, then press the Menu selector.
- Move the Menu selector to the left or right to select Remote, then press the Menu selector.
- Move the Menu selector to the left or right to select On or Off, then press the Menu selector.
- 7. To exit, press the **MENU** button.

[Note]

If you set the Remote to Off in the menu and try to use it, the remote control icon(((III))) will blink for 3 seconds on the LCD screen and then disappear.



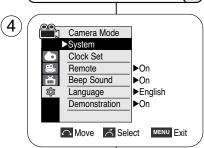

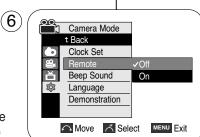

Ajuste del menú System <Sistema>

Ajuste de aceptación del mando a distancia inalámbrico (Remoto) (Sólo VP-D353(i)/D354(i)/D355(i))

- ❖ La función Remote <Remoto> funciona en las modalidades Camera/Player/M.Cam/M.Player.
- ♣ La opción Remote <Remoto> permite activar o desactivar el mando a distancia para hacer funcionar la videocámara.
 - 1. Coloque el interruptor Power en CAMERA o PLAYER.
 - 2. Coloque el interruptor Mode en TAPE o MEMORY CARD.
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar System <Sistema> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Remote <Remoto> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar On <Actv.> u Off <Des.> y pulse el Selector de menú.
 - 7. Para salir, pulse el botón MENU.

[Nota]

Si desactiva Remote en el menú e intenta utilizarlo, el icono (الله) del mando a distancia parpadeará durante tres segundos y desaparecerá de la pantalla LCD.



System Menu Setting

Setting the Beep Sound

- ❖ The Beep Sound function works in Camera/Player/M.Cam/M.Player modes.
- You can turn the Beep Sound on or off, when on, each press of a button sounds a beep.
- 1. Set the Power switch to CAMERA or PLAYER.
- Set the Mode switch to TAPE or MEMORY CARD. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the MENU button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select System, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select **Beep Sound**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select On or Off, then press the Menu selector.
- 7. To exit, press the **MENU** button.


Ajuste del menú System <Sistema>


Ajuste del sonido del pitido

- La función Language <Idioma> funciona en las modalidades Camera/Player/M.Cam/M.Player.
- Puede activar o desactivar Beep Sound <Sonido Beep>; cuando esté encendido, cada pulsación de botón emite un pitido.



- 1. Coloque el interruptor **Power** en **CAMERA** o **PLAYER**.
- Coloque el interruptor Mode en TAPE o MEMORY CARD. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar System <Sistema> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Beep Sound <Sonido Beep> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar On <Actv.> u Off <Des.> y pulse el Selector de menú.
- 7. Para salir, pulse el botón MENU.

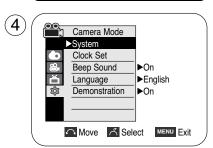

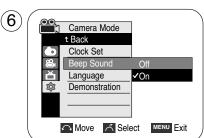






System Menu Setting

Setting the Shutter Sound (VP-D353(i)/D354(i)/D355(i) only)

- ❖ The Shutter Sound function works in both Player and M.Cam modes.
- You can turn the Shutter Sound on or off, when on, with each press of the PHOTO button the Shutter will Sound.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- If the Power switch is set to CAMERA mode, set the MODE switch to MEMORY CARD.
 If the Power switch is set to PLAYER mode, set the MODE switch to TAPE.
- 3. Press the MENU button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select System, then press the Menu selector.
- Move the Menu selector to the left or right to select Shutter Sound, then press the Menu selector.
- 6. Move the **Menu selector** to the left or right to select **On** or **Off**, then press the **Menu selector**.
- 7. To exit, press the **MENU** button.

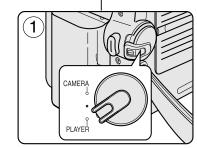

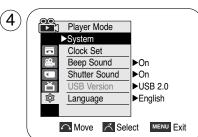

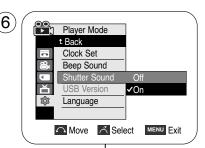

Ajuste del menú System <Sistema>

Ajuste del sonido del obturador (Sólo VP-D353(i)/D354(i)/D355(i))

- ♣ La función Shutter Sound <Sonido Obtur> está operativa en las modalidades Player y M.Cam.
- Puede activar o desactivar el sonido del obturador en cada pulsación del botón PHOTO the Shutter will Sound.
 - 1. Coloque el interruptor Power en CAMERA o PLAYER.
 - Si el interruptor Power está colocado en la modalidad CAMERA, coloque el interruptor MODE en MEMORY CARD.

Si el interruptor **Power** está colocado en la modalidad **PLAYER**, coloque el interruptor **MODE** en **TAPE**.

- 3. Pulse el botón **MENU**.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar System <Sistema> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Shutter Sound <Sonido Obtur> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar On <Actv.> u Off <Des.> y pulse el Selector de menú.
- 7. Para salir, pulse el botón MENU.



ENGLISH

System Menu Setting

Viewing the Demonstration

yotom mond cotting

Before you begin: Make Sure that there is no tape inserted in the Camcorder. (see page 36)

Demonstration automatically shows you the major functions that are included with your Camcorder so that you may use them more easily.

- The Demonstration function may only be used in the Camera mode without a tape inserted in the Camcorder.
- The Demonstration operates repeatedly until the Demonstration mode switched Off.
- 1. Set the **Power** switch to **CAMERA**.
- Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **System**, then press the **Menu selector**.
- 5. Move the **Menu selector** to the left or right to select **Demonstration**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select On, then press the MENU button.
 - The Demonstration will begin.
- 7. To quit the Demonstration, press the **MENU** button.

[Notes]

- The Demonstration mode is automatically activated when the Camcorder is left idle for more than 10 minutes after switching to the Camera mode (no tape is inserted in the Camcorder).
- If you press other buttons (FADE, BLC, PHOTO, EASY.Q) during the Demonstration mode, the demonstration stops temporarily and resumes 10 minutes later if you do not operate any other functions.
- While setting the NITE PIX to ON, the Demonstration function does not work.


ESPAÑOL


Ajuste del menú System <Sistema>


Visualización de la demostración


- Antes de empezar: asegúrese de que no hay ninguna cinta dentro de la videocámara. (Consulte la página 36.)
 - Esta función muestra de manera automática las funciones más importantes de la videocámara.
 - La función Demonstration < Demostración> sólo debe usarse en la modalidad de cámara sin introducir ninguna cinta en la videocámara.
 - La demostración continuará repetidamente hasta que se desactive la modalidad de demostración.
 - 1. Coloque el interruptor Power en CAMERA.
 - 2. Coloque el interruptor **Mode** en **TAPE**. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar System <Sistema> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Demonstration <Demostración> y pulse el Selector de menú.
 - 6. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar **On <Actv.>** y pulse el **MENU**.
 - Comenzará la demostración.
 - 7. Para salir de la demostración, pulse el botón **MENU**.

- La modalidad de demostración se activa automáticamente cuando la videocámara se deja inactiva durante más de 10 minutos, después de haberla ajustado en la modalidad Camera (sin ninguna cinta en la videocámara).
- Si pulsa otros botones (FADE, BLC, PHOTO, EASY.Q) durante la demostración, ésta se detiene temporalmente y se reanuda al cabo de 10 minutos si no se utiliza ninguna otra función.
- Si la función NITE PIX está activada, la función de demostración no está operativa.

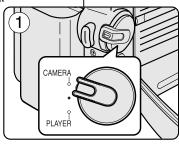

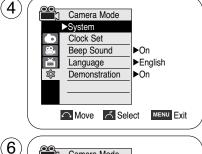

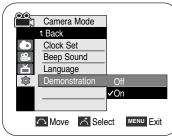

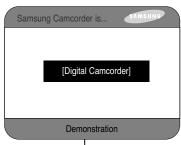



Display Menu Setting

Adjusting the LCD Screen

- This function works in Camera/Player/M.Cam/M.Player modes.
- Your Camcorder is equipped with a 2.36 inch colour Liquid Crystal Display(LCD) screen, which enables you to view what you are recording or playing back directly.
- Depending on the conditions under which you are using the Camcorder (indoors or outdoors for example), you can adjust;
 - LCD Bright
 - LCD Colour
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- Set the Mode switch to TAPE or MEMORY CARD. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select Display, then press the Menu selector.
- Move the Menu selector to the left or right to select the item you want to adjust (LCD Bright or LCD Colour), then press the Menu selector.
- Move the Menu selector to the left or right to adjust the value of the selected item (LCD Bright or LCD Colour), then press the Menu selector.
 - You can set values for LCD Bright and LCD Colour between 0~35.
- 7. To exit, press the **MENU** button.
 - LCD Bright & LCD Colour functions do not affect the brightness and colour of the image to be recorded.



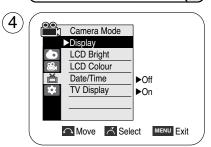

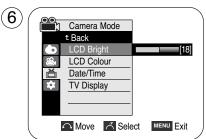

Ajuste del menú Display <Pantalla>

Ajuste de la pantalla LCD

- ❖ Esta función está operativa en las modalidades Camera/Player/M.Cam/M.Player.
- La videocámara dispone de una pantalla de cristal líquido (LCD) en colour de 2,36 pulgadas que permite ver lo que se está grabando o reproducir directamente.
- Según las condiciones de grabación en las que utilice la videocámara (por ejemplo exteriores o interiores), es posible ajustar:
 - El brillo de la LCD
- El colour de la LCD
 - Coloque el interruptor Power en CAMERA o PLAYER.
 - Coloque el interruptor Mode en TAPE o MEMORY CARD. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - Mueva el elector de menú a la izquierda o a la derecha hasta seleccionar Display <Pantalla> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la opción que desee ajustar (LCD Bright <Brillo LCD> o LCD Colour <Colour de LCD>) y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la opción que desee ajustar (LCD Bright <Brillo LCD> o LCD Colour <Colour de LCD>) y pulse el Selector de menú.
 - Puede definir los valores de LCD Bright <Brillo LCD> y
 LCD Colour <Colour de LCD> entre 0 y 35.
 - 7. Para salir, pulse el botón **MENU**.
 - Las funciones LCD Bright <Brillo de LCD> y LCD Colour <Colour de LCD> no afectan al brillo ni al color de la imagen grabada.



Display Menu Setting

Displaying the Date/Time

- ❖ The Date/Time function works in Camera/Player/M.Cam/M.Player modes.
- ❖ The date and time are automatically recorded on a special data area of the tape.
- Set the Power switch to CAMERA or PLAYER.
- 2. Set the **Mode** switch to **TAPE** or **MEMORY CARD**. (VP-D353(i)/D354(i)/D355(i) only)
- Press the MENU button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select Display, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select Date/Time, then press the Menu selector.
- 6. Move the **Menu selector** to the left or right to select the display type of the Date/Time, then press the Menu selector.
 - Display type of the Date/Time: Off, Date, Time, Date&Time.
- 7. To exit, press the **MENU** button.

[Notes]


- The Date/Time will read 00:00 1.JAN.2005 in the following conditions.
 - During playback of a blank section of a tape.
 - If the tape was recorded before setting the Date/Time in the Camcorder.
 - When the Lithium battery becomes weak or dead.
- Before you use the Date/Time function, you must set the clock. See Setting the Clock on page 27.

Ajuste del menú Display <Pantalla>

Visualización de fecha y hora

- ♣ La función Date/Time <Fecha/Hora> está operativa en las modalidades Camera/Player/M.Cam/M.Player.
- ♣ La fecha y la hora se graban automáticamente en una zona especial de la cinta.



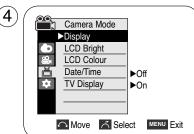

- (6) Camera Mode LCD Bright LCD Colour
 - Date/Time TV Display

- 1. Coloque el interruptor **Power** en **CAMERA** o **PLAYER**.
- 2. Coloque el interruptor **Mode** en **TAPE** o **MEMORY** CARD. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- 4. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Display <Pantalla> y pulse el Selector de menú.
- 5. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Date/Time <Fecha/Hora> y pulse el Selector de menú.
- 6. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar el tipo de visualización de la fecha y hora y pulse el Selector de menú.
 - Tipo de visualización de la fecha y hora: Off <Des.>. Date <Fecha>, Time <Hora>, Date&Time <Fecha-Hora>.
- 7. Para salir, pulse el botón MENU.


- La fecha y hora mostrará 00:00 1.JAN.2005 en las siguientes condiciones.
 - Durante la reproducción de una parte de la cinta que no esté grabada.
 - Si la cinta fue grabada antes de introducir la fecha y hora en la memoria de la cámara.
 - Cuando la pila de litio está débil o descargada.
- Antes de utilizar la función de fecha y hora, debe ajustar el reloj. Consulte "Ajuste del reloj" en la página 27.





Display Menu Setting

Setting the TV Display

- ❖ The TV Display function works in Camera/Player/M.Cam/M.Player modes.
- ❖ You can select the output path of the OSD (On Screen Display).
 - Off: The OSD appears in the LCD screen and Viewfinder only.
 - On: The OSD appears in the LCD screen, Viewfinder and TV.
 - Use the DISPLAY button located at the left side of the Camcorder to turn the OSD on/off on the LCD screen /Viewfinder/TV.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- Set the Mode switch to TAPE or MEMORY CARD. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Display**, then press the **Menu selector**.
- 5. Move the **Menu selector** to the left or right to select **TV Display**, then press the **Menu selector**.
- To activate TV Display function, move the Menu selector to the left or right to select On or Off, and then press the Menu selector.
- 7. To exit, press the **MENU** button.

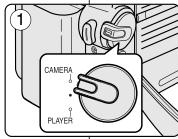

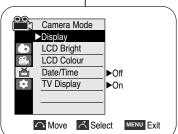

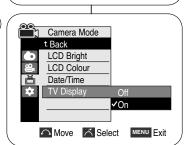

(6)

Ajuste del menú Display <Pantalla>

Ajuste de la visualización del TV

- La función TV Display <Pantalla TV> funciona en las modalidades Camera/Player/M.Cam/M.Player.
- Puede seleccionar la vía de salida de la OSD (presentación en pantalla).
 - Off (Des.): la OSD sólo aparece en la pantalla LCD y en el visor.
 - On (Actv.): la OSD aparece en la pantalla LCD, en el visor y en el TV.
 - Use el botón DISPLAY, que se encuentra en la parte izquierda de la videocámara para activar o desactivar la OSD en la pantalla LCD, el visor o el TV.
 - Coloque el interruptor Power en CAMERA o PLAYER.
 - Coloque el interruptor Mode en TAPE o MEMORY CARD. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Display <Pantalla> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar TV Display <Pantalla TV> y pulse el Selector de menú.
 - Para activar la función TV Display <Pantalla TV>, mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar On <Actv.> u Off <Des.> y pulse el Selector de menú.
 - 7. Para salir, pulse el botón **MENU**.



Basic Recording

Using the Viewfinder

- In the PLAYER mode, the Viewfinder will work when the LCD screen is closed.
- ❖ In the CAMERA mode, the Viewfinder will work when the LCD screen is closed or rotated counterclockwise 180°.

Adjusting the Focus

The focus adjustment knob of the Viewfinder enables individuals with vision problems to see clearer images.

- 1. Close the LCD screen and pull out the Viewfinder.
- 2. Use the focus adjustment knob of the Viewfinder to focus the picture.

[Notes]

- Viewing the sun or any strong light source through the Viewfinder for a prolonged period may be harmful, or cause temporary impairment.
- The Viewfinder will work either in PLAYER mode with LCD screen closed or in CAMERA mode with LCD screen closed or facing the front.

Grabación básica

Uso del Visor


- En la modalidad PLAYER, el visor estará operativo cuando se cierre la pantalla LCD.
- ♣ En la modalidad CAMERA, el visor estará operativo cuando se cierre la pantalla LCD o se gire en sentido contrario al horario.

Ajuste del enfoque

El botón de ajuste de enfoque del visor permite a personas con problemas de vista ver las imágenes más claras.

- 1. Cierre la pantalla LCD y extraiga el visor.
- 2. Para enfocar una imagen utilice el botón de ajuste de enfoque del visor.


- La luz del sol o cualquier fuente de luz intensa a través del visor durante tiempo prolongado puede ser perjudicial o causar problemas de visión temporales.
- El visor estará operativo en la modalidad de reproducción con la pantalla LCD cerrada o en la modalidad de cámara con la pantalla LCD cerrada o colocada hacia el frente.

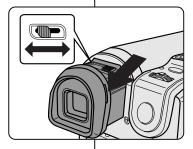


Basic Recording

Inserting and Ejecting a Cassette

- When inserting a tape or closing the cassette compartment, do not apply excessive force.
 - As it may cause a malfunction.
- Do not use any tape other than Mini DV cassettes.
- Connect a power source and slide the TAPE EJECT switch.
 - The cassette door opens automatically.
- Insert a tape into the cassette compartment with the tape window facing outward and the protection tab toward the top. (Inserting a Cassette)
 - Remove the cassette tape, which is automatically ejected by pulling the cassette out. (Ejecting a Cassette)
- Press the area marked PUSH on the cassette door until it clicks into place.
 - Be careful to keep the hand strap away from the cassette door when closing it. Closing the cassette door with the hand strap incide may
 - cassette door with the hand strap inside may cause a damage to the set.
 - The cassette is loaded automatically.

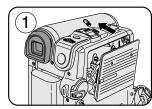

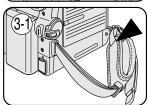

a damage to the set.

[Note]

When you have recorded something that you wish to keep, you can protect it so that it will not be accidentally erased.

a. Protecting a tape:

Push the safety tab on the cassette so that the hole is uncovered.

b. Removing the tape protection:

If you no longer wish to keep the recording on the cassette, push the safety tab back so that it covers the hole.


How to store a tape

- a. Avoid places with magnets or magnetic interference.
- b. Avoid humidity and dust prone places.
- Keep the tape in an upright position and avoid storing it in direct sunlight.
- d. Avoid dropping or knocking your tapes.

Grabación básica

Introducción y expulsión de la cinta

- Cuando introduzca la cinta o cuando cierre el compartimento no aplique una excesiva fuerza.
- podría hacer que la videocámara no funcionara bien.
- No utilice otro tipo de cinta que no sea casete Mini DV.

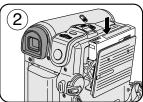




- 1. Enciéndalo y deslice el interruptor **TAPE EJECT**.
 - La puerta del casete se abre automáticamente.
- Introduzca la cinta en el compartimento con la ventanilla hacia fuera y la pestaña de protección hacia arriba. (Introducción de una cinta.)
 - Retire la cinta de casete, la cual se expulsa automáticamente al tirar de la misma. (Expulsión de una cinta.)
- 3. Empuje la zona que contiene la palabra **PUSH** en la puerta del casete hasta que emita un "clic".
 - Al cerrar, tenga cuidado de que la correa no se introduzca en la puerta del casete. Cerrar la puerta del casete con la correa en su interior puede causar daños en el equipo.
 - La cinta se carga automáticamente.

[Nota]

Cuando haya grabado material que desee conservar, puede protegerlo de manera que no se borre accidentalmente.

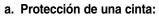


Coloque la pestaña de protección de la cinta de manera que el orificio quede descubierto.


b. Desprotección de la cinta:

Si no desea conservar la grabación en la cinta, coloque la pestaña de seguridad de forma que cubra el orificio.

Cómo guardar una cinta

- a. Evite los lugares donde haya interferencias magnéticas o que contengan imanes.
- b. Evite los lugares expuestos a la humedad o al polvo.
- Guarde las cintas en posición vertical y manténgalas alejadas de la acción directa del sol.
- d. Evite que las cintas se golpeen o se caigan al suelo.

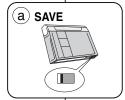

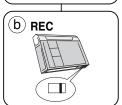



ENGLISH

Basic Recording

ESPAÑOL

Grabación básica

grabación.

página 18.)

Hints for Stable Image Recording

- While recording, it is very important to hold the Camcorder correctly.
- Fix the lens cover firmly by clipping it to the hand strap. (see page 18)

Recording with the LCD Screen

- 1. Hold the Camcorder firmly using the hand strap.
- 2. Place your right elbow against your side.
- 3. Place your left hand under or beside the LCD screen to support and adjust it.
 - Do not touch the built-in microphone.
- 4. Choose a comfortable, stable position for the shots that you are taking.
 - You can lean against a wall or on a table for greater stability. Do not forget to breathe gently.
- 5. Use the LCD frame as a guide to determine the horizontal plane.
- 6. Whenever possible, use a tripod.

Recording with the Viewfinder

- 1. Hold the Camcorder firmly using the hand strap.
- Place your right elbow against your side.
- 3. Place your left hand under the Camcorder to support it. Be sure not to touch the built-in microphone.
- 4. Choose a comfortable, stable position for the shots that you are taking.
 - You can lean against a wall or on a table for greater stability.
- 5. To view an object through the Viewfinder, pull it out until you hear the click sound. Excessive force may cause damage to the Viewfinder.
- 6. Place your eye firmly against the Viewfinder eyecup.
- 7. Use the Viewfinder frame as a guide to determine the horizontal plane.
- 8. Whenever possible, use a tripod.



Grabación utilizando la pantalla LCD

Consejos para la grabación estable de imágenes


❖ Es muy importante sujetar la videocámara correctamente durante la

❖ Fije bien la tapa del objetivo acoplándola a la empuñadura. (Consulte la

- 1. Sostenga firmemente la videocámara con la ayuda de la empuñadura.
- 2. Apoye el codo derecho contra el cuerpo.
- 3. Coloque la mano izquierda debajo o al lado de la pantalla LCD para sujetarla y ajustarla.
 - Asegúrese de no tocar el micrófono incorporado.
- 4. Adopte una posición cómoda y estable para grabar. Para una mayor estabilidad puede apoyarse en una pared o una mesa.
 - Respire tranquilamente.
- 5. Use el marco de la pantalla LCD como quía para determinar el plano horizontal.
- 6. Utilice un trípode siempre que sea posible.

Grabación utilizando el visor

- 1. Sostenga firmemente la videocámara con la ayuda de la empuñadura.
- 2. Apoye el codo derecho contra el cuerpo.
- 3. Coloque la mano izquierda debajo de la videocámara para sujetarla. Asegúrese de no tocar el micrófono incorporado.
- 4. Adopte una posición cómoda y estable para grabar. Para una mayor estabilidad puede apoyarse en una pared o una mesa.
- 5. Para ver un objeto a través del visor, tire del visor hasta que emita un "clic". No haga demasiada fuerza, podría estropear el visor.
- 6. Coloque el ojo firmemente contra el visor.
- 7. Use el marco del visor como guía para determinar el plano horizontal.
- 8. Utilice un trípode siempre que sea posible.

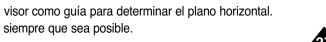

Basic Recording

Various Recording Techniques

In some situations different recording techniques may be required for more dramatic results.

1. General recording.

2. Downward recording.

Making a recording with a top view of the LCD screen.

3. Upward recording.


Making a recording viewing the LCD screen from below.

4. Self recording.


Making a recording viewing the LCD screen from the front.

5. Recording with the Viewfinder.

In circumstances where it is difficult to use the LCD screen, the Viewfinder can be used as a convenient alternative.

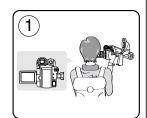



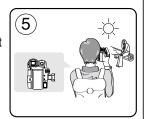


[Note]

Please rotate the LCD screen carefully as excessive rotation may cause damage to the inside of the hinge that connects the LCD screen to the Camcorder.


Grabación básica

Técnicas diversas de grabación

En algunos casos son necesarias distintas técnicas de grabación para obtener mejores resultados.

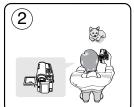

- 1. Grabación en general.
- **2. Grabación desde abajo.**Grabación mirando la pantalla LCD desde arriba.
- **3. Grabación desde arriba.**Grabación mirando la pantalla LCD desde abajo.

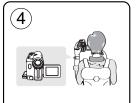

4. Autograbación.

Grabación mirando la pantalla LCD desde el frente.

5. Grabación empleando el visor.

En casos en los que sea difícil emplear la pantalla LCD, el visor puede resultar una alternativa de gran utilidad.

[Nota]

Gire la pantalla LCD con cuidado, ya que si la gira demasiado se puede dañar el interior de la bisagra que une la pantalla LCD a la videocámara.



Basic Recording

Making your First Recording


- Connect a power source to the Camcorder. (see page 20)
 (A Battery pack or a AC Power adapter) Insert a cassette.(see page 36)
- 2. Remove the Lens cover.
- 3. Set the **Power** switch to **CAMERA**.
 - Open the LCD screen.
 - Set the Mode switch to TAPE.
 (VP-D353(i)/D354(i)/D355(i) only)
 Make sure that STBY is displayed.
 - If the write protection tab of the cassette is open(set to save), STOP and Protection! will be displayed.
 - Release the write protection tab to record.
 - Make sure the image you want to record appears on the LCD screen or Viewfinder.
 - Make sure the battery level indicates that there is enough remaining power for your expected recording time.
- 4. To start recording, press the **Start/Stop** button.
 - REC is displayed on the LCD screen.
 To stop recording, press the Start/Stop button again.
 - STBY is displayed on the LCD screen.

[Note]

Detach the Battery pack when you are finished recording to prevent unnecessary battery power consumption.

Grabación básica

Primera grabación

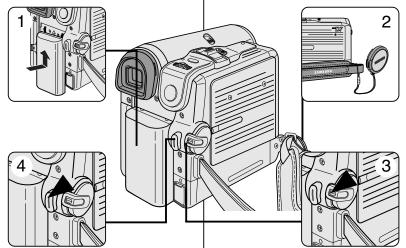

- Conecte a la cámara a una fuente de alimentación. (Consulte la página 20.) (Una batería o un adaptador de CA.) Introduzca un casete. (Consulte la página 36.)
- 2. Retire la tapa del objetivo.
- Coloque el interruptor Power en CAMERA.
 - Abra la pantalla LCD.
 - Coloque el interruptor **Mode** en **TAPE.** (Sólo VP-D353(i)/D354(i)/D355(i)) Asegúrese de que aparece **STBY**.
- Si la pestaña de protección del casete está abierta (protegida), aparecerá STOP and Protection! < Protección!>.
 - Libere la pestaña de protección contra escritura para grabar.
- Asegúrese de que la imagen que desea grabar aparezca en la pantalla LCD o en el visor.
- Asegúrese de que el nivel de la batería indique que tiene suficiente energía para grabar durante el tiempo deseado.
- 4. Pulse el botón **Start/Stop** para empezar a grabar.
 - Aparece REC en la pantalla LCD.
 Para detener la grabación, pulse de nuevo el botón Start/Stop.
 - Aparece STBY en la pantalla LCD.

[Nota]

Retire la batería al terminar de grabar para evitar un consumo innecesario de la misma.

Basic Recording

Using EASY.Q Mode (for Beginners)

- The EASY.Q mode works only in Camera mode.
- The EASY.Q mode allows a beginner to easily make good recordings.
- 1. Set the **Power** switch to **CAMERA**.
- 2. Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. By pressing the EASY.Q button, all functions on the Camcorder will be set to off and the recording settings will be set to the following basic modes:
 - Battery level, recording mode, counter, date/time, and DIS (﴿) will be displayed.
 - The word **EASY.Q** will appear on the LCD screen at the same time. However, the Date/Time will only be seen if it has been previously set. (see page 33)
- Press the Start/Stop button to start recording.
 Recording will begin using the basic automatic settings.
- 5. Press the **EASY.Q** button again in the **STBY** mode and then turn the EASY.Q mode off.
 - The EASY.Q function will not turn off while you are recording.
 - The camcorder will return to the settings that were set prior to activating EASY.Q mode.

[Notes]

- In EASY.Q mode, certain functions are not available, such as Menu, BLC, Manual focus.
 If you want to use these functions, you must first tun the
 - EASY.Q mode off.
- The EASY.Q mode settings are deleted when the Battery pack is removed from the Camcorder and must be reset when the Battery pack is replaced.
- EASY.Q mode will not turn off during a recording.
- Taking a photo image using the PHOTO button while EASY.Q is set releases DIS function.
- Digital Zoom, COLOR NITE SHUTTER or Digital Effect is not available in the EASY.Q mode.

Grabación básica

Utilización de la modalidad EASY.Q (para principiantes)


- ♣ La función EASY.Q sólo está operativa en la modalidad Camera.
- La modalidad EASY.Q (uso sencillo) permite a los principiantes obtener buenas grabaciones con facilidad.




- 2. Coloque el interruptor **Mode** en **TAPE**. (Sólo VP-D353(i)/D354(i)/D355(i))
- Al pulsar el botón EASY.Q, todas las funciones de la cámara se desactivarán y los ajustes de grabación se definirán en los siguientes modos básicos:
 - Aparecerá el nivel de la batería, el modo de grabación, el contador, la fecha y hora y DIS ([™]).
 - Al mismo tiempo aparecerá EASY.Q en la pantalla LCD. No obstante, la función de fecha y hora sólo se verá si se ha ajustado previamente. (Consulte la página 33.)
- Pulse el botón Start/Stop para comenzar la grabación. La grabación empieza con los ajustes automáticos básicos.
- Pulse de nuevo el botón EASY.Q en la modalidad STBY para desactivar la modalidad EASY.Q.
 - La función EASY.Q se desactivará cuando esté grabando.
 - La videocámara volverá a los ajustes realizados antes de activar la modalidad EASY.Q.



- En la modalidad EASY.Q, algunas funciones no están disponibles, como Menu, BLC y enfoque manual.
 Si desea usar estas funciones primero deberá desactivar la modalidad EASY.Q.
- Los ajustes de la modalidad EASY.Q se borran cuando se quita la batería de la videocámara y deberán ajustarse de nuevo al volver a colocarla.
- La modalidad EASY.Q no se desactivará durante la grabación.
- Hacer una foto con el botón PHOTO mientras EASY.Q está ajustada, sólo libera la función DIS.
- Digital Zoom <Zoom digital>, COLOR NITE SHUTTER o Digital Effect <Efecto digital> no están disponibles en la modalidad EASY.Q.

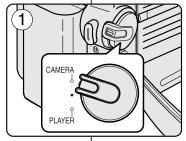

3

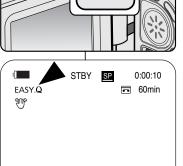

EASY.Q



Basic Recording

When a cassette is loaded and the Camcorder is left in the STBY mode for more than 5 minutes without being used, it will switch off automatically. To use it again, press the Start/Stop button or set the Power switch to Off and then back to CAMERA.

This auto power off feature is designed to save battery power.

Grabación básica

Si se carga un casete en la videocámara y ésta se deja en la posición STBY durante más de cinco minutos sin usarla, se apagará automáticamente. Para usarla de nuevo, pulse el botón Start/Stop o coloque el interruptor Power en la posición Off y luego en CAMERA.

Esta función de apagado automático está diseñada para ahorrar energía de la batería.


Record Search (REC SEARCH)

- You can view a recording using the REC SEARCH +, function in STBY mode.
 - **REC SEARCH** enables you to play the recording backwards and **REC SEARCH** + enables you to play it forwards, for as long as you keep each button pressed down.
- If you press the REC SEARCH button in STBY mode, your Camcorder will play in reverse for 3 seconds and return to the original position automatically.

[Note]

Mosaic shaped distortion may appear on the screen while in Record Search mode.



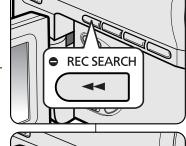



Búsqueda de grabación (REC SEARCH)

- Puede ver una grabación utilizando la función REC SEARCH +, - en la modalidad STBY.
 REC SEARCH - permite reproducir la grabación hacia atrás y REC SEARCH + permite reproducir hacia adelante, durante el tiempo que mantenga pulsado el respectivo botón.
- Si pulsa el botón REC SEARCH en la modalidad STBY, la videocámara reproducirá hacia atrás durante tres segundos y volverá automáticamente a la posición original.

[Nota]

Enl la modalidad de búsqueda de grabación es posible que la imagen se distorsione y forme una especie de mosaico.




Basic Recording


Setting the Zero Memory (VP-D353(i)/D354(i)/D355(i) only)

- * The ZERO MEMORY function works in both Camera and Player modes.
- ❖ You can mark a point on a tape that you want to return to following playback.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- 2. Set the **Mode** switch to **TAPE**.
- Press the ZERO MEMORY button on the remote control before the recording or during playback at the point where you wish to return.
 - The time code is changed to a tape counter that is set to ZERO MEMORY with the ▶ 0:00:00 (ZERO MEMORY indicator).
 - If you want to cancel the ZERO MEMORY function, press the ZERO MEMORY button again.
- 4. Finding the zero position.
 - When you have finished playback, fast forward or rewind the tape in stop mode.
 - The tape stops automatically when it reaches the zero position.
 - When you have finished recording, set the **Power** switch to **PLAYER** and press the **◄** (REW) button.
 - The tape stops automatically when it reaches the zero position.
- 5. The tape counter with the [(ZERO MEMORY indicator) disappears from the display and the tape counter is changed to the time code.

[Notes]

- In the following situations, ZERO MEMORY mode may be canceled automatically:
 - At the end of the section marked with the ZERO MEMORY function.
 - When the tape is ejected.
 - When you remove the Battery pack or power supply.
- The ZERO MEMORY may not function correctly where there is a break between recordings on the tape.

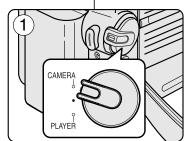

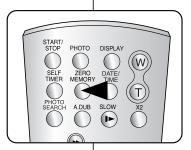

Grabación básica

Ajuste de memoria cero (Sólo VP-D353(i)/D354(i)/D355(i))

- La función ZERO MEMORY < Memoria cero> funciona en las modalidades Camera y Player.
- Esta función permite marcar un punto de la cinta al que quiera regresar después para ver la grabación.
 - 1. Coloque el interruptor Power en CAMERA o PLAYER.
 - 2. Coloque el interruptor Mode en TAPE.
 - Pulse el botón ZERO MEMORY del mando a distancia durante la reproducción o antes de grabar en el punto al que desee regresar.
 - El código de tiempo se convierte en un contador de cinta que se ajusta en ZERO MEMORY con el indicador ▶ 0:00:00 (indicador de ZERO MEMORY).
 - Si desea cancelar la función de memoria cero, pulse de nuevo el botón ZERO MEMORY.
 - Búsqueda de la posición cero.
 - Cuando haya acabado de ver la cinta, adelántela o rebobínela. La cinta se detiene automáticamente cuando llega a la posición cero.
 - Cuando haya acabado de grabar, coloque el interruptor Power en la posición PLAYER y pulse el botón ◀◀ (REW).

La cinta se detiene automáticamente cuando llega a la posición cero.

5. El contador de la cinta con (indicador de ZERO MEMORY) desaparece de la pantalla y vuelve a aparecer el código de tiempos.

- La memoria cero se puede cancelar de manera automática en los siguientes casos:
 - Al final de una sección marcada con la función ZERO MEMORY.
 - Al extraer la cinta de la videocámara.
 - Al desconectar la videocámara o guitar la batería.
- Es posible que la función ZERO MEMORY no funcione de manera adecuada cuando haya un espacio entre grabaciones de la cinta.




Basic Recording


Self Record using the Remote Control (VP-D353(i)/D354(i)/D355(i) only)


- ❖ The SELF TIMER function works only in Camera mode.
- When you use the Self Timer function on the remote control, the recording begins automatically in 10 seconds.
- 1. Set the **Power** switch to **CAMERA**.
- 2. Set the Mode switch to TAPE.
- Press the SELF TIMER button until the appropriate indicator is displayed in the LCD screen.
- 4. Press the **Start/Stop** button to start the timer.
 - Self Timer starts counting down from 10 with a beep sound.
 - In the last one second of the countdown, the beep sound gets faster, then recording starts automatically.
 - If you want to cancel the Self Timer function before recording, press the **SELF TIMER** button.
- 5. Press the **Start/Stop** button again when you wish to stop recording.

[Notes]

- Do not obstruct the remote control sensor by putting obstacles between the remote control and Camcorder.
- The remote control range is 4 ~5m (13 ~17 ft).
- The effective remote control angle is up to 30 degrees left /right from the centre line.
- Using a tripod is recommended for delayed recording.

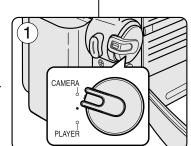

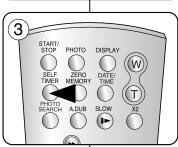

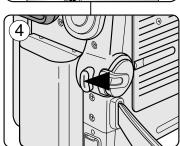

Grabación básica

Grabación automática con el mando a distancia (Sólo VP-D353(i)/D354(i)/D355(i))

- La función SELF TIMER <Auto temporizador> sólo está operativa en la modalidad Camera.
- Cuando se emplea la función del temporizador del mando a distancia, la grabación se pone en marcha automáticamente al cabo de 10 segundos.
 - 1. Coloque el interruptor Power en CAMERA.
 - 2. Coloque el interruptor Mode en TAPE.
 - 3. Pulse el botón **SELF TIMER** hasta que aparezca en el visor el indicador correspondiente.
 - 4. Pulse el botón **Start/Stop** para iniciar el temporizador.
 - El temporizador inicia la cuenta atrás a partir de 10 con un pitido.
 - En el último segundo de la cuenta atrás, el pitido se acelera y la grabación se inicia automáticamente.
 - Para cancelar la función de temporizador antes de grabar, pulse el botón SELF TIMER.
 - 5. Pulse el botón **Start/Stop** de nuevo cuando desee detener la grabación.

- No obstaculice el sensor del mando a distancia colocando obstáculos entre el mando a distancia y la videocámara.
- El alcance del mando a distancia es de 4~5 m (13~17 pies).
- El ángulo eficaz del mando a distancia es de hasta 30 grados a la izquierda /derecha desde la línea central.
- Para disparos con retardo se recomienda el uso de un trípode.



Basic Recording

Zooming In and Out

- ❖ The Zoom function works in both Camera and M.Cam modes.
- Zooming is a recording technique that lets you change the size of the subject in a scene.
- You can zoom using variable zoom speeds.
- Use these features for different shots. Please note that over-use of the Zoom feature can lead to unprofessional looking results and a reduction of battery usage time.
- 1. Move the Zoom lever slightly for a gradual zoom, move it further for a high-speed zoom.
 - Your zooming is monitored on the OSD.
- 2. T(Telephoto) side: Subject appears closer.
- 3. W(Wide angle) side: Subject appears farther away.
 - You can record a subject that is about 10mm (about 0.5 inch) away from the lens surface in the Wide position.

TELE WIDE T

Grabación básica

Acercamiento y alejamiento de las imágenes

- ♣ La función Zoom está operativa en las modalidades Camera y M.Cam.
- El uso del zoom es una técnica de grabación que permite modificar el tamaño del encuadre de las escenas.
- El zoom se puede emplear con velocidades variables.
- Utilice el zoom para obtener imágenes variadas. Si abusa del zoom el resultado será imágenes poco profesionales. Además, el tiempo de uso de la batería se reduce.
 - Mueva la palanca del zoom lentamente para obtener un efecto de zoom gradual. Muévalo más rápido si desea un efecto rápido.
 - El efecto del zoom se puede seguir por la pantalla OSD.
 - 2. T (teleobjetivo): el objeto se ve más cerca.
 - 3. W (gran angular): el objeto se ve más lejos.
 - Puede grabar un objeto que se encuentre a unos 10 mm (unas 0,5 pulgadas) de la superficie del objetivo en la posición W.

Using the Tele Macro

- ❖ Tele Macro Function works in both Camera and M.Cam mode.
- Effective focal distance in tele macro mode is 50Cm (19.7inches)~100Cm (39.4 inches).
- 1. Press the MACRO button.
 - Tele Macro Icon () will be displayed.
- 2. If you want to cancel the Tele Macro function, press the **MACRO** button again.


[Notes]

- When recording in Tele Macro mode, the focus speed may be slow.
- When you operate the Zoom function in the Tele Macro mode, the recording subject may be out of focus.
- Use a tripod to prevent hand shake in the Tele Macro mode.
- Avoid shadows when recording in the Tele Macro mode.
- As the distance to the subject decreases, focusing area narrows.
- When you can not get proper focus, use the Zoom lever.

Utilización de la Macro telescópica

- ❖ La función de macro telescópica está operativa en las modalidades Camera y M.Cam.
- ❖ Distancia focal efectiva en modalidad de macro telescópica es de 50cm (19,7 pulgadas)~100cm (39,4 pulgadas).
 - 1. Pulse el botón MACRO.
 - Aparecerá el icono de teleobjetivo (🔀).
 - Para cancelar la función de macro telescópica, pulse de nuevo el botón MACRO.

- Al grabar en la modalidad de macro telescópica, es posible que la velocidad de enfoque se ralentice.
- Cuando utilice la función Zoom en la modalidad de macro telescópica, es posible que el objeto de la grabación esté desenfocado.
- Utilice un trípode para evitar las sacudidas de la mano en modalidad de macro telescópica.
- Evite sombras al grabar en la modalidad de macro telescópica.
- Conforme disminuya la distancia al objeto, se reduce el área de enfoque.
- Cuando no pueda obtener un enfoque apropiado, utilice la palanca del Zoom.

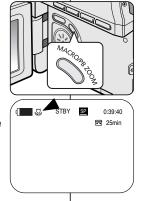



Basic Recording

Using the Fade In and Out

- ♣ The FADE function works only in Camera mode.
- You can give your recording a professional look by using special effects such as fade in at the beginning of a sequence or fade out at the end of a sequence.

(5)

6

To Start Recording

- 1. Set the **Power** switch to **CAMERA**.
- Set the Mode switch to TAPE. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Before recording, hold down the **FADE** button.
 - The picture and sound gradually disappear (fade out).
- Press the Start/Stop button and at the same time release the FADE button.
 Recording starts and the picture and sound gradually appear (fade in).

To Stop Recording (use Fade In/Fade Out)


- When you wish to stop recording, hold down the FADE button.
 - The picture and sound gradually disappear (fade out).
- When the picture has disappeared, press the **Start/Stop** button to stop recording.

Grabación básica

STBY SP 0:00:30

Utilización de aparición y desaparición gradual

- ♣ La función FADE sólo está operativa en la modalidad Camera.
- Puede dar a sus grabaciones un aspecto profesional empleando efectos especiales como la aparición gradual de la imagen (fade-in) al principio de una secuencia o su desaparición gradual (fade-out) al final de la secuencia.

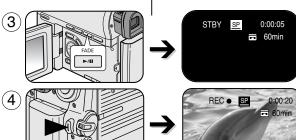

Comienzo de la grabación

- 1. Coloque el interruptor **Power** en **CAMERA**.
- Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Antes de grabar, mantenga pulsado el botón **FADE**.
 - La imagen y el sonido desaparecen gradualmente (fade out).
- Pulse el botón **Start/Stop** y al mismo tiempo suelte el botón **FADE**.
 Empieza la grabación y la imagen y el sonido aparecen gradualmente (fade in).

Detención de la grabación (con la función Fade In/Fade Out)


- 5. Cuando quiera detener la grabación, mantenga pulsado el botón **FADE.**
 - La imagen y el sonido desaparecen gradualmente (fade out).
- 6. Cuando la imagen haya desaparecido, pulse el botón **Start/Stop** para detener la grabación.

a. Fade Out

(Approx. 4 seconds)

b. Fade In

(Approx. 4 seconds)

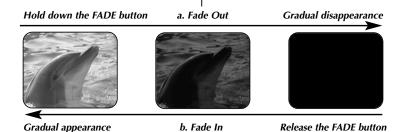

a. Fade Out

(Aprox. 4 segundos)

b. Fade In

(Aprox. 4 segundos)



Basic Recording

Using Back Light Compensation Mode (BLC)


- ♣ BLC works in both Camera and M.Cam modes.
- Back lighting exists when the subject is darker than the background:
 - The subject is in front of a window.
 - The person to be recorded is wearing white or shiny clothes and is placed against a bright background; the person's face is too dark to distinguish his/her features.
 - The subject is outdoors and the background is overcast.
 - The light sources are too bright.
 - The subject is against a snowy background.



<BLC off>

Grabación básica

Utilización de la modalidad de compensación de la luz de fondo (BLC)

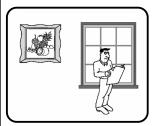


<BLC on>

- BLC está operativa en las modalidades Camera y M.Cam.
- Existe luz de fondo cuando el objeto que se va a grabar es más oscuro que el fondo:
 - Cuando el objeto está delante de una ventana.
 - Cuando se va a grabar a una persona que lleva ropa blanca o brillante y se encuentra frente a un fondo muy iluminado. En este caso su cara estará demasiado oscura para que se distingan sus facciones.
- Cuando el objeto se encuentra en el exterior y el fondo está nublado.
- Cuando la fuente de luz es muy intensa.
- Cuando el objeto se encuentra delante de un fondo nevado.

- 1. Set the **Power** switch to **CAMERA**.
- Set the Mode switch to TAPE or MEMORY CARD. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the BLC button.
 - BLC icon (ﷺ) will be displayed.
- 4. To exit BLC mode, press the BLC button again.
 - Each press of the BLC button toggles: Normal → BLC → Normal.

[Notes]

- When NITE PIX to set to ON, the BLC function does not work.
- The BLC function will not operate in EASY.Q mode.

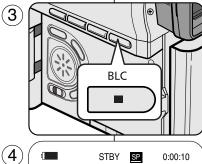



- 1. Coloque el interruptor **Power** en **CAMERA**.
- oloque el interruptor Mode en TAPE o MEMORY CARD. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Pulse el botón BLC.
 - Aparecerá el icono () will be displayed.
- 4. Para salir de la modalidad BLC, pulse de nuevo el botón **BLC**.
 - Cada pulsación del botón **BLC** cambia: Normal → BLC → Normal.

- Si la función Nite Pix está activada, la función BLC no está operativa.
- La función BLC no está operativa en la modalidad EASY.Q.

ENGLISH

Basic Recording

ESPAÑOL

Grabación básica

Using the Color Nite Shutter

- COLOR NITE SHUTTER function works only in Camera mode.
- ❖ Shutter speed can be controlled, allowing you to record slow moving objects.
- ❖ COLOR NITE SHUTTER function may produce a brighter image.
- 1. Set the **Power** switch to **CAMERA**.
- Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- Press the COLOR NITE SHUTTER button.
- 4. Each time you press the **COLOR NITE SHUTTER** button, shutter speed is changed to;
 - ► Color N. 1/25, Color N. 1/13 and off. (VP-D351(i)/D352(i) only)
 - ► Color N. 1/25, Color N. 1/13, Color N. 1/13 (() and off. (VP-D353(i)/D354(i)/D355(i) only)


[Notes]


- The COLOR NITE SHUTTER will not turn ON or OFF while you are recording.
- When using COLOR NITE SHUTTER the image takes on a slow motion like effect.
- When using the COLOR NITE SHUTTER function, the focus abjusts slowly and the white dots may appear on the screen, this is not a defect.
- COLOR NITE SHUTTER is not available while DIS, Photo image recording or EASY.Q is in use.
- Digital Zoom, Photo image recording,16:9 Wide, Emboss2,
 Pastel2, Mirror or Mosaic is not available in the COLOR NITE SHUTTER mode.
- If DIS or EASY.Q is set, COLOR NITE SHUTTER mode will be released.

Utilización del obturador nocturno de color

- La función COLOR NITE SHUTTER sólo está operativa en la modalidad Camera.
- Puede controlar la velocidad del obturador para grabar objetos que se mueven lentamente.
 - La función COLOR NITE SHUTTER puede producir una imagen más brillante.
 - 1. Coloque el interruptor **Power** en **CAMERA**.
 - Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón COLOR NITE SHUTTER.
 - Cada vez que pulse el botón COLOR NITE SHUTTER, la velocidad del obturador cambia a:
 - ► Color N. 1/25, Color N. 1/13 y off. (Sólo VP-D351(i)/D352(i))
 - ► Color N. 1/25, Color N. 1/13, Color N. 1/13(﴿) y off. (Sólo VP-D353(i)/D354(i)/D355(i))

- La función COLOR NITE SHUTTER no se podrá activar o desactivar mientras se graba.
- Cuando utiliza la función COLOR NITE SHUTTER, la imagen toma el efecto de una imagen a cámara lenta.
- Al utilizar la función COLOR NITE SHUTTER, el enfoque se ajusta lentamente y algunas veces los puntos blancos desaparecerán de la pantalla; no se trata de ningún fallo.
- COLOR NITE SHUTTER no está disponible mientras DIS, la grabación de imagen fotográfica o EASY.Q están en uso.
- Digital Zoom <Zoom digital>, la grabación de imágenes fotográficas, 16:9 Wide <16:9 Panorámica>, Emboss2 <Relieve2>, Pastel2, Mirror <Espejo> o Mosaic <Mosaico> no están disponibles en la modalidad COLOR NITE SHUTTER.
- Si se define DIS o EASY.Q, se liberará la modalidad COLOR NITE SHUTTER.

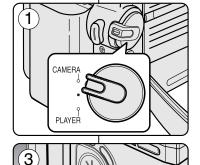

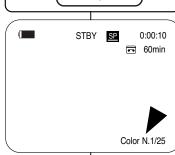



Basic Recording

Using the Color Nite Shutter with LED Light (VP-D353(i)/D354(i)/D355(i) only)

- * COLOR NITE SHUTTER function works only in Camera Mode.
- ❖ The LED light enables you to record a subject in dark places without sacrificing colour.
- ❖ The LED light can be used with COLOR NITE SHUTTER function only.
- 1. Set the **Power** switch to **CAMERA**.
- 2. Set the **Mode** switch to **TAPE**.
- 3. Press the COLOR NITE/LED LIGHT button until Color N. 1/13 () appears on the display.

[Notes]

- The COLOR NITE/LED LIGHT will not turn ON or OFF while you are recording.
- The range of the LED light is limited. (up to 6.6ft (2m))


Danger

- The LED light can become extremely hot.
- Do not touch it while in operation or soon after turning it off. otherwise serious injury may result.
- Do not place the Camcorder into the carrying case immediately after using the LED light, since it remains extremely hot for some time.
- Do not use near flammable or explosive materials.

Grabación básica

Utilización del obturador nocturno de color con el foco de la cámara (Sólo VP-D353(i)/D354(i)/D355(i))

- ❖ La función COLOR NITE SHUTTER sólo está operativa en la modalidad Camera.
- ❖ El foco de la cámara permite grabar un objeto en lugares oscuros sin sacrificar el colour.
- ❖ El foco de la cámara se puede utilizar únicamente con la función COLOR NITE SHUTTER.

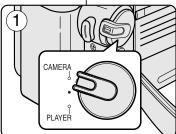


- 1. Coloque el interruptor Power en CAMERA.
- 2. Coloque el interruptor Mode en TAPE.
- 3. Pulse el botón COLOR NITE/LED LIGHT hasta que aparezca en pantalla Color N. 1/13 ().




- La función COLOR NITE/LED LIGHT <Color noche/LUZ LED> no se podrá activar o desactivar mientras se graba.
- El alcance del foco de la cámara es limitado. (Hasta 2 m (6,6 pies).)



- El foco de la cámara puede alcanzar temperaturas muy elevadas.
- No lo toque mientras se encuentre en funcionamiento o después de apagarlo. Si lo hace, podría producirle graves lesiones.
- No coloque la videocámara en su bolsa de transporte inmediatamente después de utilizar el foco de la cámara, ya que puede seguir a temperatura muy elevada durante un rato.
- No lo utilice cerca de materiales inflamables o explosivos.

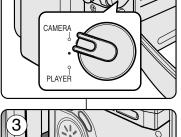

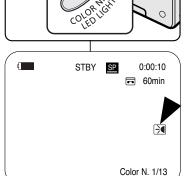



Basic Recording

Nite Pix (0 lux recording)

- ❖ The Nite Pix function works in both Camera and M.Cam modes.
- The Nite Pix function enables you to record a subject in darkness.
- 1. Set the **Power** switch to **CAMERA**.
- Set the Mode switch to TAPE or MEMORY CARD. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Slide the **NITE PIX** switch to **ON**.
 - Nite Pix indicator () appears on the LCD screen.
 - The infrared light is turned on automatically.
- To cancel the Nite Pix function, slide the NITE PIX switch to OFF.


[Notes]

- The maximum recording distance using the infrared light is about 3 m (about 10 feet).
- If you use the Nite Pix function in normal recording situations (ex. outdoors by day), the recorded picture may be tinted green.
- Nite Pix is not available while taking a photo image.
- In the Nite Pix mode, certain functions are not available, such as Exposure, White Balance, Program AE, Digital Effect and BLC.
- If focusing is difficult in the auto focus mode when using the Nite Pix function, focus manually.
- Do not cover the Infrared Light with your hand.
- Do not set the Nite Pix to ON in bright lighting. It might damage the CCD (Charge Coupled Device).


Grabación básica

Nite Pix (grabación con 0 lux)


- ❖ La función Nite Pix está operativa en las modalidades Camera y M.Cam.
- Esta función permite grabar objetos que se encuentren en lugares oscuros.

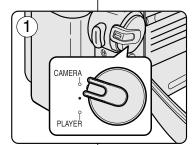

- 1. Coloque el interruptor **Power** en **CAMERA**.
- Coloque el interruptor Mode en TAPE o MEMORY CARD. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Deslice el interruptor NITE PIX a ON.
 - Aparece el indicador de Nite Pix () en la pantalla LCD.
 - La luz infrarroja (rayos invisibles) se enciende automáticamente.
- 4. Para cancelar la función Nite Pix, deslice el interruptor de **NITE PIX** a **OFF**.

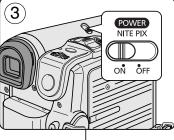

- La distancia máxima de grabación usando la luz de infrarrojos es de unos 3 m (10 pies).
- Si usa la función Nite Pix en situaciones normales de grabación (por ejemplo, exteriores durante el día), es posible que los coloures de la imagen grabada sean poco naturales.
- Nite Pix no está disponible mientras se toman imágenes fotográficas.
- En la modalidad Nite Pix, no se puede acceder a algunas funciones como White Balance <Balance de blanco>, Program AE <Programa AE>, Digital Effect <Efecto digital> y BLC.
- Si resulta difícil en enfoque en la modalidad de enfoque automática al utilizar la función Nite Pix, utilice el enfoque manual.
- No tape la luz de infrarrojos con la mano.
- No defina NITE PIX en ON con iluminación intensa. Podría estropear el CCD (dispositivo acoplado por carga).

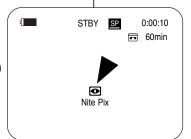

Basic Recording

Power Nite Pix

- ❖ The Power Nite Pix function works only in Camera Mode.
- The Power Nite Pix function can record a subject more brightly in darkness than the Nite Pix function.
- When you work in Power Nite Pix mode, the Power Nite Pix icon remains on the LCD screen.
- Power Nite Pix is not available while taking a photo image or EASY.Q is in use.
- 1. Set the **Power** switch to **CAMERA**.
- Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- Turn on the NITE PIX switch, and then press the COLOR NITE SHUTTER button.
- 4. Press the **COLOR NITE SHUTTER** button to set shutter speed.
 - When using Power Nite Pix, the image takes on a slow motion like effect.
 - The slow shutter function enables you to record a subject more brightly.
- Each time you press the COLOR NITE SHUTTER button, shutter speed is changed to Color N. 1/25, Color N. 1/13, Color N. 1/13 (→) and off.
- To cancel the Power Nite Pix function, press the COLOR NITE SHUTTER button to set to off and then turn off the NITE PIX switch.

[Notes]

- The Power Nite Pix function will not turn ON or OFF while you are recording.
- The maximum recording distance using the infrared light is about 3 m (about 10 feet).
- If you use the Power Nite Pix function in normal recording situations (ex. outdoors by day), the recorded picture may contain unnatural colours.
- In the Power Nite Pix mode, certain functions are not available, such as Exposure, White Balance, Program AE, Digital Effect, BLC, Digital Zoom and Manual Focus.


Grabación básica


Power Nite Pix


- ♣ La función Power Nite Pix sólo está operativa en la modalidad Camera.
- Esta función permite grabar objetos que se encuentren en lugares oscuros con mayor luminosidad que con la función Nite Pix.
- Si trabaja en la modalidad Power Nite Pix, el icono Power Nite Pix permanecerá en la pantalla LCD.
- Power Nite Pix no está disponible durante la grabación de imagen fotográfica o con EASY.Q en uso.
- 1. Coloque el interruptor Power en CAMERA.
- 2. Coloque el interruptor **Mode** en **TAPE**. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Encienda el interruptor NITE PIX y pulse el botón COLOR NITE SHUTTER.
 - Pulse el botón COLOR NITE SHUTTER para ajustar la velocidad del obturador.
 - Cuando utilice la función Power Nite Pix , la imagen toma el efecto de una imagen a cámara lenta.
 - La función Slow Shutter permite grabar objetos con mayor luminosidad.
 - 5. Cada vez que pulse el botón **COLOR NITE SHUTTER**, la velocidad del obturador cambia a Color N. 1/25, Color N. 1/13, Color N. 1/13 (►) y a desactivado.
 - Para cancelar la función Power Nite Pix, pulse el botón COLOR NITE SHUTTER para apagarlo y apague el interruptor NITE PIX.

[Notas]

- La función Power Nite Pix no se podrá activar o desactivar mientras se graba.
- La distancia máxima de grabación usando la luz de infrarrojos es de unos 3 m (10 pies).
- Si usa la función Power Nite Pix en situaciones normales de grabación (por ejemplo, exteriores durante el día), es posible que los coloures de la imagen grabada sean poco naturales.
- En la modalidad Power Nite Pix, no se puede acceder a algunas funciones como White Balance <Balance de blanco>, Program AE <Programa AE>, Digital Effect <Efecto digital>, BLC, Digital Zoom <Zoom digital> y Manual Focus <Enfoque manual>.

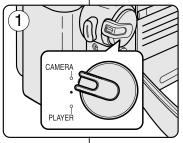

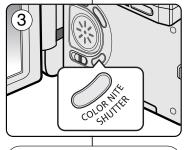

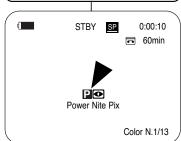

(4)





Advanced Recording

Use of various Functions

Setting menu items

Main	Sub Menu	Functions		Available mode					
Menu	Sub Menu	Functions	Camera	Player	M'Cam ①	M'Player ①	Page		
Camera	Program AE	Selecting the Program AE Function	~				63, 64		
	White Balance	Setting White Balance	~		~		59		
	Digital Effect	Setting the Digital special effect	~				65, 66		
	DIS	Selecting the Digital Image Stabilizing	~				61		
	Digital Zoom	Selecting Digital Zoom	~				67		
Tape	Photo Search	Searching pictures recorded in Tape		~			68		
	Photo Copy	Copying still images from a cassette to Memory card		~			105		
	Audio Select	Selecting the Audio playback channel		~			78		
Record	Rec Mode	Selecting the recording speed	~	√ ②			54		
	Audio Mode	Selecting Sound Quality for recording		~			55		
	Wind Cut	Minimizing wind noise	~	~			56		
	AV In/Out ②	Selecting the AV input/output		~			76		
Memory	Memory Type ③	Selecting the memory type		~	~	V	90		
1	Photo Quality	Selecting Image Quality		~	~		91, 92		
	M.Play Select	Selecting Storage Media (Photo, Movie) to playback				v	103, 104		
	Delete	Deleting Files				~	99, 100		
	Delete All	Deleting All files				V	99		
	Protect	Preventing Accidental Erasure				~	97, 98		
	Print Mark	Print images recorded on a Memory Card				V	108, 109		
	Сору То ③	Copying the image of Memory card to int. memory				~	107		
	Format	Formatting the Memory Card				~	101		
	File No.	File Naming Options			~		93		

- (1): VP-D353(i)/D354(i)/D355(i) only
- (2): VP-D351i/D352i/D353i/D354i/D355i only
- (3): VP-D354(i)/D355(i) only

Grabación avanzada

Utilización de las distintas funciones

Ajustes del menú

Menú	Submenú	Funciones	N	Página			
principal	Submenu	runciones	Camera	Player	M'Cam ①	M'Player ①	Pagina
Camera	Program Ae	Selección de la función Program AE	~				63, 64
	White Bal.	Ajuste del balance de blanco	~		~		59
	Efecto digital	Ajuste del efecto especial digital	~				65, 66
	DIS	Selección de la estabilización de la imagen digital	~				61
	Zoom Digital	Selección del zoom digital	~				67
Cinta	Búsq. Foto	Búsqueda de imágenes grabadas en cinta		~			68
	Copia Foto	Copia de imágenes fijas de un casete en el Memory Stick		v			105
	Selec. Audio	Selección del canal de reproducción de audio		~			78
Grabar	Modo Grab.	Selección de la velocidad de grabación	~	√ ②			54
	Modo Audio	Selección de la calidad de sonido de la grabación	~	~			55
	Antiviento	Minimización del ruido del viento	~	~			56
	Ent/Sal AV ②	Selección de la entrada / salida de AV		~			76
Memoria	Tipo de memoria ③	Selección del tipo de memoria		~	~	~	90
1	Calidad Foto	Selección de la calidad de imagen		V	~		91, 92
	Selec.M.Play	Selección del medio de almacenamiento (fotografía, película) que reproducir				~	103, 10
	Eliminar	Eliminación de archivos				~	99, 100
	Eliminar All	Eliminación de todos los archivos				~	99
	Protección	Prevención de borrado accidental				~	97, 98
	Marca	Impresión de imágenes grabadas en una tarjeta de memoria				~	108, 10
	Сору То ③	Copia de la imagen de la tarjeta de memoria en la memoria interna				~	107
	Formato	Formato de la tarjeta de memoria				~	101
	Archivo No.	Opciones de asignación de nombres			V		93

- (1): Sólo VP-D353(i)/D354(i)/D355(i)
- (2): Sólo VP-D351i/D352i/D353i/D354i/D355i
- (3): Sólo VP-D354(i)/D355(i)



Advanced Recording

Main	Sub Menu	Functions		Page			
Menu	Sub Wellu	runctions	Camera	Player	M·Cam ①	M·Player ①	гауе
Display	LCD Bright	Setting the Brightness tone of the LCD screen	~	~	~	~	32
	LCD Colour	Setting the Colour tones of the LCD screen	~	~	~	~	32
	Date/Time	Setting the Date and Time	~	~	~	~	33
	TV Display	Selecting OSD on/off of TV	~	~	~	~	34
System	n Clock Set Setting the time		~	~	~	V	27
	Remote ①	Using the remote control	~	~	~	~	28
	Beep Sound	Setting the Beep sound	~	~	~	~	29
	Shutter Sound ①	Setting the Shutter sound		~	~		30
	USB Version 4	Setting the USB Version			~	~	83
	USB Connect ④ Setting the USB					~	82
	Language	anguage Selecting the OSD language		~	~	~	26
	Demonstration	nstration Demonstration					31

(1): VP-D353(i)/D354(i)/D355(i) only

(4): VP-D352(i)/D353(i)/D354(i)/D355(i) only

Grabación avanzada

Menú	Submenú	Funciones	N	Página			
principal	Subinenu	runciones	Camera	Player	M·Cam ①	M'Player ①	Pagilia
Display Brillo LCD		Ajuste del tono de brillo de la pantalla LCD	~	~	~	~	32
	LCD Colour	Ajuste de los tonos de colour de la pantalla LCD	~	~	~	~	32
	Fecha/Hora	Ajuste de la fecha y hora	~	~	~	~	33
	Pantalla TV	Selección de activación/desactivación de OSD de TV	~	~	~	~	34
System	Ajuste Reloj	Ajuste de la hora	~	~	~	~	27
	Remote ①	Utilización del mando a distancia	~	~	~	~	28
	Sonido Beep	Ajuste del sonido del pitido	~	~	~	~	29
	Sonido Obtur ①	Ajuste del sonido del obturador		~	~		30
	Versión USB 4	Ajuste de la versión de USB			~	~	83
	USB Connect 4	Ajuste de USB				~	82
	Language	Selección del idioma de la OSD	~	~	~	~	26
	Demostración	Demostración	~				31

(1): Sólo VP-D353(i)/D354(i)/D355(i)

(4): Sólo VP-D352(i)/D353(i)/D354(i)/D355(i)







Advanced Recording

Function availability in each Mode

Requested Operating Mode Mode		Digital functions					=.		
		DIS	Digital Zoom	PHOTO (TAPE)	Color NITE Shutter	16:9 Wide	Emboss2, Pastel2 Mirror, Mosaic	the other Digital Effect	Nite Pix
DIS			×	☆	×	×	×	0	0
Digital Zoom		Δ		☆	☆	☆	☆	0	0
PHOTO (TAPE)		×	×		×	×	×	×	×
Color Nite Shutter		Δ	×	×		×	×	0	0
	16:9 Wide	Δ	×	×	Δ				Δ
Digital Effects	Emboss2 Pastel2 Mirror Mosaic	Δ	×	0	Δ				Δ
	the other Digital Effect	0	0	0	0				Δ
Nite Pix		0	0	0	0	×	×	×	

O: The requested mode will work in this operating mode.

× : You can not change the requested mode.

 $\boldsymbol{\Delta}\;$: The requested mode will work.

☆ : The requested mode will work.

(operating mode data will be backed up.)

[Notes]

When you select an item that cannot be changed, an error message will be displayed.

Grabación avanzada

Funciones Disponibilidad en cada modalidad

Modalidad requerida Modo de funcionamiento		Digital functions <funciones digitales=""></funciones>				Di			
		DIS	Digital Zoom <zoom digital=""></zoom>	Photo (TAPE) <foto (cinta)=""></foto>	Color Nite Shutter	16:9 Wide <formato 16:9=""></formato>	Emboss2 <relieve2>, Pastel2 <pastel2> Mirror <espejo>, Mosaico <mosaic></mosaic></espejo></pastel2></relieve2>	otros efectos digitales	Nite Pix
DIS			×	☆	×	×	×	0	0
Digital Zoom <efecto digital=""></efecto>		Δ		☆	☆	☆	☆	0	0
Photo (TAPE) <foto (cinta)=""></foto>		×	×		×	×	×	×	×
Color Nite Shutter		Δ	×	×		×	×	0	0
	16:9 WIDE <formato 16:9=""></formato>	Δ	×	×	Δ				Δ
Digital Effects <efecto digital></efecto 	Emboss2 <relieve2> Pastel2 Mirror <espejo> Mosaico <mosaic></mosaic></espejo></relieve2>	Δ	×	0	Δ				Δ
3	otros efectos digitales	0	0	0	0				Δ
	Nite Pix	0	0	0	0	×	×	×	

O : La modalidad requerida estará activa en esta modalidad de funcionamiento.

X : No es posible modificar la modalidad requerida.

 $\underline{\wedge}\,$: La modalidad de funcionamiento quedará liberada y la modalidad requerida funcionará.

☆ : La modalidad de funcionamiento quedará liberada y la modalidad requerida funcionará.

(Se hará una copia de seguridad de los datos del modo operativo.)

[Notas]

 Cuando seleccione una opción que no se pueda modificar, un mensaje de error aparecerá en la pantalla.


Advanced Recording


Selecting the Record Mode

- The Record Mode function works in both Camera and Player (VP-D351i/D352i/D353i/D354i/D355i only) modes.
- This Camcorder records and plays back in SP (standard play) mode and in LP (long play) mode.
 - SP (standard play): This mode permits 60 minutes of recording time with a DVM60 tape.
 - LP (long play): This mode permits 90 minutes of recording time with a DVM60 tape.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- Set the Mode switch to TAPE. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Record**, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select **Rec** Mode, then press the Menu selector.
- 6. Move the Menu selector to the left or right to select desired record mode(SP or LP), then press the Menu selector.
- 7. To exit, press the **MENU** button.
 - The selected icon will be displayed.


[Notes]

- We recommend that you use this Camcorder to play back 7 any tapes recorded on this Camcorder. Playing back a tape recorded in other equipment may produce
 - mosaic shaped distortion.
- When you record a tape in SP and LP modes, or LP mode only, the playback picture may be distorted or the time code may not be written properly if there is a gap between scenes.
- Record using SP mode for best picture and sound quality.

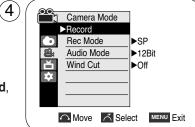

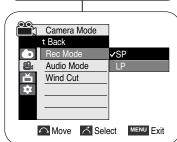

(6)

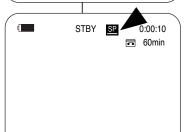

Grabación avanzada

Selección de la modalidad de grabación

- ♣ La función Record Mode <Modo Grab.> está operativa en las modalidades Camera y Player (Sólo VP-D351i/D352i/D353i/D354i/D355i).
- Esta videocámara graba y reproduce en las modalidades SP (duración estándar) y LP (larga duración).
 - SP (duración estándar): esta modalidad permite 60 minutos de grabación en una cinta DVM60.
 - LP (larga duración): esta modalidad permite 90 minutos de grabación en una cinta DVM60.
 - 1. Coloque el interruptor **Power** en **CAMERA** o **PLAYER**.
 - 2. Coloque el interruptor **Mode** en **TAPE**. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - 4. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Record < Grabar > y pulse el Selector de menú.
 - 5. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Rec Mode < Modo Grab. > y pulse el Selector de menú.
 - 6. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar la modalidad de grabación (SP o LP) y pulse el Selector de menú.
 - 7. Para salir, pulse el botón MENU.
 - Aparecerá el icono seleccionado.

- Recomendamos utilizar esta videocámara para reproducir las cintas grabadas con ella. Si se reproducen cintas grabadas con otra videocámara se puede producir una distorsión en forma de mosaico.
- Si graba una cinta en las modalidades SP y LP, o si sólo graba en LP, puede que la imagen reproducida aparezca distorsionada o que los códigos de tiempo no aparezcan escritos correctamente entre las escenas.
- Grabe en la modalidad SP para obtener una imagen y una calidad de sonido mejores.




Advanced Recording

Selecting Audio Mode

- ❖ The Audio Mode function works in both Camera and Player modes.
- ♣ This Camcorder records sound in two ways. (12Bit, 16Bit)
 - 12Bit: You can record two 12Bit stereo sound tracks.
 The original stereo sound can be recorded onto the Main (Sound1) track.
 Additional stereo sound can be dubbed onto the Sub (Sound2) track.
 - 16Bit: You can record one high quality stereo sound using the 16Bit recording mode.
 - Audio dubbing is not possible when using this mode.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select Record, then press the Menu selector.
- Move the Menu selector to the left or right to select Audio Mode, then press the Menu selector.
- Move the Menu selector to the left or right to select desired audio mode(12Bit or 16Bit), then press the Menu selector.
- 7. To exit, press the **MENU** button.

[Note]

When 12Bit is selected, no 12Bit indication will be displayed on the screen.

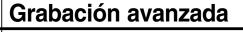

Selección de modalidad de audio

- La función Audio Mode < Modo Audio> está oeprativa en las modalidades Camera y Player.
- Esta videocámara graba sonidos de dos modalidades distintas: 12Bits y 16Bits.
 - 12Bit: es posible grabar dos pistas de sonido de 12Bits en estéreo.
 El sonido original estéreo se puede grabar en la pista principal (Sound1).
 Se puede grabar sonido estéreo adicional de mezcla en la pista secundaria (sound2).
 - 16Bit: es posible grabar una pista estéreo de alta calidad de 16Bits.


En esta modalidad no es posible hacer mezclas.


- 1. Coloque el interruptor **Power** en **CAMERA** o **PLAYER**.
- Coloque el interruptor Mode en TAPE.
 (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Record <Grabar> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Audio Mode <Modo Audio> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la modalidad de audio (12Bit o 16Bit) y pulse el Selector de menú.
- 7. Para salir, pulse el botón MENU.

[Nota]

Cuando se selecciona 12Bit <12 bits>, no aparece ninguna indicación de 12Bit <12 bits> en pantalla.



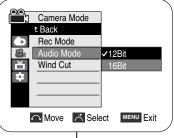

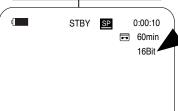

 $\widehat{7}$

Advanced Recording

Cutting Off Wind Noise (Wind Cut)

- The Wind Cut function works in both Camera and Player (Audio dubbing) modes.
 - Use the Wind Cut when recording in windy places such as the beach or near buildings.
- ❖ The Wind Cut function minimizes wind noise or other noise while recording.
 - When the wind cut is on, some low pitched tones are eliminated along with the sound of the wind.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the MENU button.
- Move the Menu selector to the left or right to select Record, then press the Menu selector.
- Move the Menu selector to the left or right to select Wind Cut, then press the Menu selector.
- To activate the Wind Cut function, move the Menu selector to the left or right to select On, then press the Menu selector.
- 7. To exit, press the **MENU** button.
 - Wind Cut ([□]) icon will be displayed on the LCD screen when you turn the Wind Cut On.

[Note]

Make sure Wind Cut is set to off when you want the microphone to be as sensitive as possible.





Corte de ruido del viento (Wind Cut <Antiviento>)


- La función Wind Cut <Antiviento> está operativa en las modalidades Camera y Player (Grabación de audio adicional). Use la función Wind Cut cuando grabe en lugares donde sople el viento, como en la playa o cerca de edificios.
- * Esta función minimiza el ruido del viento y otros ruidos durante la grabación.
 - Cuando esta función está activada, se eliminan algunos sonidos graves junto con el del viento.
 - 1. Coloque el interruptor **Power** en **CAMERA** o **PLAYER**.
 - Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón **MENU**.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Record <Grabar> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Wind Cut <Antiviento> y pulse el Selector de menú.
 - Para activar la función Wind Cut, mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar On <Actv.>, y pulse el Selector de menú.
 - 7. Para salir, pulse el botón MENU.
 - ([▷]) aparece en la pantalla LCD cuando se activa Wind Cut <Antiviento>.

[Nota]

Asegúrese de que la función Wind Cut esté desactivada cuando desee que la sensibilidad del micrófono sea la mayor posible.

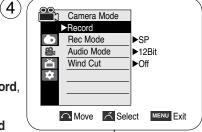

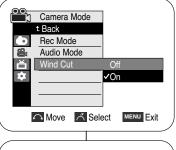

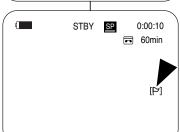



Advanced Recording

Setting the Shutter Speed & Exposure

- ❖ You can set Shutter Speed only in Camera mode.
- ❖ The Exposure function works in both Camera and M.Cam modes.
- Quick menu is used to access Camcorder functions by simply using the Menu selector.

(3)

- Set the Power switch to CAMERA.
- 2. Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the Menu selector.
 - Quick menu list will appear.
- Move the Menu selector to the left or right to select Shutter or Exposure, then press the Menu selector.
- Move the Menu selector to the left or right to select Manual, then press the Menu selector.
- Move the Menu selector to the left or right to select desired shutter speed or exposure, then press the Menu selector.
 - Shutter speed can be set to 1/50, 1/120, 1/250, 1/500, 1/1000, 1/2000, 1/4000 or 1/10000.
 - Exposure value can be set between **00** and **29**.
- 7. To exit, press the **MENU** button.
 - Selected settings are displayed on the screen.

Recommended Shutter Speeds when Recording

- ❖ Outdoor sports such as golf or tennis: 1/2000 or 1/4000
- Moving cars or trains or other rapidly moving vehicles such as roller coasters: 1/1000, 1/500 or 1/250
- ♣ Indoor sports such as basketball: 1/120

[Notes]

- If you manually change the Shutter Speed and the Exposure value when Program AE option is selected, manual changes are applied first.
- The image may not seem as smooth when a high Shutter Speed is set.
- The Camcorder returns to the auto shutter and auto exposure settings when you set the NITE PIX to ON, or change to the EASY.Q mode.
- When recording with a Shutter Speed of 1/1000 or higher, make sure the sun is not shining into the lens.

Grabación avanzada

Ajuste de la exposición y la velocidad del obturador


- La velocidad del obturador sólo puede definirse en la modalidad Camera.
- ♣ La función Exposure <Exposición> está operativa en las modalidades Camera y M.Cam.
- El menú rápido se utiliza para acceder a las funciones de la videocámara utilizando simplemente el Selector de menú.
 - 1. Coloque el interruptor **Power** en **CAMERA**.
 - Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el Selector de menú.
 - Aparece la lista del menú rápido.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Shutter <Obturador> o Exposure <Exposición> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Manual y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la velocidad del obturador y la exposición deseadas y pulse el Selector de menú.
 - La velocidad del obturador se puede definir en 1/50, 1/120, 1/250, 1/500, 1/1000, 1/2000, 1/4000 o 1/10000.
 - El valor de exposición se puede definir entre 00 y 29.
 - 7. Para salir, pulse el botón **MENU**.
 - Los ajustes seleccionados aparecen en pantalla.

Velocidades del obturador recomendadas al grabar

- ❖ Deportes al aire libre como golf o tenis: 1/2000 o 1/4000
- Coches o trenes en movimiento u otros vehículos de movimiento rápido como una montaña rusa: 1/1000, 1/500 o 1/250
- ♣ Deportes en pista cubierta como baloncesto: 1/120

[Notas

- Es posible que la imagen no se vea tan uniforme cuando se defina la velocidad del obturador.
- La videocámara vuelve al ajuste de obturador automático y de exposición automática cuando active NITE PIX o cambie a las modalidades EASY.Q.
- Al grabar con una velocidad de obturador de 1/1000 o superior, asegúrese de que el sol no se refleja sobre el objetivo.

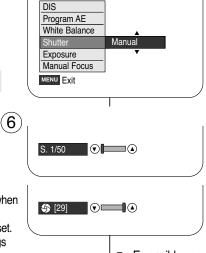

STBY SP

Program AE

Shutter

Exposure

MENU Exit

White Balance

Manual Focus

0:00:10

0:00:10

■ 60min

SP

■ 60min



Advanced Recording

Auto Focus/Manual Focus

- The Auto Focus/Manual Focus function works in both Camera and M.Cam modes.
- In most situations, it is better to use the automatic focus feature, as it enables you to concentrate on the creative side of your recording.
- Manual focusing may be necessary under certain conditions that make automatic focusing difficult and/or unreliable. Manual Focus can be set in the Quick Menu.

Auto Focusing

If you are inexperienced in the use of Camcorders, we recommend that you make use of Auto Focus.

Manual Focusing

- In the following situations, you may obtain better results by adjusting the focus manually.
- a. A picture containing several objects, some close to the Camcorder, others further away.
- b. A person enveloped in fog or surrounded by snow.
- c. Very shiny or glossy surfaces like a car.
- d. People or objects moving constantly or quickly like an athlete or a crowd.
- 1. Set the **Power** switch to **CAMERA**.
- Set the Mode switch to TAPE or MEMORY CARD. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **Menu selector**.
- 4. Move the **Menu selector** to the left or right to select **Manual Focus**, then press the **Menu selector**.
- 5. Move the **Menu selector** to the left or right to select **On**, then press the **Menu selector**.
 - M.Focus (MF) icon will blink.
- Move the Menu selector to the left or right until the object is in focus.

[Note]

Manual Focus is not available in the EASY.Q mode.

STBY

0:00:10

雨 60min

b

(4)

DIS

Shutter

Exposure

MENU Exit

Program AE

White Balance

Manual Focus

Grabación avanzada

Enfoque autom. / Enfoque manual

- La función Auto Focus < Enfoque autom.> / Manual Focus < Foco M.> sólo está operativa en las modalidades Camera y M.Cam.
- En la mayoría de casos, es mejor usar el enfoque automático, ya que permite concentrarse en el aspecto creativo de la grabación.
- El enfoque manual puede ser necesario bajo ciertas condiciones que hacen que el enfoque automático resulte difícil o poco fiable. El enfoque manual puede definirse en el menú rápido.

Enfoque automático

Si no posee experiencia en el uso de videocámaras, le recomendamos que use el enfoque automático.

Enfoque manual

- En las siguientes situaciones se pueden obtener mejores resultados ajustando el enfoque manualmente.
 - a. Cuando una imagen contiene varios objetos, algunos situados cerca de la videocámara y otros lejos de ella.
 - b. Cuando hay una persona entre la niebla o rodeada de nieve.
 - c. Cuando se graban superficies muy brillantes, como un coche.
 - d. Cuando hay gente u objetos que se mueven constantemente o con rapidez, como una multitud o un atleta.
- 1. Coloque el interruptor **Power** en **CAMERA**.
- 2. Coloque el interruptor **Mode** en **TAPE** o **MEMORY CARD**. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Pulse el **Selector de menú**.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Manual Focus <Foco M.> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar On <Actv.> y pulse el Selector de menú.
 - Parpadeará M.Focus (ME).
- 6. Mueva el **Selector de menú** a la izquierda o a la derecha hasta que el objeto aparezca enfocado.

[Nota]


El Enfoque manual no está disponible en la modalidad EASY.Q.




Advanced Recording


Setting the White Balance

- ❖ The White Balance function works in both Camera and M.Cam modes.
- ❖ The White Balance is a recording function that preserves the unique image colour of the object in any recording condition.
- You may select the appropriate White Balance mode to obtain good quality image colour.
 - Auto (A): This mode is generally used to control the White Balance automatically.
 - Hold (分):This holds the current White Balance value.
 - Indoor (): This controls the White Balance according to the indoor ambience.
 - Under halogen or studio/video lighting
 - Subject is of one dominant colour
 - Close up
 - Outdoor (): This controls the White Balance according to the outdoor ambience.
 - In daylight, especially for close up and where the subject is of one dominant colour.
- 1. Set the Power switch to CAMERA.
- Set the Mode switch to TAPE or MEMORY CARD. (VP-D353(i)/D354(i)/D355(i) only)
- Press the MENU button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Camera**, then press the **Menu selector**.
- 5. Move the **Menu selector** to the left or right to select **White Balance**, then press the **Menu selector**.
- 6. Move the **Menu selector** to the left or right to select desired mode(**Auto**, **Hold**, **Indoor** or **Outdoor**), then press the **Menu selector**.
- 7. To exit, press the **MENU** button.
 - When the Auto mode is selected, no icon will be displayed on the screen.

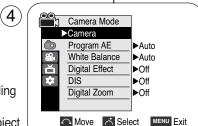

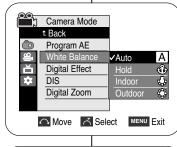

(6)

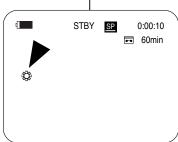

<When the Outdoor option was selected>

Ajuste del balance de blanco

Grabación avanzada

- La función White Balance <White Bal.> está operativa en las modalidades Camera y M.Cam.
- Ésta es una función de grabación que conserva los coloures únicos de la imagen de los objetos independientemente de las condiciones de grabación.
- Se debe seleccionar la modalidad correcta de balance de blanco para obtener imágenes con una buena calidad de colour.
 - Auto (A): esta es la modalidad que se utiliza por lo general para controlar de manera automática el balance de blanco.
 - Hold (): mantiene el valor que esté ajustado en ese momento.
 - Indoor (\$\frac{1}{2}\$): controla el balance de blanco según el ambiente interior.
 - Con halógeno o iluminación de estudio o vídeo
 - El objeto tiene un colour dominante
 - Cercano
 - Outdoor (controla el equilibrio del blanco según el ambiente exterior.
 - Durante el día, especialmente de cerca y en casos en que el objeto tiene un colour dominante.
 - 1. Coloque el interruptor Power en CAMERA.
 - Coloque el interruptor Mode en TAPE o MEMORY CARD. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Camera < Cámara> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar White Balance <White Bal.> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta la modalidad seleccionada (Auto <Autom.>, Hold <Mantener>, Indoor <Interior> o Outdoor <Exterior>) y pulse el Selector de menú.
 - 7. Para salir, pulse el botón **MENU**.
 - Cuando se selecciona la modalidad Auto, no aparecerá ningún icono en pantalla.





Advanced Recording

Using Quick Menu: White Balance

- Quick menu is used to access Camcorder functions by using the Menu selector.
- Quick menu provides easier access to frequently used menus without using the Menu button.
- 1. Press the Menu selector.
- 2. Move the **Menu selector** to the left or right to select **White Balance**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select desired mode(Auto, Hold, Indoor or Outdoor), then press the Menu selector.
- 4. To exit, press the **MENU** button.


[Notes]


- When NITE PIX is set to ON, the White Balance function does not work.
- The White Balance function will not operate in EASY.Q mode.
- Turn the Digital Zoom off (if necessary) to set a more accurate white balance.
- Reset the white balance if lighting conditions change.
- During normal outdoor recording, setting to Auto may provide better results.

Grabación avanzada

Utilización del menú rápido: White Balance < White Bal.>


- El menú rápido se utiliza para acceder a las funciones de la videocámara utilizando simplemente el Selector de menú.
- El menú rápido proporciona un acceso más sencillo a los menús de uso frecuente sin utilizar el botón MENU.

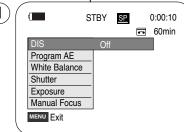

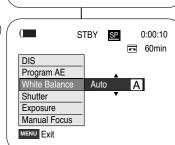

(3)

(4)

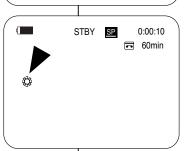

<When the Outdoor option was selected>

- 1. Pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar White Balance <White Bal.> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta la modalidad seleccionada (Auto <Autom.>, Hold <Mantener>, Indoor <Interior> o Outdoor <Exterior>) y pulse el Selector de menú.
- 4. Para salir, pulse el botón MENU.

- Si la función NITE PIX está activada, la función White Balance no está operativa.
- La función White Balance (White Bal.) no está operativa en la modalidad EASY.Q.
- Si es necesario, desactive el zoom digital para obtener un balance de blanco más preciso.
- Reinicie el balance de blanco si las condiciones de iluminación cambian.
- Si el equilibrio del blanco se ajusta en Auto en las grabaciones normales en exteriores, se pueden obtener mejores resultados.



Advanced Recording

Setting the Digital Image Stabiliser (DIS)

- ♣ The DIS function works only in Camera mode.
- DIS (Digital Image Stabiliser) is a function that compensates for any shaking or hand movement while holding the Camcorder (within reasonable limits).
- It provides more stable pictures when:
 - Recording with the zoom (DIS is not available in Digital Zoom mode.)
 - Recording a small object close-up
 - Recording and walking at the same time
 - Recording through the window of a vehicle
- 1. Set the Power switch to CAMERA.
- 2. Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the MENU button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Camera**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select DIS, then press the Menu selector.
- 6. To activate the DIS function, move the **Menu selector** to the left or right to select **On**,then press the **Menu selector**.
 - If you do not want to use the DIS function, set the DIS menu to Off.
- 7. To exit, press the **MENU** button.
 - DIS(**) icon is displayed on the LCD screen.


[Notes]

- Digital Zoom, COLOR NITE SHUTTER, 16:9 Wide, Emboss2, Pastel2, Mirror or Mosaic is not available in the DIS mode.
- When you press the PHOTO button while the DIS function is enabled, the DIS will be released shortly and resume automatically after the photo recording.

Grabación avanzada

Ajuste del Estabilizador digital de la imagen (DIS)

- ♣ La función DIS sólo está operativa en la modalidad Camera.
- DIS (Estabilizador digital de la imagen) es una función que compensa las sacudidas o los movimientos de la mano al sostener la videocámara, dentro de unos límites razonables.
- ❖ Proporciona imágenes más estables cuando:
 - Se graba con el zoom (DIS no está disponible en la modalidad Digital Zoom <Zoom digital>.)
 - Se graba un objeto pequeño muy de cerca
 - Se graba mientras se camina
 - Se graba a través de la ventanilla de un vehículo.

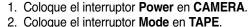


(Sólo VP-D353(i)/D354(i)/D355(i))

- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Camera < Cámara> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar DIS y pulse el Selector de menú.
- Para activar la función DIS, mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar On <Actv.> y pulse el Selector de menú.
 - Si no desea utilizar la función DIS, ajústela en Off
 CDes.> en el menú.
- 7. Para salir, pulse el botón **MENU**.
 - Aparece el icono DIS (💮) en la pantalla LCD.

[Notas]

- Digital Zoom <Zoom digital>, COLOR NITE SHUTTER, 16:9 Wide <16:9 Panorámica>, Emboss2 <Relieve2> o Pastel2, Mirror <Espejo> o Mosaic <Mosaico> no están disponibles en la modalidad DIS.
- Cuando pulse el botón PHOTO con la función DIS activada, DIS se desactivará brevemente y se reanudará automáticamente tras la grabación de la foto.

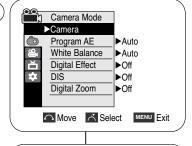

Camera Mode

Program AE

Digital Effect

Digital Zoom


White Balance

t Back

DIS

) | | |

6

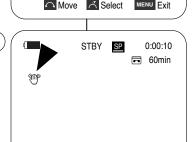

Advanced Recording

Using Quick Menu: Digital Image Stabiliser (DIS)

- ♣ Quick menu is used to access Camcorder functions by simply using the Menu selector.
- ❖ Quick menu provides easier access to the frequently used menus without using the Menu button.
- 1. Press the **Menu selector** twice.
- 2. Move the Menu selector to the left or right to select On or Off, then press the Menu selector.
- 3. To exit, press the **MENU** button.


[Notes]

- It is recommended that you deactivate the DIS function when using a tripod.
- If you use the DIS function, the picture quality may deteriorate.
- EASY.Q mode automatically sets the DIS to On.

Grabación avanzada

Utilización del menú rápido: Estabilizador digital de la imagen (DIS)


- ❖ El menú rápido se utiliza para acceder a las funciones de la videocámara utilizando simplemente el Selector de menú.
- ❖ El menú rápido proporciona un acceso más sencillo a los menús de uso frecuente sin utilizar el botón MENU.

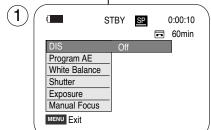


- 1. Pulse el **Selector de menú** dos veces.
- 2. Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar On <Actv.> u Off <Des.> y pulse el **Selector de menú**.
- 3. Para salir, pulse el botón **MENU**.

(2) 1 Program AE White Balance

- Se recomienda desactivar esta función cuando se emplee un trípode.
- Si utiliza esta función, puede que la calidad de la imagen se vea afectada.
- La modalidad EASYQ define automáticamente DIS en ON <Actv.>.

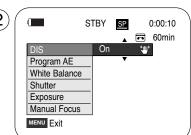

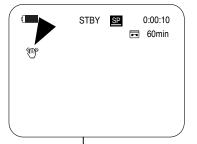



ENGLISH

ESPAÑOL

Advanced Recording

Programmed Automatic Exposure Modes (Program AE)

- ❖ The Program AE function works only in Camera mode.
- The Program AE mode allows you to adjust shutter speeds and apertures to suit different recording conditions.
- ♣ They give you creative control over the depth of field.

■ Auto mode (A)

- Auto balance between the subject and the background.
- To be used in normal conditions.
- The shutter speed automatically varies from 1/50 to 1/250 per second, depending on the scene.

■ Sports mode (��)

For recording people or objects moving quickly.

- For focusing on the background of the subject, when the background is out of focus.
- The Portrait mode is most effective when used outdoors.
- The shutter speed automatically varies from 1/50 to 1/1000 per second.

■ Spotlight mode ((இ)

For recording correctly when there is only light on the subject and not the rest of the picture.

■ Sand/Snow mode (🚉)

For recording when people or objects are darker than the background because of reflected light from sand or snow.

■ High Speed(High Shutter Speed) mode (《公)

For recording fast-moving subjects such as players in golf or tennis games.

[Notes]

- While setting the NITE PIX to ON, the Program AE function does not work.
- The Program AE function will not operate in EASY.Q mode.

Grabación avanzada

Modalidad de exploración automática programada (Program AE < Program Ae>)

- La función Program AE <Program Ae> sólo está operativa en la modalidad Camera.
- La modalidad Program AE permite ajustar las velocidades de obturación y aperturas para adaptarse a distintas condiciones de grabación.
- ❖ Con ella se puede controlar de manera creativa la profundidad de campo.

■ Modalidad Auto (A)

- Balance automático entre el objeto y el fondo.
- Se utiliza en condiciones normales.
- La velocidad del obturador se ajusta automáticamente entre 1/50 y 1/250 de segundo, según la escena que se esté grabando.

■ Modalidad Sports (冬)

Se utiliza para grabar a personas u objetos que se mueven rápidamente.

STBY SP

- Enfoca el fondo del objeto cuando está desenfocado.
- Esta modalidad es más eficaz cuando se emplea en exteriores.
- La velocidad del obturador se ajusta automáticamente entre 1/50 y 1/1000 de segundo.

■ Modalidad Spotlight ((இ)

Esta modalidad se emplea para grabar correctamente cuando sólo está iluminado el objeto y el resto de la imagen no lo está.

■ Modalidad Sand/Snow (🚉)

Esta modalidad se emplea para grabar cuando las personas o los objetos están menos iluminados que el fondo debido a la luz reflejada en la arena o en la nieve.

■ Modalidad High Speed (Velocidad de obturador alta) (🐒)

Esta modalidad se emplea para grabar escenas en que el movimiento es de gran velocidad, por ejemplo, jugadores de tenis o de golf.

- Si la función NITE PIX está activada, la función Program AE no está operativa.
- La función Program AE no está operativa en la modalidad EASY.Q.



Advanced Recording

Setting the Program AE


- 1. Set the **Power** switch to **CAMERA**.
- 2. Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Camera**, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select **Program AE**, then press the **Menu selector**. 6
 - The available options are listed.
- 6. Move the **Menu selector** to the left or right to select desired program AE option, then press the Menu selector.
- 7. To exit, press the **MENU** button.
 - The icon of the selected mode will be displayed on the LCD
 - When the Auto mode is selected, no icon will be displayed on the screen.


Using Quick Menu: Program AE


- 1. Press the Menu selector.
- 2. Move the Menu selector to the left or right to select Program **AE**, then press the **Menu selector**.
- 3. Move the **Menu selector** to the left or right to select desired program AE option, then press the Menu selector.
- To exit, press the MENU button.


Grabación avanzada

Ajustes de Program AE < Program Ae>

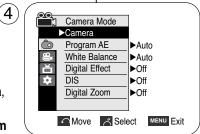

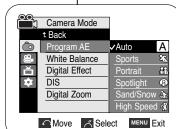

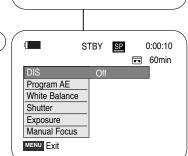

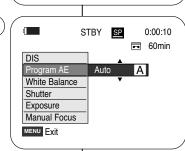

- Coloque el interruptor Power en CAMERA.
- 2. Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
- Pulse el botón MENU.
 - Aparece la lista del menú.
- 4. Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Camera < Cámara > y pulse el Selector de menú.
- 5. Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Program AE < Program Ae> v pulse el Selector de menú.
 - Aparece una lista con las opciones disponibles.
- 6. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar la opción del programa AE v pulse el Selector de menú.
- 7. Para salir, pulse el botón **MENU**.
 - El icono de la modalidad seleccionada aparecerá en la pantalla LCD.
 - Cuando se selecciona la modalidad Auto <Autom.>. no aparecerá ningún icono en pantalla.

Utilización del menú rápido: Program AE < Program Ae>

- Pulse el Selector de menú.
- 2. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Program AE < Program Ae> v pulse el Selector de menú.
- 3. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar la opción de programa AE v pulse el Selector de menú.
- 4. Para salir, pulse el botón **MENU**.



Advanced Recording

Applying Digital Effects

- ❖ The Digital Effect function works only in Camera mode.
- ❖ The Digital Effects enable you to give a creative look to your recording.
- Select the appropriate Digital Effect for the type of picture that you wish to record and the effect you wish to create.
- There are 11 Digital Effect modes.

1. ART mode

This mode gives the images a coarse effect.

2. Mosaic mode

This mode gives the images a mosaic effect.

3. Sepia mode

This mode gives the images a reddish-brown pigment.

4. Negative mode

This mode reverses the colours, creating a negative image.

5. Mirror mode

This mode cuts the picture in half, using a mirror effect.

6. BLK & WHT mode

This mode changes the images to black and white.

7. Emboss1 mode

This mode creates a 3D effect (embossing).

8. Emboss2 mode

This mode creates a 3D effect (embossing) on surrounding area of an image.

9. Pastel1 mode

This mode applies a pale pastel drawing effect to an image.

10. Pastel2 mode


This mode applies a pale pastel drawing effect to surrounding area of an image.


11.16:9 Wide mode

Select to record a picture to be played back on a 16:9 Wide TV.





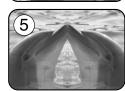

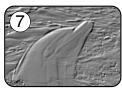





Grabación avanzada

Aplicación de efecto digital

- La función Digital Effect < Efecto digital> sólo está operativa en la modalidad Camera.
- Los efectos digitales permiten dar un aspecto más creativo a las grabaciones.



6

- Seleccione el efecto digital que necesite para el tipo de imagen que desee grabar y el efecto que desee crear.
- Existen 11 modalidades de efectos digitales.



Esta modalidad le da a la imagen un aspecto de grano grueso.

2. Modalidad Mosaic

Esta modalidad le da a la imagen un aspecto de mosaico.

3. Modalidad Sepia

Esta modalidad le da a la imagen un colour marrón rojizo.

4. Modalidad Negative

Esta modalidad invierte los coloures, creando una imagen en negativo.

5. Modalidad Mirror

Esta modalidad divide la imagen en dos, empleando un efecto de espejo.

6. Modalidad BLK & WHT

Esta modalidad cambia la imagen a blanco y negro.

7. Modalidad Emboss1

Esta modalidad crea un efecto 3D (relieve).

8. Modalidad Emboss2

Esta modalidad crea un efecto 3D (relieve) en el área alrededor de la imagen.

9. Modalidad Pastel1

Esta modalidad aplica un efecto pastel pálido a la imagen.

10. Modalidad Pastel2

Esta modalidad aplica un efecto pastel pálido al área alrededor de la imagen.

11.16:9 Wide mode

Se selecciona para grabar una imagen que se va a reproducir en un TV panorámico 16:9.



Advanced Recording

Selecting the Digital Effects


- 1. Set the **Power** switch to **CAMERA**.
- Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Camera**, then press the **Menu selector**.
- 5. Move the **Menu selector** to the left or right to select **Digital Effect**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select the desired Digital Effect mode, then press the Menu selector.
 - The display mode is set to the selected mode.
- 7. To exit, press the **MENU** button.


[Notes]


- The Pastel2, Emboss2, Mirror, Mosaic and 16:9 Wide modes are not available while DIS or COLOR NITE SHUTTER is in use.
- Digital Effect modes are not available while EASY.Q or NITE PIX is in use.
- Once DIS, EASY.Q or COLOR NITE SHUTTER is set, 16:9 Wide, Emboss2, Pastel2, Mirror and Mosaic modes will be released.
- Digital Zoom is not available in the 16:9 Wide, Emboss2, Pastel2, Mirror and Mosaic modes.
- Digital Effect modes other than 16:9 Wide, Emboss2, Pastel2, Mirror and Mosaic are available while DIS is in use.
- Setting the NITE PIX while Digital Effect is in use releases the Digital Effect, and releasing the NITE PIX will set the Digital Effect to Off mode.
- Photo image recording is not available in the 16:9 Wide mode.

Grabación avanzada

Selección del efecto digital

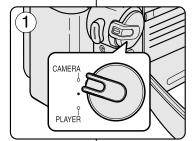

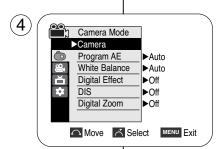

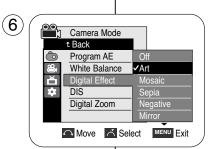

- 1. Coloque el interruptor **Power** en **CAMERA**.
- Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Camera < Cámara> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Digital Effect < Efecto digital> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la modalidad de efecto digital deseada y pulse el Selector de menú.
 - La modalidad de visualización se ajusta en la modalidad seleccionada.
- 7. Para salir, pulse el botón MENU.

- Las modalidades Pastel2, Emboss2 <Relieve2>, Mirror <Espejo>, Mosaic <Mosaico> y 16:9 Wide <16:9 Panorámico> no están disponibles mientras está en uso DIS o COLOR NITE SHUTTER.
- Las modalidades Digital Effect < Efecto digital> no están disponibles mientras se utiliza EASY.Q o NITE PIX.
- Una vez que se ajusta DIS, EASY.Q o COLOR NITE SHUTTER, se desactivan 16:9 Wide <16:9 Panorámica>, Emboss2 <Relieve2>, Pastel2, Mirror <Espejo> o Mosaic <Mosaico> se liberan.
- Digital Zoom <Zoom digital> no está disponible en las modalidades 16:9 Wide <16:9 Panorámica>, Emboss2 <Relieve2>, Pastel2, Mirror <Espejo> o Mosaic <Mosaico>.
- Las modalidades de Digital Effect <Efecto digital> que no sean 16:9 Wide <16:9 Panorámica>, Emboss2 <Relieve2>, Pastel2, Mirror <Espejo> o Mosaic <Mosaico> están disponibles mientras se toman imágenes digitales, con DIS en uso.
- El ajuste de NITE PIX mientras Digital Effect <Efecto digital> está en uso lo libera, y liberar NITE PIX desactivará Digital Effect <Efecto digital>.
- La grabación de imágenes fotográficas no está disponible en la modalidad 16:9 Wide <16:9 Panorámica>.



Advanced Recording

Zooming In and Out with Digital Zoom

Zoom works only in Camera mode.

Selecting the Digital Zoom

- Zooming more than 20x is achieved digitally, up to 900x when combined with optical zoom.
- The picture quality may deteriorate depending on how much you zoom in on the subject.
- We recommend that you use the DIS feature with Digital Zoom for picture stability. (see page 61)
- 1. Set the **Power** switch to **CAMERA**.
- Set the Mode switch to TAPE. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select Camera, then press the Menu selector.
- Move the Menu selector to the left or right to select Digital Zoom, then press the Menu selector.
- Move the Menu selector to the left or right to select desired zoom mode(Off, 100x, 200x, 400x or 900x), then press the Menu selector.
- 7. To exit, press the **MENU** button.

[Notes]

- Maximum zooming may result in lower picture quality.
- Digital Zoom is not available while DIS, EASY.Q, taking a photo image, COLOR NITE SHUTTER, 16:9 Wide, Emboss2, Pastel2, Mirror or Mosaic is in use.
- Once taking a photo image, COLOR NITE SHUTTER, 16:9
 Wide, Emboss2, Pastel2, Mirror or Mosaic is set, Digital
 Zoom mode will be released. (The Digital Zoom mode
 will be backed up.)
- Once DIS or EASY.Q is set, Digital Zoom mode will be released.

Grabación avanzada

Cómo acercar o alejar la imagen mediante el zoom digital


♣ El zoom sólo está operativo en la modalidad Camera.

Selección del zoom digital

- Un zoom por encima de 20x se logra digitalmente, hasta 900x cuando se combina con el zoom óptico.
- La calidad de la imagen puede resultar deteriorada dependiendo de cuánto se acerca el obieto.
- Para una mayor estabilidad de la imagen, cuando se emplee el zoom digital es recomendable utilizar la función DIS. (Consulte la página 61.)
 - 1. Coloque el interruptor **Power** en **CAMERA**.
 - Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón **MENU**.
 - Aparece la lista del menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Camera < Cámara> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Digital Zoom <Zoom Digital> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la modalidad de zoom deseada (Off <Des.>,100x, 200x, 400x o 900x) y pulse el Selector de menú.
 - 7. Para salir, pulse el botón MENU.

[Notas]


- El zoom máximo puede dar como resultado una calidad de imagen más pobre.
- Digital Zoom <Zoom digital> no está disponible mientras DIS, EASY.Q, COLOR NITE SHUTTER, 16:9 Wide <16:9 Panorámica>, Emboss2 <Relieve2>, Pastel2, Mirror <Espejo> o Mosaic <Mosaico> están en uso o se toman imágenes fotográficas.
- Una vez que se toma una imagen fotográfica o se ajusta COLOR NITE SHUTTER, 16:9 Wide <16:9 Panorámica>, Emboss2 <Relieve2>, Pastel2, Mirror <Espejo> o Mosaic <Mosaico> se libera Digital Zoom <Zoom digital>. (Se hará una copia de seguridad de los datos del modo Digital Zoom <Zoom digital>.)
- Si se define DIS o EASY.Q, se liberará la modalidad Digital Zoom <Zoom digital>.

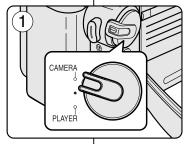

Camera Mode

▶Camera

(4)

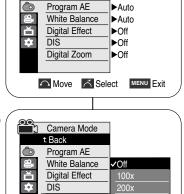

900x

Digital Zoom



Advanced Recording

Photo Image Recording

- Photo image recording works only in Camera Mode.
- 1. Set the **Power** switch to **CAMERA**.
- Set the Mode switch to TAPE. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **PHOTO** button.
 - The still picture is recorded for about 6~7 seconds.
- 4. After the PHOTO has been recorded, the Camcorder returns to its previous mode.


Searching for a Photo Image


- The Photo Search works only in Player mode.
- 1. Set the **Power** switch to **PLAYER**.
- Set the Mode switch to TAPE. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select Tape, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select Photo Search, then press the Menu selector.
- 6. Press the ◀/► (REW/FF) buttons to select the photo.
 - The photo search process appears on LCD screen while you are searching.
 - After completing the search, the Camcorder displays the still image.
- 7. To exit, press the (STOP) or **MENU** button.


[Notes]

- Pressing the PHOTO button while recording, stops the recording and saves the still image captured at that moment. It takes approx. 6 ~7 seconds to save the image and then recording resumes.
- You can use the remote control to take a photo by using the PHOTO button on the remote control. Pressing the PHOTO button on the remote control records the still image at once with automatic focusing. (VP-D353(i)/D354(i)/D355(i) only)
- When there are no still images recorded on the tape. it will be fully rewound or forwarded.
- Taking a photo image is not available while COLOR NITE SHUTTER or 16:9 Wide is in use.

 DIS, Digital Zoom, COLOR NITE SHUTTER, Digital Effect
- and Nite Pix are not available, when take a photo image.
- Taking a photo image while EASY.Q, DIS or Digital Zoom mode is in use will the mode. (After a photo image is taken, the mode will return automatically.)

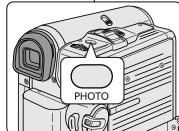

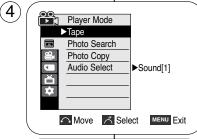

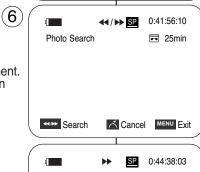



Grabación de imágenes fotográficas

Grabación avanzada

- La grabación de imágenes fotográficas sólo está operativa en la modalidad Camera.
- 1. Coloque el interruptor Power en CAMERA.
- 2. Coloque el interruptor **Mode** en **TAPE**.(Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Pulse el botón PHOTO.
 - La imagen fija se graba durante unos 6 ó 7 segundos.
- 4. Tras grabar la fotografía, la videocámara vuelve al estado anterior.

Búsqueda de una fotografía

- ♣ La función Photo Search <Búsq. Foto> sólo está operativa en la modalidad Player.
- 1. Coloque el interruptor Power en PLAYER.
- 2. Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- 4. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Tape <Cinta> y pulse el Selector de menú.
- 5. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Photo Search <Búsq. Foto> y pulse el Selector de
- 6. Pulse los botones ◀/► (REW/FF) para seleccionar la foto.
 - El proceso de búsqueda de fotografías aparece en la pantalla LCD mientras se realiza la búsqueda.
 - Una vez terminada la búsqueda. la videocámara muestra la imagen fija.
- 7. Para salir, pulse el botón ■(STOP) o MENU.

- Si se pulsa el botón PHOTO mientras se graba, se detiene la grabación del video y se guarda la imagen fija capturada en ese momento. Se tarda aproximadamente 6 ~ 7 segundos en guardar la imagen para reanudar la grabación.
- Puede utilizar el mando a distancia para hacer una foto utilizando el botón PHOTO del mando a distancia. Al pulsar el botón PHOTO del mando a distancia se graba la imagen fija directamente con el enfogue automático.(Sólo VP-D353(i)/D354(i)/D355(i))
- Cuando no hay imágenes fijas grabadas en la cinta, se rebobinará o se pasará completamente.
- La toma de imágenes fotográficas no está disponible mientras COLOR NITE SHUTTER o 16:9 Wide <16:9 Panorámica> está en
- DIS. Digital Zoom <Zoom digital>. COLOR NITE SHUTTER. Digital Effect < Efecto digital> o Nite Pix no está disponible al tomar una imagen fotográfica.
- Tomar una imagen fotográfica mientras se esté en la modalidad EASY.Q, DIS o Digital Zoom <Zoom digital> liberará la modalidad actual. (Tras tomar una imagen fotográfica, la modalidad volverá a ajustarse automáticamente a la modalidad anterior.)



Playback

Playing Back a Tape You have recorded on the LCD Screen

- ❖ The playback function works only in Player mode.
- ❖ You can monitor the playback picture on the LCD screen.
- 1. Set the **Power** switch to **PLAYER**.
- 2. Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Insert the tape you wish to view. (see page 36)
- 4. Open the LCD screen.
 - Adjust the angle of the LCD screen and set the brightness or colour if necessary.
- 5. Press the (REW) button to rewind the tape to the starting point.
 - To stop rewinding, press the (STOP) button.
 - The Camcorder stops automatically after rewinding is complete.
- 6. Press the ►/II (PLAY/STILL) button to start playback.
 - You can view the picture you recorded on the LCD screen.
 - To stop the play operation, press the (STOP) button.

Adjusting the LCD Bright/Colour during Playback

- ❖ You can adjust the LCD Bright/Colour during playback.
- ❖ The adjustment method is the same procedure as used in Camera mode. (see page 32)


[Notes]


- You can also view the picture on a TV screen, after connecting the Camcorder to a TV or VCR. (see page 71~72)
- Various functions are available in Player mode. (see page 73)
- For searching and viewing still images recorded onto tape. (see page 68)


Reproducción

Reproducción en la pantalla LCD de una cinta grabada

- ❖ La función de reproducción sólo está operativa en la modalidad Player.
- ❖ Es posible ver una grabación en la pantalla LCD.

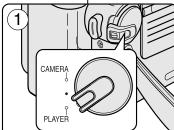

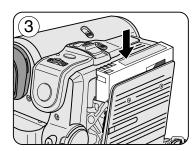

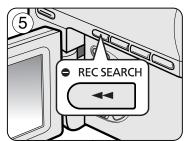

- 1. Coloque el interruptor Power en PLAYER.
- 2. Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Introduzca la cinta que desee ver. (Véase página 36.)
- 4. Abra la pantalla LCD.
 - Ajuste el ángulo de la pantalla v. si es necesario, el brillo v el colour.
- 5. Pulse el botón ◀ (REW) para rebobinar la cinta hasta el
 - Para detener el rebobinado, pulse el botón (STOP).
 - La cinta se detiene automáticamente cuando se ha rebobinado por completo.
- 6. Pulse el botón ▶/II (PLAY/STILL) para empezar la reproducción.
 - Puede ver en la pantalla LCD la imagen grabada.
 - Para detener la reproducción, pulse el botón (STOP).

Ajuste del brillo y colour de la pantalla LCD durante la reproducción

- ❖ Es posible ajustar el brillo y colour de la pantalla LCD durante la reproducción.
- ♣ El método de ajustes es el mismo que se emplea en la modalidad Camera. (Consulte la página 32.)

- También se puede ver la grabación en una pantalla de televisión si la videocámara se conecta a un televisor o a un aparato de vídeo. (Consulte las páginas 71 y 72.)
- La modalidad Player dispone de diversas funciones. (Consulte la página 73.)
- Para buscar y visualizar imágenes fijas grabadas en la cinta. (Consulte la página 68.)



Playback

Controlling Sound from the Speaker

- ❖ The Speaker works only in Player mode.
- When you use the LCD screen for playback, you can hear recorded sound from the built-in Speaker.
 - Take the following steps to lower the volume or mute the sound while playing a tape on the Camcorder.
- 1. Set the **Power** switch to **PLAYER**.
- Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Press the / (PLAY/STILL) to play the tape.
- 4. When you hear sounds once the tape is in play, use the **Menu selector** to adjust the volume.
 - A volume level display will appear on the LCD screen.
 Levels may be adjusted from anywhere between 00 to 19 and you will not hear any sound when the volume is set on 00.
 - If you close the LCD screen while playing, you will not hear sound from the speaker.

[Notes]


- When the AV cable is connected to the Camcorder, you cannot hear sound from the Built-In Speaker and cannot adjust the volume.
- The sound will return when you remove the connected AV cable from the jack of your Camcorder.

Reproducción


Control de sonido desde el altavoz

- El altavoz sólo está operativo en la modalidad Player.
- Cuando se usa la pantalla LCD para la reproducción, se puede oír el sonido a través del altavoz incorporado.
 - Siga los pasos que se indican a continuación para disminuir el volumen o eliminar el sonido al reproducir una cinta en la videocámara.

1. Coloque el interruptor Power en PLAYER.

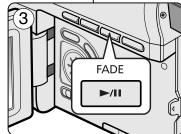

- 2. Coloque el interruptor **Mode** en **TAPE.**
 - (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón ▶/┃ (PLAY/STILL) para reproducir la cinta.

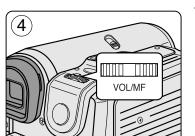

- 4. Al oír los sonidos una vez que la cinta esté en marcha, utilice el **Selector de menú** para ajustar el volumen.
 - Aparecerá el nivel de volumen en la pantalla LCD. Se puede ajustar el nivel desde 00 a 19. Si el volumen está ajustado a 00 no se oirá nada.
 - Si cierra la pantalla LCD durante la reproducción, no se oirá ningún sonido por el altavoz.



- Cuando un cable AV está conectado a la videocámara, el altavoz no emite ningún sonido y no se puede ajustar el volumen.
- El sonido volverá cuando retire el cable AV conectado de la toma de la videocámara.



Playback

Tape Playback

❖ The playback function works only in Player mode.

Playback on the LCD Screen

It is practical to view a tape using the LCD screen when in a car or outdoors.

Playback on a TV Monitor


- ❖ To play back a tape, the television must be PAL compatible.(see page 114)
- We recommend that you use the AC Power adapter as the power source for the Camcorder.

Connecting to a TV which has Audio/Video Input Jacks

- Connect the Camcorder to your TV with the Audio/Video cable.
 - The yellow jack: Video
 - The white jack: Audio(L)-mono
 - The red jack: Audio(R)
 - If you connect to a monaural TV, connect the yellow jack (Video)
 - to the video input of the TV and the white jack (Audio L) to the audio input of the TV.
 - You may use the SCART adapter. (optional)
- 2. Set the **Power** switch to **PLAYER**.
- 3. Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 4. Turn on the TV and set the TV/VIDEO selector on the TV to Video. Refer to the TV user's manual.
- Play the tape.

[Notes]

- You may use an S-Video (optional) cable to obtain better quality pictures if you have a S-Video connector on your TV.
- Even if you use an S-Video (optional) cable, you need to connect an audio cable.
- If you connect the cable to the Audio/Video jack, you will not hear sound from the Camcorder's speakers.
- If only a mono audio input is available on the TV set, use the audio cable with the white jack(Audio L).

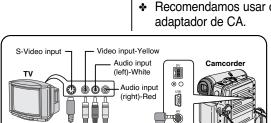

Audio/Video

S-Video

Reproducción

Reproducción de una cinta

❖ La función de reproducción sólo está operativa en la modalidad Player.

Reproducción en la pantalla LCD

 Cuando se va en coche o se está en el exterior, resulta muy práctico ver una cinta con la pantalla LCD.

Reproducción en un monitor de televisión

- Para reproducir una cinta, el televisor debe ser compatible con PAL. (Consulte la página 114.)
- Recomendamos usar como fuente de alimentación para la videocámara el adaptador de CA.

Conexión a un televisor que dispone de conectores de audio/vídeo

- Conecte la videocámara al televisor mediante el cable de audio/vídeo.
 - La clavija amarilla: Video
 - La clavija blanca: Audio(L)-mono
 - La clavija roja: Audio(R) Si se trata de un televisor monoaural, conecte la clavija amarilla (vídeo) a la entrada de vídeo del televisor y la clavija blanca (Audio L) a la entrada de audio del televisor.
- Puede utilizar un adaptador SCART (opcional).
- 2. Coloque el interruptor Power en PLAYER.
- 3. Coloque el interruptor **Mode** en **TAPE**. (Sólo VP-D353(i)/D354(i)/D355(i))
- Encienda el televisor y coloque el selector TV/VIDEO del mismo en Video. Consulte el manual del usuario.
- 5. Reproduzca la cinta.

- Para obtener una mejor calidad de las imágenes, y si dispone de un conector S-Vídeo (opcional), puede usar el cable S-Vídeo en el televisor.
- Aunque utilice el cable S-Video (opcional), necesitará conectar un cable de audio.
- Si conecta el cable al conector de Audio/Vídeo, no oirá el sonido por los altavoces de la videocámara.
- Si sólo está disponible una entrada de audio monoaural en el equipo de TV, utilice el cable de audio con la clavija blanca (Audio(L)).





Playback

ESPAÑOL

Reproducción

Connecting to a TV which has no Audio and Video Input Jacks


- ❖ You can connect your Camcorder to a TV through a VCR.
- Connect the Camcorder to your VCR with the Audio/Video cable.
 - The yellow jack: Video
 - The white jack: Audio(L) Mono
 - The red jack: Audio(R)
- 2. Connect a TV to the VCR.
- 3. Set the **Power** switch to **PLAYER**.
- Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 5. Turn on both the TV and VCR.
 - Set the input selector on the VCR to Line.
 - Select the channel reserved for your VCR on the TV set.
- 6. Play the tape.

Playback

- You can play the recorded tape in Player mode.
- Connect a power source and set the **Power** switch to PLAYER.
- 2. Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Insert the tape you wish to play back.
- 4. Using the ◀ / ▶ (REW/FF) buttons, find the first position you wish to play back.
- 5. Press the ▶/**||** (PLAY/STILL) button.
 - The images you recorded will appear on the TV after a few seconds.
 - If a tape reaches its end while being played back, the tape will rewind automatically.


[Notes]

- The playback mode (SP/LP) is selected automatically.
- If the VCR has an S-Video input terminal, you may use S-Video for better quality.
- The S-Video terminal transmits video only. Connect audio cables for sound.
- If only a mono audio input is available on the TV set, use the audio cable with the white jack (Audio L).

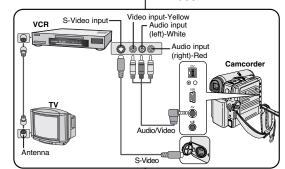

Conexión a un televisor que no dispone de conectores de audio/vídeo

- Es posible conectar la videocámara a un televisor a través de un aparato de vídeo.
 - Conecte la videocámara al aparato de vídeo mediante el cable de audio/vídeo.
 - La clavija amarilla: Vídeo
 - La clavija blanca: Audio(L) Mono
 - The red jack: Audio(R)
 - 2. Conecte el televisor al aparato de vídeo.
 - 3. Coloque el interruptor **Power** en **PLAYER**.
 - Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 5. Encienda el televisor y el aparato de vídeo.
 - Coloque el selector de entrada del aparato de vídeo en Line.
 - Seleccione el canal reservado para el aparato de vídeo en el televisor.
- 6. Reproduzca la cinta.

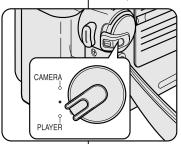

Reproducción

- ♣ Puede reproducir la cinta grabada en la modalidad Player.
- 1. Conecte la videocámara a una fuente de energía y coloque el interruptor **Power** en **PLAYER**.
- 2. Coloque el interruptor **Mode** en **TAPE**. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Introduzca la cinta que desee reproducir.
- Usque el comienzo de las secuencia que desea reproducir mediante los botones ◄ / ▶ (REW/FF).
- 5. Pulse el botón ►/II (PLAY/STILL).
 - Pasados unos segundos, las imágenes grabadas aparecerán en el televisor.
 - Si la cinta llega al final mientras está en la modalidad de reproducción, se rebobinará automáticamente.

- La modalidad de reproducción (SP/LP) se selecciona de manera automática.
- Si el aparato de vídeo tiene un terminal de entrada S-VIDEO, puede utilizar S-VIDEO para obtener una calidad mejor.
- El terminal S-VIDEO sólo transmite el vídeo. Conecte los cables de AUDIO para el sonido.
- Si sólo está disponible una entrada de audio monoaural en el equipo de TV, utilice el cable de audio con la clavija blanca (Audio L).



Playback

Various Functions while in Player Mode

- This function works only in Player mode.
- The PLAY, STILL, STOP, FF, REW buttons are located on the Camcorder and the remote control. (VP-D353(i)/D354(i)/D355(i) only)
- The F.ADV(Frame advance), X2, SLOW buttons are located on the remote control only. (VP-D353(i)/D354(i)/D355(i) only)
- To prevent tape and head-drum wear, your Camcorder will automatically stop if it is left in still or slow modes for more than 3 minutes.

Playback Pause

- Press the ►/II(PLAY/STILL) button during playback.
- To resume playback, press ►/II (PLAY/STILL) button.

Picture Search (Forward/Reverse)

- Press the ◀ / ▶ (REW/FF) buttons during playback or still mode.
 - To resume normal playback, press the ▶/▮ (PLAY/STILL) button.
- Keep pressing (REW/FF) buttons during playback or still mode.
 - To resume normal playback, release the button.

Slow Playback (Forward/Reverse) (VP-D353(i)/D354(i)/D355(i) only)

- Forward Slow playback
 - Press the **SLOW** button on the remote control during playback.
 - To resume normal playback, press the ▶/▮ (PLAY/STILL) button.
- Reverse Slow Playback
 - Press the **(**-) button during forward slow play back.
 - To resume forward slow playback, press the **II**▶ (+) button.
 - To resume normal playback, press the ▶/▮ (PLAY/STILL) button.

Reproducción

Diferentes funciones en la modalidad de Player

- Esta función sólo está operativa en la modalidad Player.
- Los botones PLAY, STILL, STOP, FF, REW se encuentran tanto en la videocámara como en el mando a distancia. (Sólo VP-D353(i)/D354(i)/D355(i))
- Los botones F.ADV (avance por fotograma), X2 y SLOW sólo se encuentran en el mando a distancia. (Sólo VP-D353(i)/D354(i)/D355(i))
- Para evitar que se desgasten la cinta y los cabezales, la videocámara se detendrá automáticamente si se deja en las modalidades Still o Slow durante más de 3 minutos.



PHOTO ADUB SLOW X2 PHOTO ADUB SLOW X2 PHOTO ADUB SLOW X2 PHOTO ADUB SLOW X2

(VP-D353(i)/D354(i)/D355(i) only)

Pausa en la reproducción

- Pulse el botón ►/II(PLAY/STILL) durante la reproducción.
- Para reanudar la reproducción, pulse de nuevo el botón
 ▶/II(PLAY/STILL)

Búsqueda de imágenes (adelante/atrás)

- Pulse los botones ◄ / ▶ (REW/FF) durante la modalidad de reproducción o de fotografía.
 Para reanudar la reproducción normal, pulse el botón
 ►/II (PLAY/STILL) button.
- Mantenga pulsados los botones
 (REW/FF)
 durante la modalidad de reproducción o de fotografía.
 Para reanudar la reproducción normal, suelte el botón.

Reproducción a cámara lenta (adelante/atrás) (Sólo VP-D353(i)/D354(i)/D355(i))

- Reproducción en cámara lenta hacia delante
- Pulse el botón SLOW del mando a distancia durante la reproducción.
- Para reanudar la reproducción normal, pulse el botón ►/II (PLAY/STILL).
- Reproducción en cámara lenta hacia atrás
 - Pulse el botón **◄** (-) durante la reproducción en cámara lenta hacia delante.
 - Para reanudar la reproducción en cámara lenta hacia delante, pulse el botón **II**▶ (+).
 - Para reanudar la reproducción normal, pulse el botón ▶/▮ (PLAY/STILL).




Playback

Frame Advance (To play back frame by frame) (VP-D353(i)/D354(i)/D355(i) only)

- Press the F.ADV button on the remote control while in still mode.
 - Video sequence advances frame by frame each time you press the F.ADV button.
 - The F.ADV function works in still mode only.
- To resume normal playback, press the ►/II (PLAY/STILL) button.
 - Forward frame advance
 Press the F.ADV button on the remote control in still mode.

Press the **F.ADV** button on the remote control.

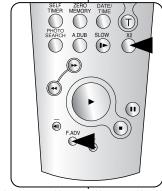

(VP-D353(i)/D354(i)/D355(i) only)

Reproducción

Avance por fotogramas (Para reproducción por fotogramas) (Sólo VP-D353(i)/D354(i)/D355(i))

- Pulse el botón F.ADV del mando a distancia mientras se encuentra en la modalidad de imagen fija (STILL).
 - La secuencia de vídeo avanza por fotograma cada vez que pulse el botón F.ADV.
 - La función F.ADV sólo está operativa en la modalidad de imagen fija.
- Para reanudar la reproducción normal, pulse el botón
 ▶/II (PLAY/STILL).
 - Avance por fotogramas hacia delante
 Pulse el botón F.ADV del mando a distancia durante la modalidad de imagen fija.
 - Avance por fotogramas hacia atrás
 Pulse el botón III (-) del mando a distancia para cambiar la dirección en la modalidad F.ADV.
 Pulse el botón F.ADV del mando a distancia.

X2 Playback (Forward/Reverse) (VP-D353(i)/D354(i)/D355(i) only)

- Forward X2 playback
 - Press the X2 button on the remote control during playback.
 - To resume normal playback, press the ▶/II (PLAY/STILL) button.
- Reverse X2 playback
 - Press the **◄॥** (-) button during forward X2 playback.
 - To resume normal playback, press ▶/▮ (PLAY/STILL) button.

Reverse Playback (VP-D353(i)/D354(i)/D355(i) only)

- To playback in reverse at normal speed, press the **◄॥** (-) button during normal forward playback.
- Press the ►/II (PLAY/STILL) or II► (+) button to return to normal forward playback.

[Notes]

- Mosaic shaped distortion may appear on the screen while in some of the various playback modes.
 - Mosaic shaped distortion or noise may be experienced when you play back tapes recorded in LP which contain various playback functions.
- Sound will only be heard during normal SP or LP playback.

Reproducción a doble velocidad (Hacia delante / Hacia atrás) (Sólo VP-D353(i)/D354(i)/D355(i))

- Reproducción a doble velocidad hacia delante
 - Pulse el botón X2 del mando a distancia durante la reproducción.
 - Para reanudar la reproducción normal, pulse el botón ▶/Ⅲ (PLAY/STILL).
- Reproducción a doble velocidad hacia atrás
 - Pulse el botón **◄॥** (-) durante la reproducción X2 hacia delante.
 - Para reanudar la reproducción normal, pulse el botón ▶/II (PLAY/STILL).

Reproducción hacia atrás (Sólo VP-D353(i)/D354(i)/D355(i))

- Para reproducir hacia atrás a velocidad normal, pulse el botón **◄॥** (-) durante la reproducción normal hacia delante.
- Pulse el botón ►/II (PLAY/STILL) o II► (+) para volver a la reproducción normal hacia delante.

- En algunas de las modalidades de reproducción se puede producir una distorsión en forma de mosaico.
 - También se pueden producir distorsiones en forma de mosaico si se reproducen cintas grabadas en LP que contengan distintas funciones de reproducción.
- El sonido sólo está activo durante la reproducción de cintas en SP o LP.




Playback

Zooming during Playback (PB ZOOM)

- ❖ The Playback Zoom function works in Player mode.
- The Playback Zoom function enables you to magnify the playback or still image.
- 1. Set the Power switch to PLAYER.
- Set the Mode switch to TAPE. (VP-D353(i)/D354(i)/D355(i) only)
- Press the PB ZOOM button in playback mode or in still mode.
- 4. The image is magnified starting from the centre of image.
- 5. You can zoom in from 1.2x to 8.0x by moving the Zoom lever.
 - Zoom ratio is not displayed on the screen.
- To cancel the playback Zoom function, press the PB ZOOM or ■ (STOP) button.

MACRO PROPERTY OF THE PROPERTY

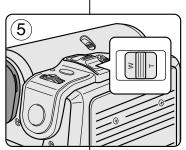

Reproducción

Aplicación del zoom durante la reproducción (PB ZOOM)

- ❖ La función Playback Zoom <Reproducción Zoom> sólo está operativa en la modalidad Player.
- La función Playback Zoom <Reproducción Zoom> permite ampliar la reproducción o la imagen fija.
 - 1. Coloque el interruptor **Power** en **PLAYER**.
 - Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
 - 3. Pulse el botón **PB ZOOM** en las modalidades de reproducción o imagen fija.
 - 4. La imagen se amplía desde el centro de la imagen.
 - 5. Puede ampliar el tamaño de la fotografía de **1,2** a **8** veces con la palanca de zoom.
 - La proporción del zoom no aparece en pantalla.
 - Para cancelar la función zoom en la reproducción, pulse el botón PB ZOOM o ■ (STOP).

[Notes]

- The PB ZOOM function enlarges the centre of the screen only.
- You cannot apply the Playback Zoom function to pictures which are being input from an external video source.
- The Playback Zoom image cannot be imported to your PC from the Camcorder's DV jack.
- The PB ZOOM images cannot be exported to a PC.
- OSD will not be displayed on the LCD screen while the PB ZOOM function is being operated.
 - To display OSD, press the PB ZOOM button once to stop operating PB ZOOM function, or press the (STOP) button to stop playback.

[Notas]

- La función PB ZOOM sólo amplía el centro de la imagen.
- No puede aplicar la función Playback Zoom <Reproducción Zoom> en imágenes introducidas desde una fuente de vídeo externa.
- La imagen con Playback Zoom no se puede importar a un PC con el conector DV de la videocámara.
- Las imágenes de PB ZOOM no se pueden exportar a un PC.
- La OSD no se mostrará en la pantalla LCD mientras está activada la función PB ZOOM.

Para ver la OSD, pulse el botón PB ZOOM una vez para interrumpir la función PB ZOOM o pulse el botón ■ (STOP) para detener la reproducción.



Playback

AV In/Out (VP-D351i/D352i/D353i/D354i/D355i only)

- AV In/Out function works only in Player mode.
- AV in/out setting enables you to record signal from external sources and display it on LCD screen.

Also, you can direct your video or image to external devices to record or play


- Connect the Camcorder to your VCR or TV with the Audio/Video cable. (See pages 71~72)
- Set the Mode switch to TAPE. (VP-D353i/D354i/355i only)
- 3. Set the **Power** switch to **PLAYÈR**.
- 4. Turn on the VCR or TV.
- Insert the blank tape with protection tab closed into the Camcorder.
 - If you want to record from a connected VCR, insert a recorded VHS tape into the VCR.
- 6. Press the **MENU** button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select Record, then press the Menu selector.
- 8. Move the **Menu selector** to the left or right to select **AV In/Out**, then press the **Menu selector**.
- 9. Move the **Menu selector** to the left or right to select **In**, then press the **Menu selector**.
 - If you want to see the Camcorder picture with a TV, set AV In/Out menu to Out.
- 10. To exit, press the **MENU** button.
- 11. Press the **Start/Stop** button to set the Camcorder to **REC PAUSE** mode.
 - PAUSE appears on the LCD screen.
- 12. Select the TV programme or playback the VHS tape.
- 13. Press the **Start/Stop** button to start recording.
 - If you want to pause recording for a while, press the Start/Stop button again.
- 14. To stop recording, press the (STOP) button.

Reproducción


Entrada v salida de AV (Sólo VP-D351i/D352i/D353i/D354i/D355i)


- ♣ La función AV In/Out sólo está operativa en la modalidad Player.
- El ajuste de AV in/out permite grabar la señal de fuentes externas y la muestra en la pantalla LCD.

Asimismo, puede dirigir su vídeo o la imagen a dispositivos externos para grabarlos o reproducirlos.

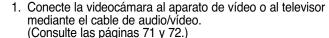

- Coloque el interruptor Mode en TAPE. (Sólo VP-D353i/D354i/355i)
- 3. Coloque el interruptor Power en PLAYER.
- 4. Encienda el aparato de vídeo o el televisor.
- Introduzca una cinta virgen en la cámara con la pestaña de protección cerrada.
- Si desea grabar desde el aparato de vídeo conectado, introduzca en el aparato de vídeo una cinta VHS grabada.
- Pulse el botón MENU.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Record <Grabar> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar AV In/Out <Ent/Sal AV> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar In < Entrada> y pulse el Selector de menú.
 - Si desea ver las imágenes de la videocámara en un televisor, ajuste el menú AV In/Out <Ent/Sal AV> en Out <Salida>.
- 10. Para salir, pulse el botón **MENU**.
- Pulse el botón Start/Stop para colocar la videocámara en la modalidad REC PAUSE.
 - PAUSE en la pantalla LCD.
- Seleccione el canal de televisión o ponga en marcha la cinta VHS.
- 13. Pulse el botón **Start/Stop** para comenzar la grabación.
 - Si desea detener momentáneamente la grabación, pulse de nuevo el botón Start/Stop.
- 14. Para detener la grabación, pulse el botón (STOP).

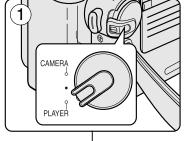


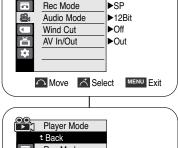

Player Mode

▶Record

(9)

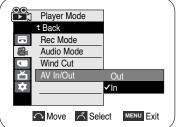

[Note]

When you record the images being played back on an analog VCR, if they are not being played back at normal speed, (for example, more than double speed or slow playback), only a gray image appears on the Camcorder.

[Nota]

Cuando graba imágenes reproducidas en un aparato de vídeo analógico, si no se han reproducido a velocidad normal (por ejemplo, más de la velocidad doble o a cámara lenta), sólo aparecerán imágenes en gris en la videocámara.




Playback


Audio Dubbing (VP-D353(i)/D354(i)/D355(i) only)

- ❖ The Audio Dubbing function works only in Player Mode.
- ❖ You can not dub sound on a pre-recorded tape in LP or 16 bit mode.
- You can add sound to the original sound on a pre-recorded tape recorded in SP mode with 12bit sound.
- Use the internal or an external microphone (not supplied) or other audio equipment.
- The original sound will not be erased.

Dubbing Sound

- 1. Set the **Power** switch to **PLAYER**.
 - If you want to use an external microphone, connect the microphone to the external MIC input jack on the Camcorder.
- 2. Set the **Mode** switch to **TAPE**.
- 3. Press the ►/II (PLAY/STILL) button and find the time frame of the scene to be dubbed.
- 4. Press the ►/II (PLAY/STILL) button to pause the scene
- 5. Press the **A.DUB** button on the remote control.
 - Audio Dubbing icon (①) will be displayed on the LCD screen.
 - The Camcorder is ready for dubbing.
- 6. Press the ►/II (PLAY/STILL) button to start dubbing.
 - Press the \blacksquare (STOP) button to stop the dubbing.

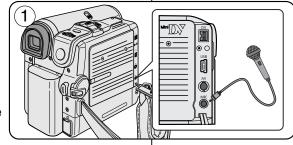

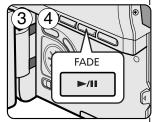



Reproducción

Grabación de audio adicional (Sólo VP-D353(i)/D354(i)/D355(i))

- ❖ La función Audio Dubbing sólo está operativa en la modalidad Player.
- ❖ No puede grabar sonido adicional en una cinta grabada anteriormente en modalidad LP o en modalidad de 16 bits.
- Puede añadir sonido al sonido original de una cinta grabada en la modalidad SP con 12 bits de sonido.
- ❖ Puede usar el micrófono incorporado, uno externo u otro equipo de audio.
- El sonido original no se borrará.

Grabación de sonido adicional

- Coloque el interruptor Power en PLAYER.
 - Si va a usar un micrófono externo, conéctelo en el conector de entrada de MIC de la videocámara.
- 2. Coloque el interruptor Mode en TAPE.
- 3. Pulse el botón ►/II (PLAY/STILL) y busque el principio de la secuencia en la que desea hacer la mezcla.
- Pulse el botón ►/II (PLAY/STILL) para hacer una pausa en la escena.
- 5. Pulse el botón **A.DUB** del mando a distancia.
 - Aparece el icono de Audio Dubbing (①) en la pantalla LCD.
 - La videocámara está lista para grabar audio adicional.
- 6. Pulse el botón ►/II (PLAY/STILL) para empezar la mezcla.
 - Pulse el botón **■** (STOP) para detener la mezcla.

[Notes]

- You can not use the Audio Dubbing function while playing a write protected video tape.
- To utilise an external MIC or sound source, connect a microphone to the MIC jack or use the AV cable to Connect external sound source input.
- To dub an external sound source, set the AV In/Out function to In (VP-D353i/D354i/D355i only) (see page 76).

[Notas]

- La función de mezcla de audio no se puede utilizar si la cinta está protegida contra grabación.
- Para utilizar un MIC externo o una fuente de sonido, conecte un micrófono a la toma MIC o utilice el cable AV para la entrada de la fuente de sonido externa
- Para grabar una fuente de sonido externa, ajuste la función AV In/Out (Ent/Sal AV) en IN (Entrada) (Sólo VP-D353i/D354i/D355i) (Consulte página 76.).



Playback


Dubbed Audio Playback


- 1. Set the **Power** switch to **PLAYER**.
- Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Insert the dubbed tape and press the **MENU** button.
- 4. Move the **Menu selector** to the left or right to select **Tape**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select Audio Select, then press the Menu selector.
- 6. Move the **Menu selector** to the left or right to select the audio playback channel then press the **Menu selector**.
 - Sound[1]: play the original sound.
 - Sound[2]: play the dubbed sound.
 - MIX[1+2]: play back sound1 and 2 equality mixed.
- 7. To exit, press the **MENU** button.
- 8. Press the ▶/Ⅲ (PLAY/STILL) button to playback the dubbed tape.


Reproducción

Reproducción de una cinta con audio mezclado

- 1. Coloque el interruptor Power en PLAYER.
- Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Introduzca la cinta mezclada y pulse el botón **MENU**.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Tape <Cinta> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Audio Select <Selec. Audio> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar el canal de reproducción de audio y pulse el Selector de menú.
 - Sonido[1]: reproducción del sonido original.
 - Sonido[2]: reproducción del sonido de la mezcla.
 - Mezcla[1+2]: reproducción de la mezcla de sonidos 1 y 2.
- 7. Para salir, pulse el botón **MENU**.
- 8. Pulse el botón ▶/┃ (PLAY/STILL) para reproducir la cinta mezclada.

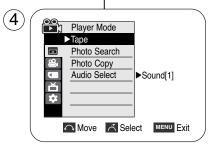

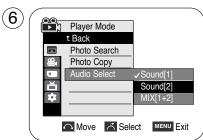

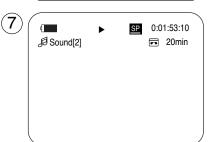

[Note]

When you playback added sound (Sound 2 or MIX mode), you may experience a loss of sound quality.

[Nota]

Cuando se reproduce el sonido adicional (modalidades Sound2 o MIX) es posible que se experimente una pérdida en la calidad del sonido.



IEEE 1394 Data Transfer

Transferring IEEE1394 (i.LINK)-DV Standard Data Connections

Connecting to a DV Device (DVD Recorder, Camcorder, etc.)

- Connecting to other DV standard products.
 - A standard DV connection is quite simple.
 - If a product has a DV port, you can transfer data by connecting to the DV port using the correct cable.
 - !!! Please be careful since there are two types of DV ports, (4pin, 6pin).
 This Camcorder has a 4pin terminal.
- With a digital connection, video and audio signals are transmitted in digital format, allowing high quality images to be transferred.

Connecting to a PC

- If you want to transmit data to a PC, you must install an IEEE 1394 add-on card into the PC. (not supplied)
- The frame rate for video capture is dependent on the capacity of the PC.

[Notes]

- When you transmit data from the Camcorder to another DV device, some functions may not work.
 - If this occurs, please reconnect the DV cable or turn the power OFF and ON again.
- When you transmit data from the Camcorder to PC, PC function button is not available in M.Player mode.
- Do not use the Camcorder and IEEE1394 together as this will cause IEEE1394 to shut off.
- Do not connect the Camcorder to a PC using both DV and USB cables. It may not operate properly.
- Operation is not guaranteed for all computer environments recommended above.
- The IEEE1394 cable (DV cable)is sold separately.
- Video Capture software is commercially available.
- Most DV enabled PCs have a 6 pin socket. In this case, a 6pin/4pin cable is required for the connection.
- Most DV enabled Notebooks and Laptops have a 4 pin socket. Use a 4pin/4pin cable for the connection.
- DIS and COLOR NITE SHUTTER are not available when in DV (IEEE1394) mode.
- If DV (IEEE1394) mode is set, DIS and COLOR NITE SHUTTER modes will be released.

Transferencia de datos IEEE 1394

Conexiones para la transferencia de datos estándar IEEE1394 (i.LINK)-DV

Conexión a un aparato DV (Grabador de DVD, videocámara, etc.)

- Conexión a otros productos DV estándar.
 Una conexión estándar DV es muy sencilla.
 Si el aparato dispone de un puerto DV, es posible transmitir datos conectando la videocámara al puerto DV del aparato por medio de un cable apropiado.
 - !!! existen dos tipos de puertos DV (de 4 y 6 patillas). El terminal de esta videocámara es de 4 patillas.
- Con una conexión digital, las señales de video y de audio se transmiten en formato digital, lo que permite transmitir imágenes de alta calidad.

Conexión a un PC

- Si desea transmitir datos a un PC, deberá instalar en el PC una tarjeta adicional IEEE 1394. (no suministrada)
- La velocidad de transferencia de las imágenes de vídeo depende de la capacidad del ordenador.

- Al transmitir datos de la videocámara a otro aparato DV, es posible que algunas operaciones no funcionen.
 - En tal caso, vuelva a conectar el cable DV o apague y encienda de nuevo el aparato.
- Cuando se transfieren datos desde la videocámara a un PC, el botón de función PC no está disponible en la modalidad M.Player.
- No utilice la videocámara y IEEE1394 juntos ya que hará que IEEE1394 se apaque.
- No conecte la videocámara a un PC utilizando los dos cables DV y USB. Puede que no funcione correctamente.
- El funcionamiento no está garantizado en todos los entornos informáticos recomendados anteriormente.
- El cable IEEE1394 (cable DV) se vende por separado.
- El software de captura de vídeo se encuentra disponible en el mercado.
- La mayoría de DV con compatibilidad para PC tiene una toma de 6 patillas.
- La mayoría de DV con compatibilidad para portátiles tiene una toma de 4 patillas. Para la conexión, utilice un cable 4-4.
- DIS y COLOR NITE SHUTTER no están disponibles en la modalidad DV (IEEE1394).
- Si se define la modalidad DV(IEEE1394), se desactivarán las modalidades DIS y COLOR NITE SHUTTER.



IEEE 1394 Data Transfer

System Requirements

- CPU: faster Intel® Pentium III™ 450MHz compatible.
- Operating system: Windows® 98SE, ME, XP, Mac OS (9.1~10.2)
- Main memory: more than 64 MB RAM
- IEEE1394 add-on card or built in IEEE1394 card

Recording with a DV Connection Cable (VP-D351i/D352i/D353i/D354i/D355i only)

- 1. Set the **Power** switch to **PLAYER**.
- Set the **Mode** switch to **TAPE**. (VP-D353i/D354i/D355i only)
- Connect the DV cable (not supplied) from the DV jack of the Camcorder to the DV jack of the other DV device.
 - Make sure that DY is displayed on the LCD screen.
- Press the Start/Stop button to begin REC PAUSE mode.
 - PAUSE is displayed on the LCD screen.
- 5. Start playback on the other DV device while you monitor the picture.
- 6. Press the **Start/Stop** button to start recording.
 - If you want to pause recording momentarily, press the Start/Stop button again.
- 7. To stop recording, press the \blacksquare (STOP) button.

[Notes]

- When using this Camcorder as a recorder, the pictures that appear on a monitor may seem uneven, however recorded pictures will not be affected.
- Operation is not guaranteed for all the recommended computer environments mentioned above.
- While transmitting data from the Camcorder to PC at strong electric field and strong magnetic field, VIDEO signal or AUDIO signal may transmit with noise.

Requisitos del sistema

- Procesador: Intel® Pentium III™ a 450 Mhz compatible.
- Sistema operativo: Windows® 98SE, ME, XP, Mac OS (9.1~10.2)


Transferencia de datos IEEE 1394

- Memoria: más de 64 MB de memoria RAM
- Tarjeta IEEE 1394 externa o tarjeta IEEE1394 interna

Grabación con un cable de conexión DV (Sólo VP-D351i/D352i/D353i/D354i/D355i)

- 1. Coloque el interruptor Power en PLAYER.
- Coloque el interruptor Mode en TAPE. (Sólo VP-D353i/D354i/D355i)
- Conecte el cable DV (no incluido) desde la toma DV de la videocámara a la toma DV de otro dispositivo DV.
- Asegúrese de que aparezca en la pantalla.
- Pulse el botón Start/Stop para activar la modalidad REC PAUSE.
- Aparecerá PAUSE <PAUSA> en la pantalla LCD.
- 5. Inicie la reproducción en el otro aparato al tiempo que sigue las imágenes en el monitor.
- 6. Pulse el botón Start/Stop para comenzar la grabación.
 - Si desea detener momentáneamente la grabación, pulse de nuevo el botón Start/Stop.
- 7. Para detener la grabación, pulse el botón **■** (STOP).

- Al emplear esta cámara como grabador, es posible que las imágenes que aparecen en el monitor se vean irregulares. No obstante, esto no afecta a las imágenes que se graban.
- No se garantiza el funcionamiento en todos los entornos informáticos recomendados mencionados anteriormente.
- Cuando se transmiten datos desde la videocámara a un PC en un campo electromagnético potente, es posible que la señal de vídeo y de audio transmitida tenga interferencias.

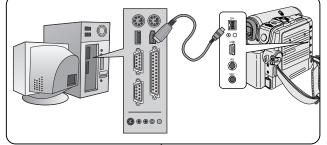



USB Interface (VP-D352(i)/D353(i)/D354(i)/D355(i) only)

Transferring a Digital Image through a USB Connection

- The camcorder supports both USB 1.1 and 2.0 standards. (Depends on the PC specification)
- You can easily transfer a image from a Memory card to a PC without additional add-on cards via a USB connection.
- You can transfer a recorded file in memory card to a PC via a USB connection. (VP-D353(i)/D354(i)/D355(i) only)
- If you transfer data to a PC, you need to install the software (DV Driver, Video Codec, DirectX 9.0) supplied with the Camcorder.

USB Connection speed depending on the System

High speed USB connection is supported by Microsoft (Windows) device drivers only.

- Windows 98SE/ME Full Speed USB
- Windows 2000 High speed USB on a system with Service Pack 4 or later installed.
- Windows XP High speed USB on a system with Service Pack 1 or later installed.

System Requirements

	Windows System		
	Minimum	Recommended	
CPU	Intel® Pentium III™, 600MHz	Intel® Pentium 4™, 2GHz	
OS (operating system)	Windows® 98SE/ME	Windows® 2000/XP	
Memory	128MB	512MB	
HDD capacity	1GB or more	2GB or more	
Resolution	1024 x 768 dots	1024 x 768 dots	
	24bit Colour	24bit Colour	
USB	USB1.1	USB2.0 High Speed	

It is not available for Macintosh systems.

[Notes]

- USB 2.0 works only for Removable Disk functions.
- On a slower PC than recommended, movie playback may not be smooth or video editing may take a long time.
- On a slower PC than recommended, movie playback may skip frames or operate unexpectedly.
- Intel® Pentium III™ or Pentium 4™ is a trademark of the Intel Corporation.
- Windows® is a registered trademark of the Microsoft® Corporation.
- All other brands and names are property of their respective owners.
- Operations are not guaranteed for all of the recommended computer environments mentioned above.
- Do not connect the Camcorder to a PC using both DV and USB cables. It may not operate properly.
- In M.Cam or M Player mode, be sure that the Memory card is inserted into Camcorder before connecting
 - If no Memory card or an unformatted Memory card is inserted, PC will not recognise your Camcorder as a removable disk. (VP-D353(i)/D354(i)/D355(i) only)
- USB Streaming requires Video Codec, Driver and DirectX 9.0.
- If you disconnect the USB cable from the PC or the Camcorder during the data transfer, the data transfer will stop and the data may be damaged.
- If you connect the USB cable to a PC using a USB HUB or with other devices at the same time, it may cause conflict and may not work properly. If this occurs, remove all other USB devices and try the connection again.

Interfaz USB (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))

Transferencia de imágenes digitales mediante una conexión USB



- La videocámara admite los estándares USB 1.1 y 2.0. (Depende de la especificación del PC.)
- Se pueden transferir imágenes fijas de manera sencilla desde una tarjeta de memoria a un PC mediante una conexión USB, sin necesidad de una tarjeta
- Puede transferir una imagen al PC mediante una conexión USB. (Sólo VP-D353(i)/D354(i)/D355(i))
- Para transferir datos al PC, es necesario instalar el software (controlador, Video Codec, DirectX 9.0) que se facilita con la videocámara.

Velocidad de la conexión USB según el sistema

La conexión USB de alta velocidad sólo la admiten los controladores de dispositivos de Microsoft (Windows).

- Windows 98SE/ME: USB a toda velocidad
- Windows 2000: USB de alta velocidad en un sistema con Service Pack 4 o posterior instalado.
- Windows XP: USB de alta velocidad en un sistema con Service Pack 1 o posterior instalado.

Requisitos del sistema

	Sistema Windows	
	Mínimo	Recomendado
Procesador	Intel® Pentium III™, 600 MHz	Intel® Pentium 4™, 2 GHz
Sistema operativo	Windows® 98SE/ME	Windows® 2000/XP
Memoria	128MB	512MB
Capacidad de disco duro	1 GB o más	2 GB o más
Resolución	1024 x 768 puntos	1024 x 768 puntos
	Colour de 24 bits	Colour de 24 bits
USB	USB1.1	USB2.0 de alta velocidad

No está disponible para sistemas Macintosh

- USB 2.0 sólo está operativa para las funciones de disco extraíble.
- En un PC más lento de lo recomendado, es posible que la reproducción de películas no sea tan uniforme o puede que la edición de vídeo tarde algo más.
- En un PC más lento de lo recomendado, es posible que en la reproducción de películas se salten fotogramas o funcione de forma inesperada.
- Intel®, Pentium III™ o Pentium 4™ es una marca registrada de Intel Corporation.
- Windows® es una marca registrada de Microsoft® Corporation.
- El resto de marcas y nombres pertenecen a sus respectivos propietarios.
- No se garantiza el funcionamiento en todos los entornos informáticos recomendados mencionados anteriormente.
- No conecte la videocámara a un PC utilizando los dos cables DV y USB. Puede que no funcione correctamente. En la modalidad En la modalidad M.Cam o M.Player, asegúrese de que la tarjeta de memoria está dentro de la cámara antes de conectar el cable USB.
 - Si no tiene ninguna tarjeta de memoria o tiene una sin formato, el PC no reconocerá la cámara como un disco extraíble. (Sólo VP-D353(i)/D354(i)/D355(i))
- USB Streaming requiere Video Codec, el controlador y DirectX 9.0.
- Si desconecta el cable USB del PC o de la videocámara durante la transferencia de datos, la transferencia de datos se detendrá y puede que los datos resulten dañados.
- Si conecta el cable USB a un PC utilizando el HUB USB o con otros dispositivos al mismo tiempo, puede causar conflictos y puede que no funcione correctamente. Si esto ocurre, retire el resto de dispositivos USB e intente la conexión de nuevo.



USB Interface (VP-D352(i)/D353(i)/D354(i)/D355(i) only)


Selecting the USB Device (VP-D353(i)/D353(i)/D355(i) only)

- USB Select function works only in M.Player mode.
- Using the USB cable, you can connect your Camcorder to a computer to copy your movies and images from the Memory card (or built-in memory; VP-D354(i)/D355(i) only) or to a printer to print your images.
- 1. Set the **Power** switch to **PLAYER**.
- 2. Set the Mode switch to MEMORY CARD.
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **System**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select USB Connect, then press the Menu selector.
- Move the Menu selector to the left or right to select Computer or Printer, then press theMenu selector.
 - You can select Computer to use the Camcorder as a PC Camera, USB Stream or removable disk.
 - You can select Printer to use the Pictbridge feature (see page 110).
- 7. To exit, press the **MENU** button.


Interfaz USB (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))


Selección del dispositivo USB (Sólo VP-D353(i)/D354(i)/D355(i))


- ❖ La función USB Select sólo está operativa en la modalidad M.Player.
- Con el cable USB, puede conectar su videocámara a un PC para copiar sus películas e imágenes desde la tarjeta de memoria (o memoria interna; Sólo VP-D354(i)/D355(i)) o conectarla a una impresora para imprimir las imágenes.

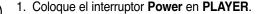

- 2. Coloque el interruptor Mode en MEMORY CARD.
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar System <Sistema> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar USB Connect <Conexión USB> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Computer <Ordenador> o Printer <Impresora> y pulse el Selector de menú.
 - Puede seleccionar Computer <PC> para utilizar la cámara para PC, USB Stream o un disco extraíble.
 - Puede seleccionar Printer < Impresora> para utilizar Pictbridge (consulte la página 110).
- 7. Para salir, pulse el botón **MENU**.

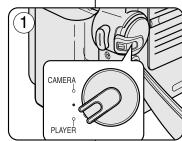

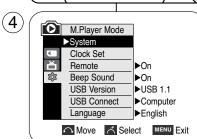

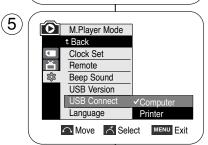

USB Interface (VP-D352(i)/D353(i)/D354(i)/D355(i) only)

Setting the USB Communication Speed (VP-D353(i)/D354(i)/D355(i) only)

- To ensure proper communication between the camcorder and a PC, please set the USB Version before connecting the camcorder to a PC.
- ♣ It is available only in M.Cam and M.Player modes.
- 1. Set the **Power** switch to **CAMERA** or **PLAYER**.
- 2. Set the Mode switch to MEMORY CARD.
- 3. Press the **MENU** button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select System, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select **USB Version**, then press the **Menu selector**.
 - Set the USB Version to USB 2.0 when it is supported by both PC and its OS (Operating System).
 - If either the PC or OS does not support USB 2.0, set the USB Version to USB 1.1.
- 6. To exit, press the **MENU** button.

[Notes]

- When the USB Version is not set properly, the USB connection may not be established.
- USB 2.0 may not be supported by certain PCs depending on their specifications.
 - In this case, choose the USB 1.1 for USB connection.
- When selected USB 2.0 is not supported by the PC, the USB 1.1 will be used for the USB connection automatically.


ESPAÑOLInterfaz USB (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))


Ajuste de la velocidad de comunicación USB (Sólo VP-D353(i)/D354(i)/D355(i))


- Para garantizar la comunicación adecuada entre la videocámara y el PC, defina la versión de USB antes de conectar la videocámara al PC.
- ❖ Sólo está disponible en las modalidades M.Cam y M.Player.
 - 1. Coloque el interruptor **Power** en **CAMERA** o **PLAYER**.
 - 2. Coloque el interruptor Mode en MEMORY CARD.
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar System <Sistema> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar USB Version < Versión USB> y pulse el Selector de menú.
 - Defina USB Version < Versión USB> en USB 2.0 cuando la admitan el PC y el SO (Sistema operativo).
 - Si el PC o el sistema operativo no admiten USB 2.0, defina USB Version
 Versión USB> en USB 1.1.
 - 6. Para salir, pulse el botón **MENU**.

[Notas]

- Si no se define correctamente la versión USB, es posible que no pueda establecerse la conexión USB.
- Es posible que USB 2.0 no se admita en ciertos PC dependiendo de sus especificaciones.
 En este caso, elija USB 1.1 para la conexión USB.
- Cuando el USB 2.0 seleccionado no lo admita el PC, se utilizará automáticamente USB 1.1 para la conexión USB.

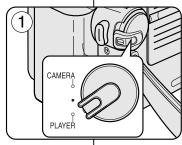

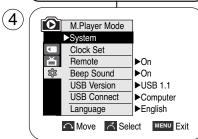

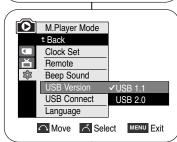

(5)

USB Interface (VP-D352(i)/D353(i)/D354(i)/D355(i) only)

Interfaz USB (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))

Installing DV Media Pro 1.0 Programme

- To play back MPEG moving pictures recorded by the camcorder or streaming data transferred through the USB connection on a PC, the Video Codec programme should be installed.
- Do not connect the Camcorder to PC before installing the programme.
- If another Camcorder or scanner is connected, please disconnect it in advance.
- ❖ This explanation is based on Windows® 98SE OS.
- DV Media Pro 1.0 User's Manual is included on the accompanying CD(D:\help\) in Adobe's Portable Document Format(PDF) The user's manual can be viewed using Acrobat Reader software, which is also included on the CD D\Support\AcrobatReader\AcroReader51_ENU_full.exe). (The Acrobat Reader is a freeware product of AdobeSystems,Inc.)
- DV Media Pro User's Manual is in English.

Programme Installation

- 1. Insert the software CD into the CD-ROM drive of your computer.
 - Installation selection screen appears on the monitor.
- If the installation selection screen does not appear after inserting the CD, click "Run" in the Windows "Start" menu and execute Autorun.exe file to begin installation. When CD-ROM drive is set to "D:drive", type "D:\autorun.exe" and press Enter.
- 3. Click the icons listed below to install the selected software.
 - DV Driver Click
 - USB removable Disk Driver (Windows® 98SE only)
 - USB PC CAMERA & STREAMING Driver (CAPTURE DRIVER)
 - Connect a Camcorder to your PC to complete the DV Driver installation.
 - 1) Set the camcorder Power switch to CAMERA.
 - 2) Set the camcorder Mode switch to TAPE. (VP-D353(i)/D354(i)/D355(i) only)
 - 3) Connect the camcorder to the PC using the USB cable.
 - 4) The SAMSUNG A/V Capture driver installation begins on the PC.
 - DirectX 9.0 Click
 - Video Codec Click

The Video Codec needs to be installed in order to playback the MPEG4 Movies (stored in the Memory Card) on a PC or to use the USB Streaming/PC Camera functions.



Instalación del programa DV Media Pro 1.0

- Para reproducir vídeo MPEG grabado con la videocámara o flujo de datos transferido a través de una conexión USB en un PC, debe instalarse el programa Video Codec.
- No conecte la videocámara al PC antes de instalar el programa.
- Si tiene conectada otra cámara o un escáner, desconéctelos antes.
- Esta explicación atañe al sistema operativo Windows® 98SE.
- El Manual del usuario de DVC Media Pro se incluye en el CD facilitado (D:\help\) en formato PDF. Podrá leer el Manual del usuario utilizando el software Acrobat Reader, que también se incluye en el CD. (D\Support\AcrobatReader\AcroReader51_ENU_full.exe). (Acrobat Reader es un producto freeware de AdobeSystems,Inc.)
- ♣ El Manual del usuario de DV Media Pro está en inglés.

Instalación del programa

- Introduzca el CD del software en la unidad de CD-ROM de su PC.
 - Aparece la pantalla de selección de la instalación.
- 2. Si la pantalla de selección de la instalación no aparece después de introducir el CD, haga clic en "Ejecutar" en el menú "Start" de Windows y ejecute el archivo Autorun.exe para iniciar la instalación. Cuando la unidad de CD-ROM esté preparada en "D:", escriba "D:\autorun.exe" y pulse la tecla Intro.
- Haga clic en los iconos que se indican a continuación para instalar el software seleccionado.
 - Clic en DV Driver
 - Controlador de disco extraíble USB (sólo para Windows® 98SE)
 - Controlador de PC CAMERA & STREAMING USB (CÓDEC de vídeo instalado)
 - Conecte una videocámara al PC para completar la instalación del controlador de DV.
 - 1) Coloque el interruptor Power en CAMERA.
 - 2) Coloque el interruptor Mode en TAPE. (sólo VP-D353(i)/D354(i)/D355(i))
 - 3) Conecte la videocámara al PC utilizando el cable USB.
 - En el PC se inicia la instalación del controlador de captura A/V de SAMSUNG.
 - Clic en DirectX 9.0
 - Pulsación de Video Codec

Para reproducir en un PC películas MPEG4 (almacenadas en la tarjeta de memoria) o para utilizar las funciones USB Streaming/PC Camera es necesario instalar el códec de vídeo.



USB Interface (VP-D352(i)/D353(i)/D354(i)/D355(i) only)

Interfaz USB (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))


Using the PC Camera Function


- To use the PC Camera function, the DV Driver, Video Codec and DirectX 9.0. programmes must be installed in the PC.
- You can use this Camcorder as a PC CAMERA.
- When you connect to a Web site that provides video chatting functions, you can use your Camcorder for such functions.
- When using this camcorder for video conferencing (such as NetMeeting), voice communication may not be supported depending on the video conferencing software. In this case, connect an external microphone to the soundcard of the PC to enable voice communication.
- Using the Camcorder with PC Net-meeting programme installed, you can participate in video conference.
- The PC CAMERA's screen size. (Transferred video frame rate for the PC Camera function is max 15 fps.)
- If PC is connected with the USB to the Camcorder, only the Power, Mode, Zoom and NITE PIX switchs can be operated.

Utilización de la función "PC Camera"

- Para utilizar la función PC Camera, deben instalarse en el PC los programas the DV Driver. Video Codec and DirectX 9.0.
- ❖ Esta videocámara se puede usar como una cámara para PC.
- Si se conecta a un sitio web que ofrezca funciones de chat con vídeo, puede utilizar la videocámara para este fin.
- Al utilizar esta videocámara para videoconferencia (como NetMeeting), es posible que no se admita la comunicación de voz dependiendo del software de videoconferencia. En este caso, conecte un micrófono externo a la tarjeta de sonido del PC para activar la comunicación por voz.
- Puede realizar videoconferencias conectando la videocámara a un PC que disponga del programa NetMeeting.
- Tamaño de pantalla de la cámara para PC. (La velocidad de fotogramas del vídeo transferido para la función PC Camera es de 15 fps.)
- Si la videocámara se conecta a un PC a través del puerto USB, se desactivarán todos los botones excepto el interruptor Power, el interruptor Mode, el nterruptor Zoom y el interruptor NITE PIX.

- 1. Set the **Power** switch to **CAMERA**.
- 2. Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- Connect one end of the USB cable to the USB jack on the Camcorder and the other end to the USB connector on your computer.

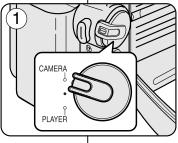

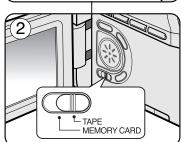

- 1. Coloque el interruptor Power en CAMERA.
- Coloque el interruptor Mode en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Conecte un extremo del cable USB al conector USB de la videocámara y el otro al conector USB del PC.



USB Interface (VP-D352(i)/D353(i)/D354(i)/D355(i) only)

Using the USB Streaming Function

- To use USB streaming, the DV Driver, Video Codec and DirectX 9.0. programmes must be installed in the PC.
- You can view Camcorder video on your PC using USB streaming.
- You can also store it as a moving picture in the "avi" file format, or as a still image in the "jpg" file format on a PC.
- Set the Mode switch to TAPE (VP-D353(i)/D354(i)/D355(i) only), set the Power switch to CAMERA or PLAYER.
- Connect one end of the USB cable to the USB jack on the Camcorder and the other end to the USB port on your computer.
- Setup and execute Windows Movie Maker or the Ulead VIDEO Studio Software application provided on the CD.
 - For detailed instructions for Ulead VIDEO Studio use, refer to the programmes Help function
 - Windows Movie Maker is used for WINDOWS ME and XP users. (C:\programme files\Movie maker\moviemk.exe)

Using the removable Disk Function (VP-D353(i)/D354(i)/D355(i) only)

- You can easily transfer data from a Memory card to a PC without additional add-on cards via a USB connection.
- 1. Set the Mode switch to MEMORY CARD, set the Power switch to CAMERA or PLAYER.
- Connect one end of the USB cable to the USB jack on the Camcorder and the other end to the USB port on your computer.
- 3 To verify whether the removable disk has been properly recognised, open Windows Explorer and locate the removable disk.

Connecting to a PC

- 1. Connect a USB cable to the USB port on the PC.
 - If a USB cable is connected to the Camcorder's USB port, nothing is displayed on a TV.
- 2. Connect the other end of the USB cable into the USB jack on the Camcorder. (USB jack)
 - If a PC is connected to the Camcorder with a USB cable only, Zoom switch and NITE PIX operate.

Disconnecting the USB Cable

- After completing the data transmission, you must disconnect the cable in the following way:
- Select the removable disc icon and click the right mouse button to select [Eject].
- 2. Select [Confirm] and disconnect the USB cable when the Windows Splash screen appears.

[Notes]

- If you disconnect the USB cable from the PC or the Camcorder while transferring, the data transmission will stop and the data may be damaged.
- If you connect the USB cable to a PC via a USB HUB or simultaneously connect the USB cable along with other USB devices, the Camcorder may not work properly.
 If this occurs, remove all USB devices from the PC and reconnect the Camcorder.
- While transmitting data from the Camcorder to PC at strong electric field and strong magnetic field, VIDEO signal or AUDIO signal may transmit with noise.

Utilización de la función USB Streaming

 Para utilizar USB Streaming, deben instalarse en el PC los programas the DV Driver, Video Codec and DirectX 9.0.

Interfaz USB (Sólo VP-D352(i)/D353(i)/D354(i)/D355(i))

- ♣ Puede ver vídeo de la videocámara en su PC utilizando USB Streaming.
- También puede guardarlo como imagen de vídeo con el formato de archivo "avi" o como imagen fija en formato de archivo "jpg" en un PC.
- Coloque el interruptor Mode en TAPE (Sólo VP-D353(i)/ D354(i)/D355(i)), coloque el interruptor Power en CAMERA o PLAYER.
- Conecte un extremo del cable USB al conector USB de la videocámara y el otro al puerto USB del PC.
- Configure y ejecute Windows Movie Maker o la aplicación Ulead VIDEO Studio que se incluye en el CD.
 - Para obtener instrucciones detalladas sobre el uso de Ulead VIDEO Studio, consulte la función de ayuda del programa.
 - Windows Movie Maker se utiliza para usuarios de WINDOWS ME y XP. (C.\program files\Movie maker\moviemk.exe)

Utilización de la función "Disco extraíble" (Sólo VP-D353(i)/D354(i)/D355(i))

- Se pueden transferir datos de manera sencilla desde una tarjeta de memoria a un PC mediante una conexión USB, sin necesidad de una tarjeta adicional.
- Coloque el interruptor Mode en MEMORY CARD coloque el interruptor Power en CAMERA o PLAYER.
- Conecte un extremo del cable USB al conector USB de la videocámara y el otro al puerto USB del PC.
- 3 Para verificar si se ha reconocido correctamente el disco extraíble, abra el Explorador de Windows y localice el disco extraíble.

Conexión a un PC

USB Cable

@ 0000

- 1. Conecte un extremo del cable USB al puerto USB del PC.
 - Si se conecta un cable USB al puerto USB de la videocámara, no aparece nada en el TV.
- 2. Conecte el otro extremo del cable al terminal apropiado de la videocámara (conector USB).
 - Si se conecta un PC a la videocámara sólo con un cable USB, el interruptor Zoom y NITE PIX.

Desconexión del cable USB

- Tras completar la transmisión de datos, debe desconectar el cable de la forma siguiente:
- Seleccione el icono del disco extraíble y haga clic en el botón derecho del ratón para seleccionar (Expulsar).
- Seleccione "Confirmar" y desconecte el cable USB cuando desaparezca la pantalla emergente.

- Si desconecta el cable USB del PC o de la videocámara mientras se están transfiriendo datos, la transmisión se detendrá y puede que los datos resulten dañados.
- Si conecta el cable USB al PC a través de un concentrador (hub) USB, o si lo conecta de manera simultánea con otros aparatos USB, es posible que la videocámara no funcione correctamente.
- En este caso, desconecte del PC los otros aparatos USB y vuelva a conectar la videocámara.
- Cuando se transmiten datos desde la videocámara a un PC en un campo electromagnético potente, es posible que la señal de vídeo y de audio transmitida tenga interferencias.



Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Memory Stick (Optional Accessory)

The Memory Stick stores and manages images recorded by the Camcorder.

Memory Stick Functions

- Recording still images and MPEG4 movies
- Viewing still images and MPEG4 movies
 - Single
 - Slide show (Still images only)
 - Multi display (Still images only)
- Protecting images against accidental erasure
- Deleting images recorded on a Memory Stick
- Print marking still images
- Formatting a Memory Stick

Terminal Protection tab

Funciones del Memory Stick

grabadas con la videocámara.

Grabación de imágenes fijas y películas MPEG4

♣ El Memory Stick guarda y gestiona imágenes fijas

- Visionado de imágenes fijas y películas MPEG4
 - Una a una:

Memory Stick (Accesorio opcional)

- Presentación (sólo imágenes fijas)
- Visionado simultáneo o de varias imágenes (sólo imágenes fijas)

ESPAÑOL

- Protección de imágenes contra el borrado accidental
- Supresión de imágenes grabadas en un Memory Stick
- Marcado para la impresión de imágenes fijas
- Formato de un Memory Stick

[Notes]

- You can use most of the Camcorder's functions when recording to the Memory Stick.
- appears on the screen while recording to the Memory Stick.
- While recording or loading an image, do not eject or insert the Memory Stick. Inserting or ejecting a Memory Stick while recording or loading an image can cause data damage.
- If you want to save all images on the Memory Stick, set the write protect tab on the Memory Stick to LOCK.

[Notas]

- Cuando se graba en un Memory Stick se pueden emplear la mayoría de las funciones de la cámara.
- Cuando se graba en un Memory Stick aparece en la pantalla la indicación
 ▶ .
- No saque ni introduzca el Memory Stick mientras graba o carga una imagen.
 En este caso es posible que los datos resulten dañados.
- Si quiere guardar todas las imágenes del Memory Stick, ponga la pestaña de protección de éste en la posición LOCK.

MEMORY STICK TO

- All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies.

Furthermore, "TM" and "®" are not mentioned in each case in this manual.



MEMORY STICK TO

- "Memory Stick" y son marcas registradas de Sony Corporation.
- Todos los demás productos mencionados son marcas comerciales o marcas registradas de sus respectivas empresas.

Además, las indicaciones " $^{\text{\tiny TM}"}$ y " $^{\text{\tiny B}"}$ no aparecen en todos los casos en este manual.



ESPAÑOL

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

Introducción y extracción de la tarjeta de memoria

Inserting and Ejecting the Memory Card

Inserting the Memory card

- 1. Set the **Power** switch to **Off**.
- 2. Open the Memory card cover.
- Insert the Memory card in the direction of the arrow into the Memory card slot located on the bottom of the Camcorder.

Ejecting the Memory card

- 1. Set the Power switch to Off.
- 2. Open the Memory card cover.
- Push the Memory card, then it comes out of the Camcorder automatically.
- Pull out the Memory card.
 Do not attempt to pull the Memory card out without first pushing it in.

[Notes]

- Memory Stick Duo type or RS-MMC (VP-D354(i)/D355(i) only) should be inserted by using the Adaptor (not supplied).
- If you set the Camcorder to M.Player mode, the last recorded still image appears.

If there are no recorded images on the Memory card,

No image! will display on the screen.

- While recording, loading, erasing or formatting, do not turn off the power or change the mode.
- Please turn the power off before you insert or eject the Memory card.
 You could lose data on the Memory card.
- Do not allow metal substances to come in contact with the terminals of the Memory card.
- Do not bend, drop or apply strong shock to Memory card.
- After pulling the Memory card out from the Camcorder, please keep the Memory card in a soft case to prevent static shock.
- The stored contents may be changed or lost as a result of misuse, static electricity, electric noise or repair.
 - Save important images separately.
- Samsung is not responsible for data loss due to misuse.

VP-D353(i) only



Memory Stick Memory Stick PRO

VP-D354(i)/D355(i) only



Memory Stick Memory Stick PRO





SD/MMC

(Usable Memory card)

Inserción de la tarjeta de memoria

- Coloque el interruptor Power en Off.
- 2. Abra la tapa de la tarjeta de memoria.
- Introduzca la tarjeta de memoria en la ranura de la tarjeta de memoria situada en la parte inferior de la videocámara en la dirección que indica la flecha.

Extracción de la tarjeta de memoria

- 1. Coloque el interruptor Power en Off.
- 2. Abra la tapa de la tarjeta de memoria.
- Empuje la tarjeta de memoria y saldrá automáticamente de la videocámara.
- Saque la tarjeta de memoria.
 No intente sacar la tarjeta de memoria sin empujarla antes.

- El tipo Memory Stick Duo o RS-MMC (Sólo VP-D354(i)/ D355(i)) deberían insertarse utilizando el adaptador (no se suministra).
- Si ajusta la videocámara en la modalidad M.PLAY, aparece la última imagen grabada.
 - Si no hay ninguna imagen grabada en la tarjeta de memoria, en la pantalla aparecerá "No image!" <No hay imagen>.
- No apague la videocámara ni cambie de modalidad mientras graba, carga, borra o da formato.
- Apague la videocámara antes de introducir o de extraer el la tarjeta de memoria. De no hacerlo así, podrían perderse datos grabados en la tarjeta.
- Impida que los terminales de la tarjeta entren en contacto con objetos metálicos.
- No doble, deje caer ni golpee la tarjeta de memoria.
- Después de sacar la tarjeta de memoria de la videocámara, guárdela en una funda blanda para evitar descargas electroestáticas.
- El contenido almacenado se puede cambiar o perder a causa de un uso incorrecto, de la electricidad estática, de interferencias eléctricas o de reparaciones.
 Guarde las imágenes importantes aparte.
- Samsung no se hace responsable de los datos perdidos a causa del uso incorrecto.



Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Structure of Folders and Files on the Memory Card

- The still images that you recorded are saved in JPEG file format on the Memory card.
- The moving images that you recorded are saved in MPEG4 file format on the Memory card.
- Each file has a file number and all files are assigned to a folder.
 - A file number from DCAM0001 is sequentially assigned to each recorded image.
 - Each folder is numbered from 100SSDVC and recorded on the Memory card.

Image Format

Still Image

- Images are compressed in JPEG (Joint Photographic Experts Group) format.
- The picture size is 800x600 (Tape Capture 640x480).

Moving Image

- Images are compressed in MPEG 4(Moving Picture Experts Group) format.
- The picture size is 720x576.

Selecting the Camcorder Mode

- You can use this Camcorder as a Digital Still Camera (DSC).
- You have to set the Mode switch to Memory card to use this Camcorder as Digital Still Camera.

M.Cam mode (Memory record mode)


- 1. Set the **Power** switch to **CAMERA**.
- 2. Set the Mode switch to MEMORY CARD.


M.Player mode (Memory playback mode)

- 1. Set the **Power** switch to **PLAYER**.
- 2. Set the Mode switch to MEMORY CARD.

DCIM 100 SSDVC DCAM 0001 DCAM 0002 ... 101SSDVC <Still image>



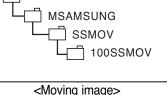

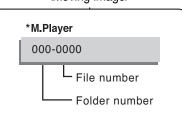

Estructura de carpetas y archivos en la tarjeta de memoria

 Las imágenes fijas grabadas se guardan en la tarjeta de memoria en formato JPEG

ESPAÑOL

- El vídeo grabado se guarda en la tarjeta de memoria en formato MPEG4.
- Cada archivo tiene un número y todos los archivos están asignados a una carpeta.
 - A cada imagen grabada se le asigna un número que va desde DCAM0001 a DCAM9999.
 - Todas las carpetas se numeran desde 100SSDVC y se graban en la tarieta.

Formato de imágenes

Imágenes fijas

- Estas imágenes se comprimen en formato JPEG (Joint Photographic Experts Group).
- El número de píxeles es 800 x 600 (Captura de cinta 640 x 480) en cada modalidad.

Vídeo

- Los vídeos se comprimen en formato MPEG4 (Moving Picture Experts Group).
- El número de píxeles es 720 x 576 en cada modalidad.

Selección de la modalidad de videocámara

- Esta videocámara se puede usar como cámara fotográfica digital (DSC).
- Para usar esta videocámara como cámara fotográfica digital, deberá ajustar el interruptor Mode en la posición Memory Card.

Modalidad M.Cam (modalidad de grabación en memoria)

- Coloque el interruptor Power en CAMERA.
- 2. Coloque el interruptor Mode en MEMORY CARD.

Modalidad M.Player (modalidad de reproducción de memoria)

- 1. Coloque el interruptor Power en PLAYER.
- 2. Coloque el interruptor Mode en MEMORY CARD.



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Selecting the Built-in Memory (VP-D354(i)/D355(i) only)

- Built-in memory setting is available in the Player/M.Cam/M.Player modes. (VP-D354(i): 16MB/VP-D355(i): 64MB)
- Images can be stored and played back using the built-in memory. Hence, set the memory type before storing and playing back images.
- 1. Set the power switch to **CAMERA** or **PLAYER**.
- 2. Set the Mode switch to TAPE or MEMORY CARD.
- 3. Press the **MENU** button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select Memory, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select **Memory Type**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select Int. Memory or Memory card, then press the Menu selector.
- 7. To exit, press the **MENU** button.

Using Quick Menu: Memory Type

- Press the Menu selector.
- Move the Menu selector to left or right to select Memory Type, then press the Menu selector.
- Move the Menu selector to the left or right to select Int. Memory or Memory card, then press the Menu selector.
- 4. To exit, press the **MENU** button.




Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))


Selección de la memoria interna (Sólo VP-D354(i)/D355(i))

- El ajuste de la memoria interna está disponible en las modalidades Player/M.Cam/M.Player. (VP-D354(i): 16MB/VP-D355(i): 64MB)
- Las imágenes se puéden almacenar y reproducir utilizando la memoria interna.

Por tanto, defina el tipo de memoria antes de almacenar y reproducir las imágenes.


- 1. Coloque el interruptor Power en CAMERA o PLAYER.
- 2. Coloque el interruptor **Mode** en **TAPE** o **MEMORY CARD**.
- 3. Pulse el botón **MENU**.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Memory < Memoria> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Memory Type <Tipo de memoria> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Int. Memory <Memoria int.> o Memory Card <Tari. Memoria> y pulse el Selector de menú.
- 7. Para salir, pulse el botón **MENU**.

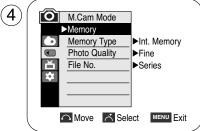

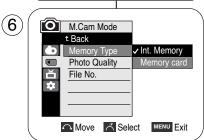


Utilización del menú rápido: Memory Type (Tipo de memoria)

Pulse el Selector de menú.

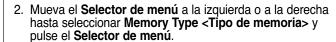

 Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Int. Memory <Memoria int.> o Memory Card <Tari. Memoria> v pulse el Selector de menú.

4. Para salir, pulse el botón **MENU**.

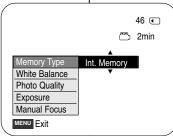



ESPAÑOL

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)


Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))


Selecting the Image Quality

❖ You can select the quality of a still images to be recorded.

Select the Image Quality

- 1. Set the **Power** switch to **CAMERA**.
- Set the Mode switch to MEMORY CARD.
- 3. Press the **MENU** button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select Memory, then press the Menu selector.
- 5. Move the **Menu selector** to the left or right to select **Photo Quality**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select desired image quality(Super Fine, Fine, Normal), then press the Menu selector.
- 7. To exit, press the **MENU** button.
 - The selected icon will be displayed

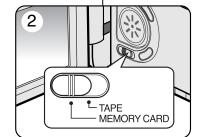

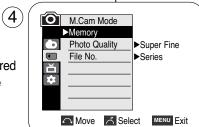

Selección de la calidad de imagen

Se puede seleccionar la calidad de las imágenes fijas que se van a grabar.

Selección de la calidad de imagen

- 1. Coloque el interruptor Power en CAMERA.
- 2. Coloque el interruptor Mode en MEMORY CARD.
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Memory < Memoria> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Photo Quality <Calidad Foto> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la calidad de imagen deseada (Super Fine <Superfina>, Fine <Fina>, Normal) y pulse el Selector de menú.
- 7. Para salir, pulse el botón MENU.
 - El icono escogido se demostrará.

Número de imágenes en la tarjeta de memoria

CALIDAD	8MB	16MB
Superfina	Aprox. 34	Aprox. 68
Fina	Aprox. 45	Aprox. 90
Normal	Aprox. 74	Aprox. 148

El número real de imágenes que puede grabarse depende de la naturaleza del tema que se va a grabar.


Número de imágenes en la tarjeta de memoria

QUALITY	8MB	16MB
Super Fine	Approx. 34	Approx. 68
Fine	Approx. 45	Approx. 90
Normal	Approx. 74	Approx. 148

The actual number of images that you can record varies depending on the nature of the subject to be recorded.

[Notes]

- The above approximation is based on a 8MB Memory Stick under normal recording conditions.
- The number of pictures that can be stored on a memory card depends on various conditions.

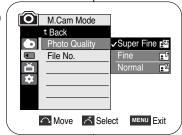

(5)

[Notes]

- La aproximación anterior está basada en un Memory Stick de 8MB en condiciones de grabación normales.
- El número de imágenes que se pueden almacenar en una tarjeta de memoria depende de diversas condiciones.



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Using Quick Menu: Photo Quality

- Quick menu is used to access Camcorder functions by using the Menu selector.
- Quick menu provides easier access to frequently used menus without using the MENU button.
- 1. Press the Menu selector.
- 2. Move the **Menu selector** to left or right to select **Photo Quality**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select desired image quality (Super Fine, Fine, Normal), then press the Menu selector.
- 4. To exit, press the **MENU** button.


Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))


Utilización del menú rápido: Photo Quality < Calidad Foto>

- El menú rápido se utiliza para acceder a las funciones de la videocámara utilizando simplemente el Menu Selector «Selector de menú».
- El menú rápido proporciona un acceso más sencillo a los menús de uso frecuente utilizando el botón MENU.
 - Pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Photo Quality <Calidad Foto> y pulse el Selector de menú.

ESPAÑOL

- 3. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar la calidad de imagen deseada (**Super Fine <Superfina>**, **Fine <Fina>**, **Normal**) y pulse el **Selector de menú**.
- 4. Para salir, pulse el botón **MENU**.

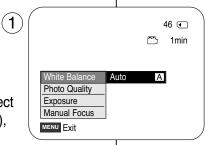

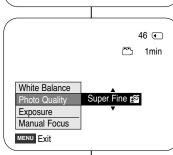

(3)




Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)


Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

ESPAÑOL

Memory File Number

- ❖ File number setting works only in M.Cam mode.
- ❖ File numbers are given to images in the order they were recorded when they are stored on the Memory card.
- Memory file numbers may be set as follows:
 - Series: When there are existing files, the new image will be named as the next number in the sequence.
 - Reset: When there are no files stored on the Memory card, the file numbering starts from 0001.
- 1. Set the **Power** switch to the **CAMERA**.
- 2. Set the Mode switch to MEMORY CARD.
- 3. Press the MENU button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Memory**, then press the **Menu selector**.
- 5. Move the **Menu selector** to the left or right to select **File No.**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select desired option(Series or Reset), then press the Menu selector.
- 7. To exit, press the **MENU** button.

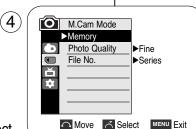

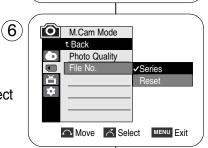

Número de archivos en memoria

- El ajuste del número de archivo sólo está operativo en la modalidad M.Cam.
- Los números de archivo se asignarán a las imágenes por orden de grabación cuando las imágenes fijas se almacenen en la tarjeta de memoria.
- Los números de archivo de memoria se pueden definir de la siguiente forma:
 - Series (Serie): When there are existing files, the new image will be named as the next number in the sequence.
 - Reset (Reiniciar): Cuando no hay archivos almacenados en la tarjeta de memoria, la numeración comienza desde 0001.
 - 1. Coloque el interruptor **Power** en **CAMERA**.
 - 2. Coloque el interruptor Mode en MEMORY CARD.
 - 3. Pulse el botón **MENU**.
 - Aparece la lista del menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Memory < Memoria > y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar File No. < Archivo No.> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la opción deseada (Series <Serie> o Reset <Reiniciar>) y pulse el Selector de menú.
 - 7. Para salir, pulse el botón MENU.




Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)


Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))


Taking Photos

- You may take still images while in M.Cam mode and store the images on the Memory card. This function is useful when you want to take a snapshot of a subject while you are using the Camcorder.
- You can take photos using the remote control.
- Audio will not be recorded with a Still image on to the Memory Card.
- 1. Set the **Power** switch to **CAMERA**.
- 2. Set the Mode switch to MEMORY CARD.
- 3. After framing your object to record, fully press the **PHOTO** button to take the picture.
 - The picture is taken and saved into the Memory card within a few seconds.
 - Taking another picture within this interval is not possible.
 - The indicator appears LCD screen during the time it takes to save the image.

Toma de fotos

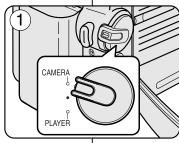

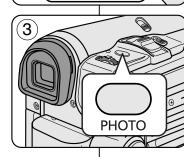

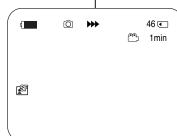

- Puede hacer fotografías mientras se encuentra en la modalidad M.Cam y guardar las imágenes en la tarjeta de memoria.
 - Esta función resulta de utilidad cuando se quiere tomar una instantánea de un objeto mientras se utiliza la videocámara.
- Puede hacer fotografías utilizando el mando a distancia.
- El audio no puede grabarse con una imagen fija en la tarjeta de memoria.
- 1. Coloque el interruptor **Power** en **CAMERA**.
- 2. Coloque el interruptor Mode en MEMORY CARD.
- 3. Tras encuadrar el objeto que se va a grabar, pulse totalmente el botón **PHOTO** para tomar la imagen.
 - La imagen se captura y se guarda en la tarjeta de memoria en pocos segundos.
 - En este intervalo no es posible capturar otra imagen.

[Notes]

- Still images are saved in the Memory card in an 800x600 format.
- The number of still images that can be stored depends on the quality of the image.

- Las imágenes fijas guardadas se guardan en la tarjeta de memoria con un formato 800 x 600.
- El número de imágenes fijas que se pueden guardar depende de la calidad de la imagen.



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

ESPAÑOL

Viewing Still Images

- This function works only in M.Player mode. You can playback and view still images recorded on the Memory card.
- ❖ Be sure that the M.Play Select is set to Photo in the Menu.
- There are 3 ways to view recorded images.
 - Single: To view an image frame by frame.
 - Slide show: To view all images automatically and in consecutive order.
 - Multi display: To view 6 images at once.

To view a Single Image

- Set the Power switch to PLAYER.
- 2. Set the Mode switch to MEMORY CARD.
 - The last recorded image appears.
 - If there are no recorded images on the Memory card, No image! will display on the screen.
- 3. Using the ∢/▶ (REV/FWD) buttons, search for the desired still image.
 - To view the next image: press the ► (FWD) button.
 - To view the previous image: press the **◄** (REV) button.
 - Pressing ► (FWD) when you are on the last image will take you to the first image and pressing ◄ (REV) when you are on the first image will take you to the last image.
 - Keep pressing ► (FWD) or ◄ (REV) to search for an image quickly.

(3)

To view a Slide Show

- 1. Set the **Power** switch to **PLAYER**.
- 2. Set the **Mode** switch to **MEMORY CARD**.
- The last recorded image appears.
- 3. Press the ▶/II (S.SHOW) button.
 - All images will be played back consecutively for 2~3 seconds each.
 - The "Slide" will be display on the LCD screen.
- 4. To stop the slide show, press the ►/II (S.SHOW) button again.

[Notes]

- Loading time may vary depending on the image size.
- The Slide Show will start from the current picture.
- Any large sized image taken with another device will be displayed as a thumbnail image.

Visualización de imágenes fijas

- Esta función sólo está operativa en la modalidad M.Player. Es posible reproducir y ver las imágenes grabadas en el la tarjeta de memoria.
- Asegúrese de que M.Play Select <Selección de M.Play> está definido en Photo <Foto> en el menú.
- Hay tres maneras de ver las imágenes grabadas.
 - Una a una: se ven una imagen fotograma a fotograma.
 - Presentación: las imágenes se pasan automáticamente y en orden consecutivo.
 - Visionado de varias imágenes: se ven 6 imágenes al mismo tiempo.

Visionado de imágenes una a una

- 1. Coloque el interruptor **Power** en **PLAYER**.
- 2. Coloque el interruptor Mode en MEMORY CARD.
 - Aparece la última de las imágenes grabadas.
 - Si no hay ninguna imagen grabada en el tarjeta de memoria, en la pantalla aparecerá No image! <No hay imagen!>.
- 3. Busque la imagen que desee pulsando los botones ◀/▶ (REV/FWD).
 - Para ver la imagen siguiente: pulse el botón **>** (FWD).
 - Para ver la imagen anterior: pulse el botón **◄**(REV).
 - Si se pulsa → (FWD) cuando se ncuentra en la última imagen, le llevará a la primera imagen y si se pulsa ◄ (REV) cuando está en la primera imagen, le llevará a la última imagen.
 - Para buscar una imagen rápidamente, mantenga pulsado el botón
 → (FWD) o ◀ (REV).

Visionado en presentación


- 1. Coloque el interruptor Power en PLAYER.
- 2. Coloque el interruptor Mode en MEMORY CARD.
- Aparece la última de las imágenes grabadas.
- 3. Pulse el botón ▶/II (S.SHOW).
 - Las imágenes pasarán consecutivamente y aparecerá en la pantalla durante 2 ó 3 segundos cada una.
- Aparecerá "Slide" en la pantalla LCD.
- Para detener la presentación, pulse de nuevo el botón ▶/Ⅲ (S.SHOW).

[Notas]

100-0002

- El tiempo de carga puede variar dependiendo del tamaño de la imagen.
- La Presentación se iniciará a partir de la imagen actual.
- Cualquier imagen grande tomada con otro dispositivo aparecerá como una imagen en miniatura.



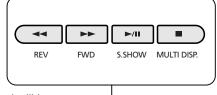


Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

To view the Multi Display

- 1. Set the **Power** switch to **PLAYER**.
- 2. Set the **Mode** switch to **MEMORY CARD**.
 - The last recorded image appears.
- 3. To view six stored images on single screen, press the **(MULTI DISP.)** button.
 - A selection mark (◀◀ / ▶▶) appears under the image.
 - Press ◀ / ►► (REV/FWD) button to select an image.
- 4. To return to single playback mode, press the **(MULTI DISP.)** button again.
 - Selected picture is displayed in full screen mode.

100-0007 7/25

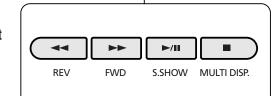

Visionado de varias imágenes fijas en pantalla

- 1. Coloque el interruptor **Power** en **PLAYER**.
- 2. Coloque el interruptor Mode en MEMORY CARD.
 - Aparece la última de las imágenes grabadas.
- 3. Para ver seis imágenes almacenadas en una sola pantalla, pulse el botón **(MULTI DISP.).**
 - Debajo de la imagen aparece una marca de selección (◄◄ / ▶►).
 - Pulse el botón ◀◀ / ▶▶ (REV/FWD) para seleccionar una imagen.
 - Para regresar a la modalidad de reproducción una a una, pulse de nuevo el botón ■ (MULTI DISP.).
 - La imagen seleccionada aparece a toda pantalla.

[Notes]

- To display the previous six images, press and hold the ◀ (REV) button for about 3 seconds.
- To display the next six images, press the ►► (FWD) button for about 3 seconds.
- In order to use Delete, Protect or Print Mark functions in Multi Display view mode, use the Quick Menu by pressing the Menu Selector.

- Para ver las seis imágenes anteriores, mantenga pulsado el botón

 ← (REV) durante unos 3 segundos.
- Para ver las seis imágenes siguientes, mantenga pulsado el botón
 ▶ (FWD) durante unos 3 segundos.
- Para utilizar las funciones Delete <Borrar>, Protect <Proteger> o
 Print Mark <Marca de impresión> en la modalidad de visualización
 Multi Display <Multipantalla>, utilice el Menú rápido pulsando el
 Selector de menú.



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

Protection from accidental Frasure

- ❖ The protection function works only in M.Player mode.
- ❖ You can protect important images from accidental erasure. If you execute format, all images including protected images will be erased.
- Set the Power switch to PLAYER.
- 2. Set the Mode switch to MEMORY CARD.
 - The last recorded image appears.
 - If there are no recorded images on the Memory card, No image! will display on the screen.
- 3. Using the ◀ / ▶▶ (REV/FWD) buttons, search for the still image that you want to protect.
- 4. Press the **MENU** button.
 - The menu list will appear.
- 5. Move the **Menu selector** to the left or right to select **Memory**, then press the **Menu selector**.
- 6. Move the **Menu selector** to the left or right to select Protect, then press the Menu selector.
- 7. Move the **Menu selector** to the left or right to select **On**, then press the Menu selector.
- 8. To exit, press the **MENU** button.
 - The protection (♠) icon will be displayed.

(8) 800x600

[Notes]


- Protected pictures will show the (♠) mark when they are
- If the write protection tab on the Memory card is set to LOCK, you cannot set image protection.

Protección contra borrado accidental

- ❖ Esta función de protección sólo está operativa en la modalidad M.Player.
- ♣ Las imágenes más importantes se pueden proteger contra el borrado accidental.
 - Si ejecuta Format, todas las imágenes, incluidas las protegidas, se borrarán.
 - 1. Coloque el interruptor Power en PLAYER.
 - 2. Coloque el interruptor Mode en MEMORY CARD.
 - Aparece la última de las imágenes grabadas.
 - Si no hay ninguna imagen grabada en el tarjeta de memoria, en la pantalla aparecerá No image! <No hay imagen !>.
 - 3. Busque la imagen fija que desee proteger pulsando los botones ◀ / ▶ (REV/FWD).
 - Pulse el botón MENU.
 - Aparece la lista del menú.
 - 5. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Memory < Memoria > y pulse el Selector de menú.
 - 6. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Protect < Protección > y pulse el Selector de menú.
 - 7. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar On <Actv.> y pulse el Selector de menú.
 - 8. Para salir, pulse el botón **MENU**.
 - Aparecerá el icono de protección (♣).

[Notes]

- Las imágenes protegidas mostrarán la marca (♠) cuando
- Si la pestaña de protección contra escritura en la tarieta de memoria está colocada en LOCK, no puede definir la protección de imagen.

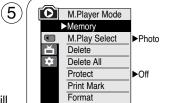

M.Player Mode

t Back M.Play Select

Delete


Delete All Protect

Print Mark

Format

ĭ

On

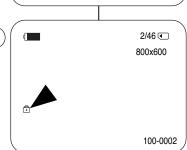



ESPAÑOL

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)


Using Quick Menu: Protect


- Quick menu is used to access Camcorder functions by simply using the Menu selector.
- Quick menu provides easier access to the frequently used menus without using the MENU button.
- Press the Menu selector.
- 2. Move the **Menu selector** to left or right to select **Protect**, then press the **Menu selector**.
- 3. Move the **Menu selector** to the left or right to select **On** or **Off**, then press the **Menu selector**.
- 4. To exit, press the **MENU** button.




Utilización del menú rápido: Protect (Protección)

- El menú rápido se utiliza para acceder a las funciones de la videocámara utilizando simplemente el Selector de menú.
- ❖ El menú rápido proporciona un acceso más sencillo a los menús de uso frecuente utilizando el botón MENU.

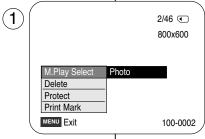

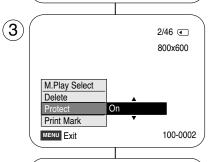

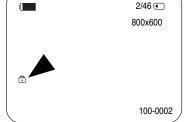

- Pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Protect
 Protección> y pulse el Selector de menú.

ESPAÑOL

- 3. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar **On <Actv.>** o **Off <Des.>** y pulse el **Selector de menú**.
- 4. Para salir, pulse el botón MENU.



Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

(5)

Deleting Still Images and Moving Images

- The Delete function works only in M.Player mode.
- You can erase the still images and moving images recorded on the Memory card.
- If you want to delete protected images, you must first deactivate the image protection.
- An image which has been deleted cannot be recovered.
- 1. Set the **Power** switch to **PLAYER**.
- 2. Set the **Mode** switch to **MEMORY CARD**.
- 3. Using the ◀/► (REV/FWD) buttons, search for the still image that you want to delete.
- 4. Press the **MENU** button.
 - The menu list will appear.
- 5. Move the **Menu selector** to the left or right to select **Memory**, then press the **Menu selector**.
- 6. Move the **Menu selector** to the left or right to select **Delete**, then press the **Menu selector**.
 - A message **Do you want to delete?** appears.
- 7. Move the **Menu selector** to the left or right to select **Yes** or **No**, then press the **Menu selector**.
- 8. To exit, press the **MENU** button.

Deleting All image at once

Move the **Menu selector** to the left or right to select **Delete All**, then press the **Menu selector**. A message **Do you want to delete all?** appears.

Supresión de imágenes fijas y secuencias


- Esta función de borrado sólo está operativa en la modalidad M.Player.
 - * Es posible borrar las imágenes fijas y las imágenes de vídeo grabados en la tarjeta de memoria.

ESPAÑOL

- Si desea borrar imágenes protegidas, primero tendrá que desactivar la protección de imágenes.
- Una imagen que se ha borrado no se puede recuperar.
- 1. Coloque el interruptor **Power** en **PLAYER**.
- 2. Coloque el interruptor **Mode** en **MEMORY CARD**.
- 3. Busque la imagen fija que desee proteger pulsando los botones ◀ / ▶ (REV/FWD).
- 4. Pulse el botón MENU.
- Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Memory < Memoria> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Delete < Eliminar> y pulse el Selector de menú.
 - Aparece el mensaje Do you want to delete? <Quiere borrar?>.
- 7. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar **Yes <Sí>** o **No <No>** y pulse el Selector de menú.
- 8. Para salir, pulse el botón MENU.

Supresión de todas las imágenes de una vez

Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar **Delete All <Borrar todo>** y pulse el Selector de menú. Aparece el mensaje **Do you want to delete all? <Quiere borrarlas todas?>.**

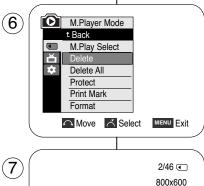

M.Player Mode

M.Play Select ▶Photo

▶Off

▶Memory

Delete


Delete All

Print Mark

Protect

Format

△⇔

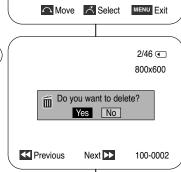



ESPAÑOL

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

Using Quick Menu: Delete

Quick menu is used to access Camcorder functions by simply using the Menu selector.

Quick menu provides easier access to the frequently used menus without using the MENU button.

- Press the Menu selector.
- 2. Move the **Menu selector** to left or right to select **Delete**, then press the **Menu selector**.
- 3. Move the **Menu selector** to the left or right to select **Cancel** or **Delete**, then press the **Menu selector**.
- 4. To exit, press the **MENU** button.

Utilización del menú rápido: Delete <Eliminar>

- El menú rápido se utiliza para acceder a las funciones de la videocámara utilizando simplemente el Selector de menú.
- El menú rápido proporciona un acceso más sencillo a los menús de uso frecuente utilizando el botón MENU.
- Pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Delete <Eliminar> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Cancel <Cancelar> o Delete <Eliminar> y pulse el Selector de menú.
- 4. Para salir, pulse el botón **MENU**.


[Notes]

- When there is no stored picture on the Memory card, the message No image! will be displayed.
- If an erroneous image file is found on the Memory card, the message Memory card error! will be displayed.
 It may be caused by copying images from different digital devices.
- Formatting the Memory card will delete all the stored images. (see page 101)
- To protect important pictures from accidental deletion, activate the image protection (refer to page 97).
- Deleting all files using the Delete All menu may take a while.
 To delete all files much faster, format the memory card after backing up the files into other storage device.


「Notas 1

- Si no hay ninguna imagen almacenada en la tarjeta de memoria, aparecerá No image! <No hay imagen!>.
- Si se detecta un formato de archivo erróneo, aparecerá el mensaje Memory card error! < Error de tarjeta de memoria!>.
 Puede haber sucedido al copiar imágenes desde diferentes dispositivos digitales.
- El formato de la tarjeta de memoria borrará todas las imágenes almacenadas (Consulte la página 101).
- Para proteger una imagen importante frente a borrado accidental, active la protección de imágenes (consulte la página 97).
- La eliminación de todos los archivos con Delete All <Borrar todo> puede tardar un rato.

Para borrar todos los archivos de una forma más rápida, dé formato a la tarjeta de memoria tras hacer una copia de seguridad de los archivos en otro dispositivo de almacenamiento

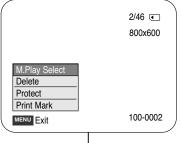

1

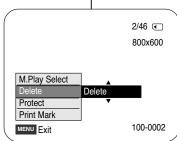

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Formatting the Memory Card

- The Format function works only in M.Player mode.
- You can use the memory format functions to completely delete all images and options on the Memory card, including protected images.
- ❖ The format function restores the Memory card to its initial state.
- The Memory card supplied with this Camcorder has been formatted already.

Attention

- If you execute the memory format function, all images will be erased completely and erased images cannot be recovered.
- 1. Set the **Power** switch to **PLAYER**.
- 2. Set the Mode switch to MEMORY CARD.
- 3. Press the MENU button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select Memory, then press the Menu selector.
- Move the Menu selector to the left or right to select Format, then press the Menu selector.
- Move the Menu selector to the left or right to select desired option(Int. Memory or Memory card), then press the Menu selector. (VP-D354(i)/D355(i) only)
 - If you select Int. Memory or Memory card, a message All files are deleted! Do you want to format? appears.
- Move the Menu selector to the left or right to select Yes, then press the Menu selector.
 - Complete! appears when the format is completed.
- 8. To exit, press the **MENU** button.

[Notes]

- If you execute the Format function, all still images/motion clips will be erased completely and erased still images/motion clips cannot be recovered.
- Formatting the Memory card using a different device will cause Memory card read errors.
- Formatting the Memory card deletes all the stored data in the Memory card.
- Do not turn the power off in the middle of the formatting.
- A Memory Stick with the protection tab set to save will not be formatted. (see page 87)
- Do not format the Memory Card on a PC.
 "Not Formatted" message may appear if a Memory Card formatted on a PC was inserted.

Formato de la tarjeta de memoria

- Esta función de formato sólo está operativa en la modalidad M.Player.
- Para eliminar por completo las imágenes y las opciones de la tarjeta de memoria, incluidas las imágenes protegidas, se pueden emplear las funciones de formato de memoria.

Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

- La función de formato devuelve la tarjeta de memoria a su estado inicial.
- ♣ La tarjeta de memoria que se suministra junto con la videocámara ya tiene formato.

Atención


- Si ejecuta la función de formato de memoria, todas las imágenes se borrarán completamente y no se podrán recuperar.
- 1. Coloque el interruptor Power en PLAYER.
- 2. Coloque el interruptor Mode en MEMORY CARD.
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Memory < Memoria> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Format <Formato> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la opción deseada (Int. Memory <Memoria int.> o Memory Card <Tarj. Memoria>) y pulse el Selector de menú. (Sólo VP-D354(i)/D355(i))
 - Para seleccionar la tarjeta de memoria interna o la memoria, aparece el mensaje All files are deleted! Do you want to format? <Todos Archiv. Eliminad.! Quiere formatear?>.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Yes <Sí> y pulse el Selector de menú.
 - Aparece Complete! <Completo!> una vez finalizado el formato.
- 8. Para salir, pulse el botón MENU.


[Notas]

- Si ejecuta la función Format <Formato>, se borrarán todas las imágenes fijas y secuencias y no podrá recuperarlas.
- El formato de la tarjeta de memoria utilizando un dispositivo diferente puede causar errores de lectura en la tarjeta de memoria.
- El formato de la tarjeta de memoria borra todos los datos almacenados en la tarjeta de memoria.
- No apague el aparato durante el proceso de formato.
- No se dará formato a un Memory Stick con la pestaña de protección en Lock. (Consulte la página 87.)


 No dé formato a la teriote de momeria en un PC
- No dé formato a la tarjeta de memoria en un PC. Es posible que aparezca el mensaje "Not Formatted <Sin formato>" si se introduce una tarjeta de memoria formateada en un PC.



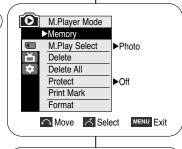

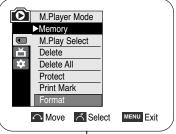

(5)

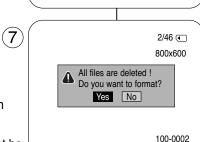

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

MPEG Recording

- You can record moving picture images with audio on the Memory card.
- ❖ The screen format of the moving picture to be recorded is 720x576.

Saving Moving Picture Files onto a Memory Card

- Check whether Memory card is inserted into the Camcorder. If it is not in the Camcorder, insert it into the slot.
- 2. Set the **Power** switch to **CAMERA**.
- 3. Set the Mode switch to MEMORY CARD.
- Press the Start/Stop button, the images are recorded on the Memory card in MPEG4.
 You can record a Camcorder still image on Memory card by
 - You can record a Camcorder still image on Memory card by pressing the **PHOTO** button instead of the **Start/Stop** button.
- 5. Press the **Start/Stop** button to stop the recording.

[Notes]

- MENÜ button and Menu selector are not available while MPEG recording.
 - To use MENU button and Menu selector, stop recording. MPEG recording is not available when a menu or Quick menu is displayed on the screen.
 - To start recording, press the MENU button to make it disappear.
- Before using the MPEG REC function, check whether the Memory card is inserted into the Camcorder.
- Moving images that you recorded are saved in *.avi (avi 1.0) file format on the Memory card.
- The file that you recorded are saved in a following folder. (see illustration low right hand corner)
- The moving picture images on a Memory card are a smaller size and lower definition than image on tape.
- The sound is recorded in mono.
- The following functions are not allowed in M.Cam Mode.
 DIS (Digital Image Stabiliser), Digital Zoom, Fade, Program AE, Digital Effect, Slow Shutter.
- While recording on a Memory card, don't insert or eject the tape as it may record noise.
- While a Memory card, don't eject the card or it may break the data on the Memory card or Memory card itself.
- Turning the power off while accessing the memory card may damage the data stored on the memory card.

Grabación de MPEG


- Puede grabar en la tarjeta de memoria imágenes de vídeo con audio.
- El formato de pantalla del vídeo que se grabará es 720 x 576.


Almacenamiento de imágenes como un archivo de imágenes en movimiento en una tarjeta de memoria


- Compruebe que haya una tarjeta de memoria en la videocámara.
- En caso negativo, introduzca una en la ranura. 2. Coloque el interruptor **Power** en **CAMERA**.
- 3. Coloque el interruptor Mode en MEMORY CARD.
- 4. Pulse el botón **Start/Stop**, las imágenes se graban en la tarjeta de memoria en MPEG4.

ESPAÑOL

- Puede grabar una imagen fija en la tarjeta de memoria pulsando el botón **PHOTO** en lugar del botón **Start/Stop**.
- 5. Pulse el botón **Start/Stop** para detener la grabación.

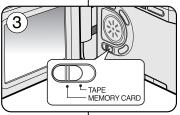

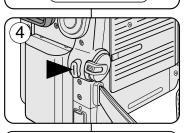

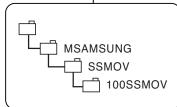

<Moving image>

- El botón MENU y el Selector de menú no están disponibles durante la grabación de MPEG.
 Para utilizar el botón MENU y el Selector de menú, detenga la
 - grabación. La grabación de MPEG no está disponible cuando aparece en pantalla un menú o un menú de navegación.
 - Para detener la grabación, pulse el botón MENU para que desaparezca.
- Antes de utilizar la función MPEG REC, compruebe que haya una tarjeta de memoria dentro de la videocámara.
- Los vídeos que grabe se guardarán en formato *.avi (avi 1.0) en la tarjeta de memoria.
- El archivo que grabe se guardará en la siguiente carpeta. (Consulte la ilustración de la esquina inferior derecha.)
- Las imágenes de vídeo grabadas en una tarjeta de memoria son de menor tamaño e inferior resolución que aquéllas grabadas en una cinta.
- El sonido se graba en formato mono.
- Las siguientes funciones no están disponibles en la modalidad M.Cam.
 - DIS (Digital Image Stabilizer), Digital Zoom <Zoom Digital>, Fade <Fundido>, Program AE <Program Ae>, Digital Effect <Efecto digital>, Slow Shutter <Obturador lento>.
- No introduzca o extraiga la cinta mientras graba en la tarjeta de memoria ya que podrían grabarse ruidos.
- Mientras graba en una tarjeta de memoria, no expulse la tarjeta de memoria o podría dañar los datos de la tarjeta de memoria o incluso la propia tarjeta.
- Apagar el equipo mientras se accede a la tarjeta de memoria puede dañar los datos almacenados en la misma.



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

ESPAÑOL

MPEG Playback

- The MPEG Playback function works only in M. Player mode.
- You can play the moving picture images on the Memory card.
 Stereo audio is played back at the same time.
- Playing back on a PC shows better quality than on a TV.
- 1. Set the Power switch to PLAYER.
- 2. Set the Mode switch to MEMORY CARD.
- 3. Press the MENU button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Memory**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select M.Play Select, then press the Menu selector.
- Move the Menu selector to the left or right to select Movie, then press the Menu selector.
- 7. To exit the menu, push the **MENU** button.
- Using the ◀/ / ► (REV/FWD) buttons, search for the moving picture that you want to playback.
- 9. Press the ▶/II (PLAY/STILL) button.
 - The moving pictures recorded on the Memory card will playback.
 - You can control playback using the ►/II (PLAY/STILL) / ◄ / ►► (REV/FF)/ (STOP) buttons.

[Notes]

 MENÜ button and Menu selector are not available while MPEG playback.

To use MENU button and Menu selector, stop playback. MPEG playback is not available when a menu or Quick menu is displayed on the screen.

To start playback, press the MENU button to make it disappear.

- There may be broken or mosaic pictures while playing the MPEG4 moving picture images, but it is not malfunction.
- The moving picture images that you recorded on the Memory card may not play on other manufacturer's.
- The MPEG4 file recorded by another Camcorder may not play on by this Camcorder.
- To playback MPEG4 moving pictures on a PC, the Video Codec (in the CD provided with the camcorder) should be installed.
 - You need Microsoft Windows Media Player Version 9 or higher version in order to play MPEG4 file on the Memory card on your PC.
 - You can download the Microsoft Windows Media Player applied each languages on Microsoft Website,
 - "http://www.microsoft.com/windows/windowsmedia/download/default.asp".
- Memory Stick PRO provides better image quality than Memory Stick.

Reproducción de MPEG

- ♣ La función MPEG Playback sólo está operativa en la modalidad M. Player.
- Puede reproductor imágenes de vídeo en la tarjeta de memoria.
 El audio estéreo se reproduce al mismo tiempo.
- ♣ La reproducción en un PC resulta de mejor calidad que en un TV.
 - Coloque el interruptor Power en PLAYER.
 - 2. Coloque el interruptor Mode en MEMORY CARD.
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Memory
 y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar M.Play Select <Selec. M.Play> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Movie <Película> y pulse el Selector de menú.
 - 7. Para salir, pulse el botón **MENU**.
 - Busque el vídeo que desee reproducir pulsando los botones
 ✓ / ➤ (REV/FWD).
 - 9. Pulse el botón ▶/II (PLAY/STILL).
 - Se reproducirán los vídeos grabados en la tarjeta de memoria.
 - Puede controlar la reproducción utilizando los botones ▶/|| (PLAY/STILL) / ◀ / ▶ (REV/FF)/ ■ (STOP).

[Notas]

■ El botón MENU y el Menu Selector<Selector de menú> no están disponibles durante la reproducción de MPEG.


Para utilizar el botón MENU y el Selector de menú, detenga la reproducción.

La reproducción de MPEG no está disponible cuando aparece en pantalla un menú o un menú de navegación.

Para iniciar la reproducción, detenga la visualización de la OSD

Para iniciar la reproducción, detenga la visualización o pulsando el botón MENU.

- Es posible que, durante la reproducción de los vídeos MPEG4, aparezcan imágenes cortadas o en forma de mosaico. Esto no se debe a un funcionamiento incorrecto.
- Es posible que las imágenes de vídeo grabadas en la tarjeta de memoria no puedan reproducirse en videocámaras de otros fabricantes.
- Es posible que el archivo MPEG4 grabado con otra videocámara no se reproduzca en esta videocámara.
- Para reproducir vídeo MPEG4 en un PC, debe instalarse DVC Media Pro 1.0 (en el CD que se suministra con la videocámara).
 - Necesita Microsoft Windows Media Player Version 9 o superior para reproducir archivos MPEG4 de la tarjeta de memoria en el PC.
 - Puede descargar el Reproductor de Windows Media de Microsoft en varios idiomas desde el sitio Web de Microsoft,
 - "http://www.microsoft.com/windows/windowsmedia/download/default.asp".
- Memory Stick Pro proporciona una mayor calidad de imagen que Memory Stick.

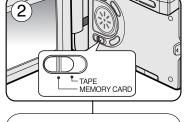

M.Play Select ▶Photo

►Off

M.Player Mode

▶Memorv

Delete

Protect

Format


Delete All

Print Mark

ă

(4)

6

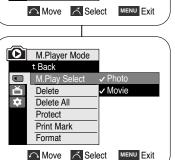



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Using Quick Menu: M.Play Select


- Quick menu is used to access Camcorder functions by simply using the Menu selector.
- Quick menu provides easier access to the frequently used menus without using the MENU button.
- Press the Menu selector.
- 2. Move the **Menu selector** to the left or right to select **M.Play Select**, then press the **Menu selector**.
- 3. Move the **Menu selector** to the left or right to select **Photo** or **Movie**, then press the **Menu selector**.
- 4. To exit, press the **MENU** button.



(1)

Protect

Print Mark

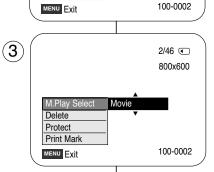



Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

Utilización del menú rápido: M.Play Select (Selec.M.Play)

- El menú rápido se utiliza para acceder a las funciones de la videocámara utilizando simplemente el Selector de menú.
- El menú rápido proporciona un acceso más sencillo a los menús de uso frecuente utilizando el botón MENU.
 - 1. Pulse el **Selector de menú**.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar M.Play Select <Selec.M.Play> y pulse el Selector de menú.
 - Mueva el selector de menú a la izquierda o a la derecha hasta seleccionar Photo <Foto> o Movie <Película> y pulse el Selector de menú.
 - 4. Para salir, pulse el botón MENU.



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Recording an Image from a Cassette as a Still Image

- This function works only in Player mode.
- You can record still images from a cassette on a Memory card.
- If you want to move recorded multiple still images from a cassette to a Memory card, use the COPY function.
- 1. Set the **Power** switch to **PLAYER**.
- Set the Mode switch to TAPE.
- 3. Playback the cassette.
- 4. Press the **PHOTO** button.
 - The still image is recorded on the Memory card.
 - During the time it takes to save an image, the play back screen is paused and the OSD is displayed as illustrated in the lower right hand corner.

[Notes]


- Still images copied from the cassette to the memory card are saved in a 640x480 format.
- Number of images you can save varies depending on the image resolution.




Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

Grabación de una imagen de una cinta como imagen fija

Esta función sólo está operativa en la modalidad Player.

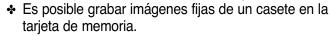


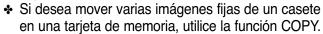



- 1. Coloque el interruptor Power en PLAYER.
- 2. Coloque el interruptor **Mode** en **TAPE**.
- 3. Reproduzca la cinta.
- 4. Pulse el botón **PHOTO**.
 - La imagen fija se graba en la tarjeta de memoria.
 - Durante el tiempo que se tarda en guardar una imagen, se interrumpe la pantalla de reproducción y aparece la OSD como se ilustra en la esquina inferior derecha.

[Notas]

- Las imágenes fijas copiadas desde el casete a la tarjeta de memoria se guardan en formato 640x480.
- El número de imágenes que puede guardar varía dependiendo de la resolución de la imagen.

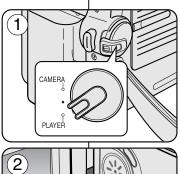

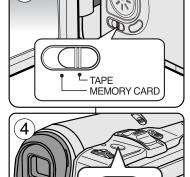

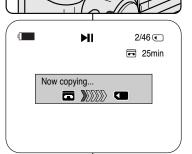



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Copying Still Images from a Cassette to Memory Card

♣ The photo copy function works only in Player mode.

You can copy still images recorded with PHOTO function on a cassette onto a Memory card.

* Rewind the tape to the point which you wants.

- 1. Set the **Power** switch to **PLAYER**.
- Set the Mode switch to TAPE.
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Tape**, then press the **Menu selector**.
- 5. Move the **Menu selector** to the left or right to select **Photo Copy**, then press the **Menu selector**.
 - All still images that recorded on a cassette will be copied into a Memory card.
- 6. The Camcorder automatically performs the photo search to find still images and copy starts.
- 7. Press the (STOP) button to stop copying.
 - Copy stops when the cassette is finished or Memory card is full.

[Note]

Still images copied from the cassette to the memory card are saved in 640x480 format.



Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))


Copia de imágenes fijas de una cinta en la tarjeta de memoria

- La función de copia fotográfica sólo está operativa en la modalidad Player.
 - Es posible copiar las imágenes fijas de un casete en una tarjeta de memoria con la función PHOTO.
 - * Rebobine la cinta hasta el punto que desee.
 - 1. Coloque el interruptor **Power** en **PLAYER**.
 - 2. Coloque el interruptor Mode en TAPE.
 - 3. Pulse el botón MENU.
 - Aparece la lista del menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Tape <Cinta> y pulse el Selector de menú.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Photo Copy <Copia Foto> y pulse el Selector de menú.
 - Todas las imágenes fijas grabadas en el casete se copiarán en la tarjeta de memoria.
 - La videocámara lleva a cabo de manera automática la búsqueda de fotos para localizar las imágenes fijas y comienza a copiarlas.
 - 7. Pulse el botón **■** (STOP) para detener la copia.
 - La función de copia se detiene cuando se termina el casete o cuando la tarjeta de memoria está llena.

[Nota]


Las imágenes fijas copiadas desde el casete a la tarjeta de memoria se guardan en formato 640x480.




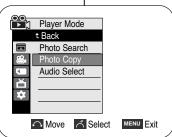

(5)

(6)

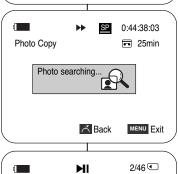

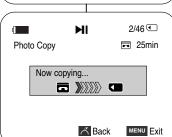



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Copy to (Copies Files from the Memory Card to the Builtin Memory) (VP-D354(i)/D355(i) only)

- ❖ The Copy To function works only in M.Player mode.
- You can copy selected or all images stored in the Memory card to the built-in memory.
- 1. Set the **Power** switch to **PLAYER**.
- Set the Mode switch to MEMORY CARD.
- 3. Press the **MENU** button.
 - The menu list will appear.
- 4. Move the **Menu selector** to the left or right to select **Memory**, then press the **Menu selector**.
- 5. Move the **Menu selector** to the left or right to select **Copy to**, then press the **Menu selector**.
- Move the Menu selector to the left or right to select options(Back, This File or All Files), then press Menu selector.
 - To go back to the previous mode, select **Back**.
 - If This File or All Files is selected, Now copying... is displayed on the screen and copying starts.
- 7. To exit, press the **MENU** button.

ESPAÑOL


Copy to (Copiar a) (Copia de archivos desde la tarjeta de memoria a la memoria interna) (Sólo VP-D354(i)/D355(i))


Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

- ♣ La función Copy to sólo está operativa en la modalidad M.Player.
- Puede copiar las imágenes seleccionadas o todas las imágenes almacenadas en la tarjeta de memoria en la memoria interna.




- 2. Coloque el interruptor Mode en MEMORY CARD.
- 3. Pulse el botón **MENU**.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Memory < Memoria> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Copy to <Copiar a> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar las opciones (Back <Atrás>, This File <Este archivo> o All Files <Todos Archiv>) y pulse el Selector de menú.
 - Para volver a la modalidad anterior, seleccione
 Back < Atrás >.
 - Si se ha seleccionado This File <Este archivo> o All Files <Todos Archiv>, aparece Now copying... <Copiando...> en la pantalla y se inicia la copia.
- 7. Para salir, pulse el botón MENU.

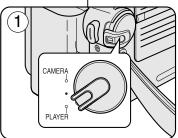

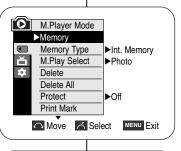

(4)

(6)

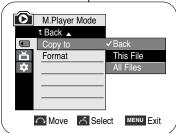



Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Marking Images for Printing

- ❖ This Camcorder supports the DPOF (Digital Print Order Format) print format.
- ❖ You can automatically print images recorded on a Memory card with a printer supporting DPOF.
- ♣ There are 2 ways to make a Print Mark.
 - This File: You can set a print mark on the photo image displayed on the LCD screen. It can be set up to 999.

(5)

- All Files: To print 1 copy each of all of the stored images.
- Set the Power switch to PLAYER.
- Set the Mode switch to MEMORY CARD.
 - The last recorded image appears.
- 3. Using the ◀ / ► (REV/FWD) buttons, search for the still image that you want to mark.
- 4. Press the **MENU** button.
 - The menu list will appear.
- 5. Move the **Menu selector** to the left or right to select **Memory**, then press the **Menu selector**.
- 6. Move the **Menu selector** to the left or right to select **Print Mark**, then press the **Menu selector**.
- 7. Move the **Menu selector** to the left or right to select desired option(All Off, This File or All Files), then press the **Menu selector**.
- 8. If you select **This File**, move the **Menu selector** to the left or right to select the quantity, then press the Menu selector. (9)
- 9. To exit, press the **MENU** button.

Marcado de imágenes para imprimir

- Esta videocámara es compatible con el formato de impresión DPOF (Digital Print Order Format).
- ♣ Es posible imprimir de manera automática imágenes grabadas en una tarjeta de memoria con una impresora compatible con DPOF.

Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))


- Hay dos maneras de hacer una marca de impresión.
 - This File: se puede poner una marca de impresión en la imagen que aparece en la pantalla LCD. Se puede ajustar hasta 999.
 - All Files: se imprime una copia de cada una de las imágenes quardadas.
 - 1. Coloque el interruptor **Power** en **PLAYER**.
 - 2. Coloque el interruptor **Mode** en **MEMORY CARD**.
 - Aparece la últimaf de las imágenes grabadas.
 - 3. Busque la imagen fija que desee marcar pulsando los botones ◀ / ▶ (REV/FWD).
 - 4. Pulse el botón MENÙ.
 - Aparece la lista del menú.
 - 5. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar Memory < Memoria > v pulse el Selector de menú.
 - 6. Mueva el **Selector de menú** a la izguierda o a la derecha hasta seleccionar Print Mark < Marca > v pulse el Selector de menú.
 - 7. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar la opción deseada (All Off <Apagar todo.>, This File <Este archivo> 0 All Files <Todos Archiv>) y pulse el Selector de menú.
 - 8. Si selecciona This File < Este archivo >. mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar la cantidad y pulse el Selector de menú.
 - 9. Para salir, pulse el botón MENU.

Eliminación de la marca de impresión

Para eliminar todas las marcas de impresión. seleccione All Off <Quitar todas>, para eliminar una marca de impresión, seleccione el archive y defina This File < Este archive > en 000.



M.Player Mode ►Memory

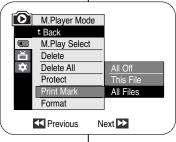



Removing the Print Mark

To remove all Print Marks select All Off, to remove individual file's Print Mark, select the file and set This File to 000.



ENGLISH

Digital Still Camera Mode (VP-D353(i)/D354(i)/D355(i) only)

Using Quick Menu: Print Mark

- Quick menu is used to access Camcorder functions by simply using the Menu selector.
- Quick menu provides easier access to the frequently used menus without using the MENU button.
- ♣ It can be set on the selected file only.
- Press the Menu selector.
- 2. Move the **Menu selector** to left or right to select **Print Mark**, then press the **Menu selector**.
- 3. Move the **Menu selector** to the left or right to select the quantity, then press the **Menu selector**.
- 4. To exit, press the **MENU** button.

[Notes]

- If the Print Mark is set to This File, you can set the number of copies from 999.
- If the Print Mark is set to All Files, you can set the number of copies to 0 or 1.
- The All Files option may require extended operation time depending on the number of stored images.
- DPOF supporting printers are commercially available.
- Use the USB cable provided with the Camcorder.

ESPAÑOL


Modalidad de cámara fotográfica digital (Sólo VP-D353(i)/D354(i)/D355(i))

Utilización del menú rápido: Print Mark < Marca>

- El menú rápido se utiliza para acceder a las funciones de la videocámara utilizando simplemente el Selector de menú.
- El menú rápido proporciona un acceso más sencillo a los menús de uso frecuente utilizando el botón MENU.
- ❖ Sólo se puede definir en el archivo seleccionado.
 - 1. Pulse el **Selector de menú**.
 - Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Print Mark <Marca> y pulse el Selector de menú.
 - 3. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar la cantidad y pulse el **Selector de menú**.
 - 4. Para salir, pulse el botón MENU.

[Notas]


- Si Print Mark < Marca de impresión> se define en This File < Este archivo>, puede definir el número de copias de 0 a 999.
- Si Print Mark < Marca de impresión> se define en All Files < Todos los archivos>, puede definir el número de copias en 0 ó 1.
- Es posible que la opción All Files (Todos los archivos) requiera más tiempo de funcionamiento, dependiendo del número de imágenes guardadas.
- Existen en el mercado impresoras que soportan DPOF.
- Utilice el cable USB que se facilita con la videocámara.

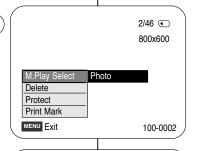

2/46 **1**

(3)

M.Plav Select

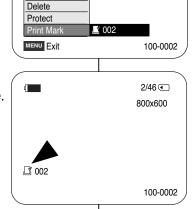



PictBridge™ (VP-D353(i)/D354(i)/355(i) only)

Printing Your Pictures – Using the PictBridge™

- ♣ PictBridge™ function works only in M.Player mode.
- By connecting the Camcorder to printers with PictBridge support (sold separately), you can send images from the Memory card directly to the printer with a few simple operations.
- With the PictBridge Support, you can control the printer directly through your Camcorder in order to print out stored pictures. For direct printing of your stored pictures using the PictBridge function, you must connect your Camcorder to a PictBridge printer using a USB cable.

Connecting To a Printer


- Turn your printer power off.
 Turn your Camcorder on by setting the **Power** switch to
 PLAYER.
- 2. Set the Mode switch to MEMORY CARD.
- 3. Press the **MENU** button.
 - The menu list will appear.
- Move the Menu selector to the left or right to select System, then press the Menu selector.
- Move the Menu selector to the left or right to select USB Connect, then press the Menu selector.
- Move the Menu selector to the left or right to select Printer, then press the Menu selector.
 - Computer: Connect to a computer.
 - Printer: Connect to a printer.
 (To use the PictBridge function, continued in the printer)
 - (To use the PictBridge function, connect to a printer.)
- 7. Connect your Camcorder to the printer using the provided USB cable.
- 8. Turn your printer power on.
 - The PictBridge menu screen appears automatically after a short period.
 - The cursor highlights Printer.


Selecting Images


In the PictBridge settings menu, press the ◀ / ▶► (REV/FWD) buttons to select an image to print.

Setting the Number of Prints

- Move the Menu selector to the left or right to select Copies, then press the Menu selector.
- Move the Menu selector to the left or right to set the number of prints, then press the Menu selector.

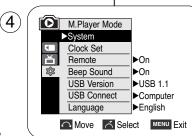

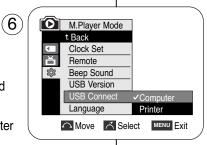

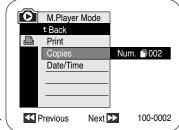

Impresión de imágenes - Uso de PictBridge™

- ♣ La función PictBridge™ sólo está operativa en la modalidad M.Player.
- Al conectar la cámara a las impresoras con el soporte PictBridge (se vende por separado), puede enviar imágenes desde la tarjeta de memoria directamente a la impresora con una serie de sencillas operaciones utilizando los botones de cámara.

PictBridge™ (Sólo VP-D353(i)/D354(i)/355(i))

Con el soporte PictBridge, puede controlar la impresora directamente a través de la cámara para imprimir imágenes almacenadas. Para la impresión directa de imágenes almacenadas utilizando la función PictBridge, debe conectar la cámara a una impresora PictBridge utilizando un cable USB.

Conexión a una impresora

- Apague la impresora. Encienda la cámara colocando el interruptor Power en PLAYER.
- 2. Coloque el interruptor Mode en MEMORY CARD.
- 3. Pulse el botón MENU.
 - Aparece la lista del menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar System <Sistema> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar USB Connect <Conexión USB> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Printer <Impresora> y pulse el Selector de menú.
 - Computer (Ordenador): Se conecta a un PC.
 - Printer (Impresora): Se conecta a una impresora. (Para utilizar la función PictBridge, se conecta a una impresora.)
- Conecte la videocámara a la impresora utilizando el cable USB suministrado.
- Encienda la impresora.
 - La pantalla del menú PictBridge aparece automáticamente tras un tiempo.
 - El cursor resalta la opción Printer (Impresora).

Selección de imágenes

En el menú de ajustes PictBridge, pulse los botones
 (REV/FWD) para seleccionar una imagen para su impresión.

Ajuste del número de copias

- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Copies <Copias> y pulse el Selector de menú.
- Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar el número de copias y pulse el Selector de menú.



ENGLISH

PictBridge™ (Sólo VP-D353(i)/D354(i)/355(i))


PictBridge[™] (VP-D353(i)/D354(i)/355(i) only)


Setting the Date/Time Imprint Option

- Move the Menu selector to the left or right to select Date/Time, then press the Menu selector.
- Move the **Menu selector** to the left or right to select the Date/Time display type, then press the **Menu** selector.
 - Date/Time display type: Off, Date, Time, Date&Time

Printing Images

Move the **Menu selector** to the left or right to select **Print**, then press the **Menu selector**, and selected image files will be printed.

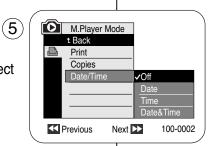

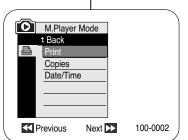

Ajuste de la opción Date/Time Imprint (Impresión de fecha y hora)

 Mueva el Selector de menú a la izquierda o a la derecha hasta seleccionar Date/Time
 Fecha/Hora> y pulse el Selector de menú.

ESPAÑOL

- 5. Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar el tipo de visualización de la fecha y hora y pulse el **Selector de menú**.
 - Tipo de visualización de la fecha y hora: Off <Des.>, Date <Fecha>, Time <Hora>, Date&Time <Fecha-Hora>.

Impresión de imágenes

Mueva el **Selector de menú** a la izquierda o a la derecha hasta seleccionar **Print <Imprimir>** y pulse el **Selector de menú**.

Imprime los archivos de las imágenes seleccionadas.

[Notes]

- The Date/Time Imprint Option may not supported by all printers. Check with your printer manufacturer.
 - The Date/Time Menu cannot be setup if the printer does not support this option.
- The PictBridge™ is a registered trademark of CIPA(Camera & Imaging Products Association), an image transfer standard developed by Canon, Fuji, HP, Olympus, Seiko Epson, and Sony.
- PictBridge supporting printers are commercially available.
- Use the USB cable provided with the Camcorder.
- Use the AC power adapter for your Camcorder during PictBridge Direct Printing.
 - Turning your Camcorder off during the printing might damage data on the Memory card.
- Printing still images is supported. Motion clips are not available for printing.
- You can set various printing options depending on the printer.
- Please refer to the user's manual of the printer.

[Notas]

- La opción de impresión de fecha y hora no la admitirán todas las impresoras. Compruébelo con el fabricante de la impresora. El menú DATE/TIME <Fecha y hora> no pueden configurarse si la impresora no admite esta opción.
- PictBridge™ es una marca registrada de CIPA (Camera & Imaging Products Association), un estándar de transferencia de imágenes desarrollado por Canon, Fuji, HP, Olympus, Seiko Epson y Sony.
- Existen en el mercado impresoras que soportan PictBridge.
- Utilice el cable USB que se facilita con la cámara.
- Utilice el adaptador de CA para la cámara durante la impresión directa de PictBridge.
 - Apagar la cámara durante la impresión puede dañar los datos de la tarjeta de memoria.
- Se admite la impresión de fotografías. Las secuencias no se pueden imprimir.
- Puede definir varias opciones de impresión dependiendo de la impresora.
- Consulte el manual del usuario de la impresora.



Maintenance

After Finishing a Recording


- ♣ At the end of a recording you must remove the power source.
- When recording with a Lithium ion Battery pack, leaving the pack on the Camcorder can reduce the life span of the battery. The Battery pack should be release after recording is completed.
- Slide the TAPE EJECT switch in the direction of the arrow.
 - Opening the cassette door ejects the tape automatically.
 - Please wait while the tape is completely ejected.
- After removing the tape, close the door and store the Camcorder in a dust free environment. Dust and other foreign materials can cause squareshaped noise or jerky images.
- 3. Set the **Power** switch to the **Off**.
- 4. Disconnect the power source or remove the lithium ion Battery pack.


Press the **BATTERY RELEASE** button located on the bottom of the Camcorder and slide the Battery pack in the direction of the arrow.


Mantenimiento

Tras finalizar una grabación

- Al acabar una grabación es necesario desconectar la videocámara de la fuente de electricidad.
 - Cuando se ha grabado con la batería de iones de litio, si ésta se deja en la videocámara, se puede reducir su vida útil. La batería debe sacarse después de finalizar la grabación.
 - Deslice el botón TAPE EJECT en la dirección que indica la flecha.
 - Al abrirse la cubierta del compartimento, la cinta sale de manera automática.
 - Espere a que la cinta haya sido expulsada por completo.
 - Después de quitar la cinta, cierre la cubierta y guarde la videocámara en un lugar sin polvo.
 El polvo u otros materiales extraños pueden causar interferencias o hacer que las imágenes se vean entrecortadas.
 - 3. Coloque el interruptor Power en Off.
 - 4. Desconecte la videocámara o retire la batería de iones de litio.
 - Mantenga pulsado el botón **BATTERY RELEASE** que se encuentra en la parte inferior de la videocámara y deslice la batería en la dirección que indica la flecha.

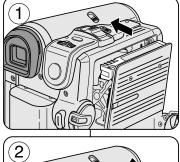

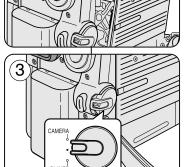

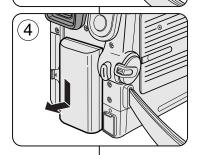



Maintenance

Cleaning and Maintaining the Camcorder

Cleaning the Video Heads

To ensure normal recording and clear pictures, clean the video heads when the playback pictures display square block-shaped noise or distortion, or a blue screen appears.







ruidos extraños o aparezca una pantalla azul.

Limpieza de los cabezales de vídeo

Limpieza y mantenimiento de la videocámara

Para asegurarse de que las grabaciones resulten normales y las

imágenes sean claras, limpie los cabezales de vídeo cuando, al

reproducir las imágenes, éstas se vean distorsionadas, se oigan

(blue screen)

- 1. Set the **Power** switch to **PLAYER**.
- 2. Set the **Mode** switch to **TAPE**. (VP-D353(i)/D354(i)/D355(i) only)
- 3. Insert the cleaning tape.
- 4. Press the ►/II (PLAY/STILL) button.
- 5. Press the **■** (STOP) button after 10 seconds.

[Notes]

- Check the quality of the picture using a videocassette.
 - If the picture quality has not improved, repeat the operation.
- Clean the video heads with a dry type cassette cleaner.
- Some cleaning cassette products stop automatically. Refer to the cleaning cassette's instructions for detailed information.
 If the problem continues after the cleaning, consult your nearest Samsung dealer or Authorised Service Centre.

- 1. Coloque el interruptor Power en PLAYER.
- Ajuste el interruptor de modalidad en TAPE. (Sólo VP-D353(i)/D354(i)/D355(i))
- 3. Introduzca la cinta de limpieza.

Mantenimiento

- 4. Pulse el botón ►/II (PLAY/STILL) button.
- 5. Pasados 10 segundos, pulse el botón **■** (STOP).

[Notas]

- Compruebe la calidad de la imagen empleando un videocasete.
 - Si no ha mejorado, repita la operación.
- Limpie los cabezales de vídeo con una cinta limpiadora en seco.
- Algunos productos de cintas de limpieza se detienen automáticamente. Consulte las instrucciones de la cinta de limpieza para obtener más detalles. Si el problema persiste tras la limpieza, consulte al distribuidor más cercano de Samsung o al Centro de servicio autorizado.



Maintenance

Using Your Camcorder Abroad

- ♣ Each country or region has its own electric and colour systems.
- * Before using your Camcorder abroad, check the following items.

Power sources

- You can use your Camcorder in any country or area with the supplied AC Power adapter within 100V to 240V, 50/60 Hz.
- Use a commercially available AC jack adapter, if necessary, depending on the design of the local wall outlet.

Colour system

You can view your recording in the Viewfinder.

However, to view it on a television or copy it to a videocassette recorder, the television or VCR must be PAL-compatible and have the appropriate audio/video jacks.

Otherwise, you may need to use a transcoder.

PAL-compatible Countries/Regions

Australia, Austria, Belgium, Bulgaria, China, CIS, Czech Republic, Denmark, Egypt, Finland, France, Germany, Greece, Great Britain, Holland, Hong Kong, Hungary, India, Iran, Iraq, Kuwait, Libya, Malaysia, Mauritius, Norway, Romania, Saudi Arabia, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Syria, Thailand, Tunisia, etc.

NTSC-compatible Countries/Regions

Bahamas, Canada, Central America, Japan, Korea, Mexico, Philippines, Taiwan, United States of America, etc.

[Note]

You can make recordings with your Camcorder and view pictures on the LCD screen from anywhere in the world.

114

Mantenimiento

Utilización de la videocámara en el extranjero

- Los sistemas de electricidad y de colour pueden variar de un país a otro.
- Antes de usar la videocámara en el extranjero, compruebe lo siguiente.

Fuentes de alimentación

- Esta videocámara se puede utilizar en cualquier país o región con el adaptador de CA que se suministra con ella, siempre que la corriente sea de 100V a 240V, 50/60 Hz.
- Si es necesario, utilice un adaptador de toma de CA, dependiendo del tipo de enchufe del lugar.

Sistema de colour

Las imágenes grabadas se pueden ver en el visor.

Sin embargo, para verlas en un televisor o para copiarlas con un aparato de vídeo, el televisor o el aparato de vídeo deberán ser compatibles con el sistema PAL y tener los conectores de audio/vídeo apropiados.

De no ser así, posiblemente necesitará un adaptador.

Países/regiones con sistemas de colour compatibles con PAL

Alemania, Arabia Saudita, Australia, Austria, Bélgica, Bulgaria, CEI, China, Dinamarca, Egipto, España, Finlandia, Francia, Gran Bretaña, Grecia, Holanda, Hong Kong, Hungría, India, Irak, Irán, Kuwait, Libia, Malasia, Mauricio, Noruega, República Checa, República de Eslovaquia, Rumania, Singapur, Siria, Suecia, Suiza, Tailandia, Túnez, etc.

Países/regiones con sistemas de colour compatibles con

NTSC: Bahamas, Canadá, Corea, Estados Unidos, Filipinas, Japón, México, Taiwán, etc.

[Nota]

Puede hacer grabaciones con la cámara y ver las imágenes en la pantalla LCD en cualquier lugar del mundo.

Troubleshooting

Troubleshooting

Before contacting a Samsung authorised service centre, perform the following simple checks.

They may save you the time and expense of an unnecessary call.

Self Diagnosis Display

Display	Blinking	Informs that	Action
	slow	the Battery pack is almost discharged.	Change to a charged one.
Tape end !	slow	When the remaining time on the tape is about 2 minutes.	Prepare a new one.
Tape end!	no	the tape reached its end.	Change to a new one.
No Tape !	slow	there is no tape in Camcorder.	Insert a tape.
Protection!	slow	the tape is protected from recording.	If you want to record, release the protection.
≜D L C R	slow	the Camcorder has some mechanical fault.	Eject the tape. Set to OFF. Detach the battery. Reattach the battery. If unresolved contact your local samsung service centre.
•	slow	moisture condensation has formed in the Camcorder.	see below.

Moisture Condensation

If the Camcorder is brought directly from a cold place to a warm place, moisture may condense inside the Camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or the unit may not operate correctly.

To prevent possible damage under these circumstances, the Camcorder is fitted with a moisture sensor.

If there is moisture inside the Camcorder, (DEW) is displayed. If this happens, none of the functions except cassette ejection will work.
Open the cassette compartment and remove the battery. Leave the Camcorder for at least two hours in a dry warm room.

Solución de problemas

Solución de problemas

 Antes de ponerse en contacto con un centro de servicio autorizado de Samsung, realice las siguientes comprobaciones.
 Es posible que le ahorren el tiempo y el coste de una llamada innecesaria.

Pantalla de autodiagnósticos

Pantalla	Parpadeo	Indica que	Solución
	Lento	la batería está casi descargada.	Reemplácela por una cargada.
Tape end ! (Fin cinta !)	Lento	el tiempo restante de grabación es de unos dos minutos.	Prepare una cinta nueva.
Tape end ! (Fin cinta !)	no	la cinta ha llegado al final.	Cámbiela por una nueva.
No Tape! (No hay cinta)	Lento	no hay cinta en la videocámara.	Introduzca una cinta.
Protection ! (Protección !)	Lento	la cinta está protegida contra grabación.	Si desea grabar, libere la protección.
≜D L C R	Lento la videocámara tiene algún fallo med		Saque la cinta. Apague la videocámara. Quite la batería. Ponga de nuevo la batería. Si no puede resolver el problema, póngase en contacto con el centro de servicio de SAMSUNG.
•	Lento	se ha condensado humedad en la videocámara.	Ver más abajo.

Condensación de humedad

- Si se lleva la videocámara directamente de un lugar frío a uno cálido, se puede condensar la humedad dentro de ella, en la superficie de la cinta o en el objetivo. En estas condiciones, la cinta puede adherirse a los cabezales y estropearse o puede que el aparato no funcione correctamente. Para prevenir posibles daños bajo estas circunstancias, la videocámara está dotada con un sensor de humedad.
- Si hay humedad dentro de la videocámara, aparecerá en la pantalla la señal
 (DEW).

Si esto sucede, ninguna de las funciones de la videocámara estará operativa, excepto la de expulsión de la cinta.

Abra el compartimento del casete y quite la batería.

Deje la videocámara durante al menos dos horas en un lugar seco y templado.





Troubleshooting

Self Diagnosis Display in M.Cam/M.Player Modes (VP-D353(i)/D354(i)/D355(i) only)

Display	Blinking	Informs that	Action
No Memory Card!	slow	There is no Memory card in the Camcorder.	Insert a Memory card.
Memory Full!	slow	There is not enough memory to record.	Change to a new Memory card. Erase recorded image.
No image!	slow	There are no images recorded on the Memory card.	Record new images.
Write protect!	slow	The Memory card is record protected.	Release the write protect tab on the Memory card.
Protect!	slow	When you try to delete to protected image.	Cancel the protection of image.
Read error!	slow	The Camcorder can not playback.	Format a Memory card or insert Memory card recorded on this Camcorder.
Write error!	slow	The Camcorder can not record.	Format a Memory card or change to a new Memory card.
Not Formatted!	slow	The Memory card needs to format.	Format a Memory card. (see page 101)
Now deleted	slow	When progressing file delete.	Wait until delete has been finished.
Memory Card error!	slow	If inserted Memory Card is not recognised by the Camcorder.	Eject and re-insert the memory card Try another Memory Card

Solución de problemas

Pantalla de autodiagnóstico en las modalidades M.Cam/M.Player (Sólo VP-D353(i)/D354(i)/D355(i))

Pantalla	Parpadeo	Indica que	Solución
No Memory Cord! (No hay tarjeta de memoria;)	Lento	No hay tarjeta de memoria en la videocámara.	Introduzca una tarjeta de memoria.
Memory Full ! (Memoria Llena !)	Lento	No hay suficiente memoria para grabar.	Cambie a una nueva tarjeta de memoria. Borre la imagen grabada.
No image ! (No hay imagen)	Lento	No hay imágenes grabadas en la tarjeta de memoria.	Grabe imágenes nuevas.
Write protect ! (Protección Escritura !)	Lento	la tarjeta de memoria está protegida contra grabación.	Suelte la pestaña de protección de la tarjeta de memoria.
Protect ! (Protección !)	Lento	Se ha intentado eliminar una imagen protegida.	Cancele la protección de la imagen.
Read error ! (Error De Lectura !)	Lento	la videocámara no puede reproducir las cintas.	De formato a la tarjeta de memoria o introduzca una grabada en la videocámara.
Write error ! (Error De Escritura !)	Lento	la videocámara no graba.	De formato a una tarjeta de memoria o cambie a una nueva.
Not Formatted ! (No Se Ha Formateado !)	Lento	la tarjeta de memoria necesita formato.	De formato a una tarjeta de memoria. (Consulte la página 101.)
Now deleted (Eliminando)	Lento	Se está borrando un archivo.	Espere hasta que finalice el borrado.
Memory Card error ! (Error de tarjeta de memoria)	Lento	Si la tarjeta de memoria insertada no la reconoce la videocámara.	Extraiga y vuelva a introducir la tarjeta de memoria. Pruebe otra tarjeta de memoria.



Troubleshooting

If these instructions do not solve your problem, contact your nearest Samsung authorised service centre.

Symptom	Explanation/Solution
You cannot switch the Camcorder on.	Check the Battery pack or the AC Power adapter.
Start/Stop button does not operate while recording.	Check the Power switch is set to CAMERA. You have reached the end of the cassette. Check the record protection tab on the cassette.
The Camcorder shuts off automatically.	You have left the Camcorder set to STBY for more than 5 minutes without using it. The Battery pack is fully exhausted.
Charge runs out quickly.	The atmospheric temperature is too low. The Battery pack has not been charged fully. The Battery pack is completely dead, and cannot be recharged, Use another Battery pack.
When you see a blue screen during playback.	The video heads may be dirty. Clean the head with a cleaning tape.
A vertical strip appears on the screen when recording a dark background.	The contrast between the subject and the background is too great for the Camcorder to operate normally. Make the background bright to reduce the contrast or use the BLC function while you are recording in bright Surroundings.
The image in the Viewfinder is blurred.	The Viewfinder lens has not been adjusted. Adjust the Viewfinder control lever until the indicators displayed on the Viewfinder come into sharp focus.
Auto focus does not work.	Check the Manual Focus menu. Auto focus does not work in the Manual Focus mode.
Play, FF or REW button does not work.	Check the Power switch. Set the Power switch to PLAYER. You have reached the beginning or end of the cassette.
When you see a mosaic pattern during playback search.	This is normal operation and it is not a failure or defect. The tape may be damaged. Replace the tape. Cleaning the video heads (see page 113).

Solución de problemas

Si las siguientes instrucciones no le permiten solucionar el problema, póngase en contacto con el centro de servicio autorizado de Samsung más cercano.

Síntoma	Explicación/Solución
Sintoma	Explicación/Solución
No es posible encender la videocámara.	Compruebe la batería o el adaptador de CA.
El botón Start/Stop no funciona mientras se graba.	Compruebe que el interruptor Power está ajustado en la posición CAMERA. Se ha llegado al final del casete. Compruebe la pestaña de protección contra la grabación del casete.
La videocámara se apaga automáticamente.	Ha dejado la videocámara en la posición STBY y sin usarla durante más de 5 minutos. La batería está completamente descargada.
La carga se realiza muy rápidamente.	La temperatura ambiente es demasiado baja. La batería no se ha cargado por completo. La batería está completamente agotada y no se puede recargar. Utilice otra batería.
Se ve una pantalla azul durante la reproducción.	Los cabezales de vídeo pueden estar sucios. Límpielos con una cinta de limpieza.
En la pantalla aparece una línea vertical cuando se graba sobre un fondo oscuro.	El contraste entre el objeto y el fondo es demasiado para que la videocámara funcione normalmente. Ilumine el fondo para reducir el contraste o utilice la función BLC.
La imagen se ve borrosa en el visor.	No se ha ajustado la lente del visor. Desplace la palanca de control del visor hasta que los indicadores que aparecen en el visor muestren que está bien enfocado.
El sistema de enfoque automático no funciona.	Compruebe el menú Manual Focus (Foco M.). El enfoque automático no funciona en la modalidad de enfoque manual.
Los botones PLAY, FF o REW no funcionan.	Compruebe el interruptor Power. Coloque el interruptor Power en PLAYER. Se ha llegado al principio o al final del casete.
Se ve una cuadrícula en la imagen durante la búsqueda de grabación.	Esta circunstancia es normal y no es ningún fallo o defecto. esté dañada. Sustituya la cinta. Limpieza de los cabezales de vídeo (consulte la página 113).



Specifications

Model Name: VP-D351(i)/D352(i)/D353(i)/D354(i)/D355(i)

Custom	
System	
Video signal	PAL
Video recording system	2 rotary heads, Helical scanning system
Audio recording system	Rotary heads, PCM system
Usable cassette	Digital video tape (6.35mm width): Mini DV cassette
Tape speed	SP: approx. 18.83mm/s
Tape recording time	SP: 60 minutes (when using DVM 60), LP: 90 minutes (when using DVM 60)
FF/REW time	Approx. 150 sec. (using DVM60 tape)
Image device	CCD (Charge Coupled Device) (800k pixels)
Lens	F1.6 20x(Optical), 900x(Digital) Electronic zoom lens
Filter diameter	Ø30
LCD screen/Viewfinder	
Size/dot number	2.36 inchs 112k
LCD screen Method	TFT LCD
Viewfinder	B/W LCD (VP-D351(i)/D352(i)/D353(i) only), Colour LCD (VP-D354(i)/D355(i) only)
Connectors	
Video output	1Vp-p (75Ω terminated)
S-video output	Y: 1Vp-p, 75Ω, C: 0. 286Vp-p, 75Ω
Audio output	-7.5dBs (600Ω terminated)
DV input/output	VP-D351i/D352i/D353i/D354i/D355i: 4pin special in/out connector,
	VP-D351/D352/D353/D354/D355: out only.
USB output	Mini-B type connector
External mic	Ø3.5 stereo

Power source	DC 8.4V, Lithium Ion Battery Pack 7.4V
Power source type	Lithium Ion Battery Pack, Power supply (100V~240V) 50/60Hz
Power consumption	4.3W(LCD), 4.0W(Viewfinder)
(Recording)	
Operating temperature	0°~40°C (32°F~104°F)
Storage temperature	-20°C ~ 60°C (-4°F ~ 140°F)
External dimension	Height 92mm(3.62inches), Length 117.5mm(4.63inches), Width 64mm(2.52inches)
Weight	410g(0.904lb, 14.46oz) (Except for Lithium Ion Battery Pack and tape)
Internal MIC	Omnidirectional stereo microphone

- These technical specifications and design may be changed without notice.

Indoors: greater than 49ft(15m) (straight line), Outdoors: about 16.4ft(5m)

Especificaciones técnicas

Nombre del modelo: VP-D351(i)/D352(i)/D353(i)/D354(i)/D355(i)

Sistema	
Señal de vídeo	PAL
Sistema de grabación de vídeo	2 cabezales giratorios, sistema de exploración helicoidal
Sistema de grabación de audio	Cabezales giratorios, sistema PCM
Tipo de cinta	Cinta de vídeo digital (6,35 mm de ancho): Casete Mini DV
Velocidad de la cinta	SP: 18,83mm/s aprox. LP: 12,57mm/s aprox.
Tiempo de grabación	SP: 60 minutos (con una cinta DVM 60), LP: 90 minutos (con una cinta DVM 60)
Tiempo de Avance rápido / rebobinado	150 segundos aprox. (con una cinta DVM60)
Dispositivo de imagen	CCD (dispositivo acoplado por carga) (800k pixels)
Objetivo	Objetivo de zoom electrónico F1,6 20x (óptico), 900x (digital)
Diámetro del filtro	Ø30
Pantalla LCD/visor	
Tamaño/número de puntos	2,36 pulgadas 112 k
Método de pantalla LCD Visor	TFT LCD
VISUI	LCD en blanco y negro (Sólo VP-D351(i)/D352(i)/D353(i)), LCD colour (Sólo VP-D354(i)/D355(i))
Conectores	
Salida de vídeo	1Vp-p (terminación 75Ω)
Salida de S-Vídeo	Υ: 1 νρ-p, 75Ω, C: 0,286 νρ-p, 75Ω
Salida de audio	-7,5 dBs (terminación 600Ω)
Entrada / salida de DV	VP-D351i/D352i/D353i/D354i/D355i: Conector de entrada/salida especial de 4 patillas,
	VP-D351/D352/D353/D354/D355: sólo salida.
Salida USB	Conector tipo Mini-B
Micrófono externo	Ø3.5 estéreo

Generales	
Fuente de alimentación	CC 8,4V, batería de iones de litio 7,4V
Tipo de fuente de alimentación	Batería de iones de litio, fuente de alimentación (100V~240V) 50/60 Hz
Consumo eléctrico	4.3W (LCD), 4.0W (Visor)
(Grabación)	
Temperatura de funcionamiento	0°~40°C (32°F~104°F)
Temperatura de almacenaje	-20°C ~ 60°C (-4°F ~ 140°F)
Dimensiones	Altura 92 mm (3,62 pulg.), Longitud 117,5 mm (4,63 pulg.), Anchura 64 mm (2,52 pulg.)
Peso	410 g (Sin la batería de iones de litio y la cinta)
Micrófono Internal	Micrófono estéreo omni-direccional
Mando a distancia	En interiores: más de 15 m (49 pies) en línea recta; en exteriores: más de 5
(Sólo VP-D353(i)D354(i)/D355(i))	m (16,4 pies) en línea recta

Estas especificaciones técnicas y el diseño están sujetos a cambios sin previo aviso.



General

Remote control

(VP-D353(i)D354(i)/D355(i) only) (straight line)

ENGLISH

Index

ESPAÑOL

Índice alfabético

- A -
Accessories 12 AF/MF 58 Audio Dubbing 77 Audio Mode 55
- B -
Battery Pack 21 BLC 46
- C -
Cassette 36 Cleaning 113 Clock Set 27 Connecting 71
- D -
Date/Time 33 DC Cable 20 Deleting 99 Demonstration 31 DIS 61 Digital Effect 65 DV 79, 80
-E-
EASY.Q Mode
- F -
Fade
- H -
Hand Strap 18
-1-
IEEE1394
-L-
LCD 32

- M -
Memory card 88 Memory Stick 87 MPEG Recording 102
-0-
OSD24, 25
- P -
Photo Copy 106
Photo Quality 91 Photo Search 68 Program AE 63, 64 Protection 97
- R -
Rec Mode 54 Rec Search 41 Remote 28 Remote control 17, 43
- S -
Shutter Speed 57 Sound 70 Speaker 70 Still images 95
- T -
Tele MACRO
- U -
JSB 81~86
- V -
/iewfinder35
- W -
White Balance
- Z -
ZERO MEMORY

- A -
Accesorios 12 Altavoz 70 Audio Mode <modo audio=""> 55 Avance por fotograma 74</modo>
- B -
Batería 21 BLC 46 Borrado 99 Botones de funciones 13
- C -
Cable de CC 20 Calidad Foto 91 Cinta 36 Clock Set <ajuste reloj=""> 27 Conexión 71</ajuste>
- D -
Date/Time <fecha hora=""> 33 Demonstration <demostración> 31 DIS 61 Digital Effect <efecto digital=""> 65 DV 79, 80</efecto></demostración></fecha>
-E-
EASY.Q Mode <easy.q, modalidad=""> 40 Empuñadura 18 Exposure <exposición> 57</exposición></easy.q,>
-F-
Fade <fundido> 45 Formatting 101</fundido>
- H -
Grabación de audio adicional
-1-
IEEE1394

LCD
- M -
Mando a distancia 17, 43 Memory Stick 87 MF/AF 58
- 0 -
OSD24, 25
- P -
Photo Copy <copia foto=""></copia>
- R -
Rec Mode 54 Rec Search 41 Remote 28
- S -
- S - Sonido
——————————————————————————————————————
Sonido
70 - T - Tarj. Memoria
Sonido 70 - T - Tarj. Memoria
Sonido 70 - T - Tarj. Memoria
Sonido 70 - T - 70 Tarj. Memoria
Sonido 70 - T - 70 Tarj. Memoria 88 Tele Macro MACRO <telescópica> 44 TV Display <pantalla tv=""> 34 - U - USB USB 81~86 - V - Velocidad de obturador 57</pantalla></telescópica>
Sonido 70 - T - 70 Tarj. Memoria 88 Tele Macro MACRO <telescópica> 44 TV Display <pantalla tv=""> 34 - U - USB 81~86 - V - Velocidad de obturador 57 Visor 35</pantalla></telescópica>
Sonido 70 - T - Tarj. Memoria
Sonido 70 - T - Tarj. Memoria 88 Tele Macro MACRO <telescópica> 44 TV Display <pantalla tv=""> 34 - U - USB 81~86 - V - Velocidad de obturador 57 Visor 35 - W - W Wind Cut <antiviento> 56</antiviento></pantalla></telescópica>







Este producto SAMSUNG está garantizado por un período de doce (12) meses a partir de la fecha de compra, contra cualquíer defecto de fábrica, cubriendo la totalidad de sus componentes y la mando de obra neceseria para su reparación.

Distribuidores autorizados de SAMSUNG y Centros de Servicios Autorizados en otros países de Europa del Oeste cumplirán con los términos de la garantía emitidos en la compra del país concermiente. En caso necesario, la lista de nuestros Servicios Oficiales está disponible en:

SAMSUNG ELECTRÓNICS CONERCIAL IBÉRIA, S.A. Ciencies, 55-65 (Polígono Pedrosa) 08908 HOSPITALET DE LLOBREGAT (Barcelona) TEL. (93) 261 67 00 / FAX (93) 261 67 55

■ CONDICIONES DE LA GARANTIA

- Para la validez de la presente garantía será indispensable que esté correctamente rellenada y acompañada con la factura que acredite la fecha de compra. En el caso de estar manipulada, perderá la validez de la misma.
- 2. Las obligaciones de SAMSUNG se limitan a la reparación del aparato, cambiar la parte defectuosa o cambio del aparato según su criterio.
- 3. Las reparaciones en garantía deben ser efectuadas por Servicios Oficiales SAMSUNG o Distribuidores Autorizados. No serán cubiertas por esta garantía, las reparaciones efectuadas por Servicios Técnicos o Distribuidores no Autorizados por SAMSUNG.

- 4. Este producto no se considerará defectuoso cuando se requiera la adaptación para cumplir las normas de sequridad o técnicas locales o nacionales de otro país diferente para el cual fue originalmente diseñado y producido. Esta garantía no cubre los trabajos para estas adaptaciones ni cualquier daño que pueda ocasionar.
- 5. Esta garantía no cubre ninguno de los siguientes casos:
 - a) Revisiones periódicas, mantenimientos, sustitución de piezas debidas a desgastes y roturas.
 - b) El coste relacionado con la instalación del producto.
 - Mala utilización, incluyendo el fallo debido a la no utilización de este producto para su uso normal o correcta instalación.
 - d) Daños causados por caída de rayos, agua, fuego, fuerza mayor, guerras, disturbios públicos, voltaje incorrecto, ventilación incorrecta o cualquier otra causa leios del control de SAMSUNG.
- 6. Esta garantía es válida para cualquier persona que legalmente adquiera la posesión del producto durante el período de garantía.
- 7. Los derechos estaturarios del consumidor en cualquier legislación nacional aplicable ya sea contra el vendedor originados en el contrato de compra o de otra forma no están afectados por esta garantía. A menos que haya una legislación nacional que exprese lo contrario, los derechos bajo esta garantía son los derechos de compra del consumidor y SAMSUNG, sus subsidiarias y distribuidores no están sujetos por indirecta o consecuente pérdida o cualquier daño de discos, o cualquier otro equipo o material relacionado.

GARANTÍA EUROPEA